



wireless portable speaker

- Bluetooth®
- Splash-proof
- By-packed strap
- 8hrs, rechargeable battery

BT110B/00

Small size, big bass

This compact BT110 has all the acoustic essentials that normally come only with a big speaker. That's why it sounds clear and loud with surprising good bass. Oh, it's also splash proof and has a strap. It's ready anytime, anywhere.

Benefits

Impressive sound

- Anti-clipping function for loud, distortion-free music
- Advanced audio performance with a compact design
- Passive radiator for better low frequency performance

Simplicity in use

- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free phone calls

- Audio-in for easy connection to almost any electronic device


Designed for grab and go

- Splash-proof design ideal for outdoor use (IPX4)
- Carry it anywhere with the by-packed finely knitted strap
- Built-in rechargeable battery for music playback anywhere

PHILIPS


Features

Wireless music streaming

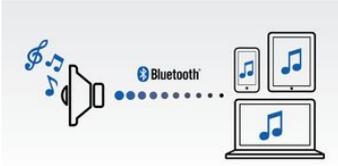

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Anti-clipping function

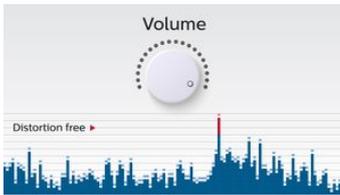

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

Splash-proof design



Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, allowing for music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

Specifications

Please note that this is a pre-sales leaflet. The contents of this leaflet reflect the best of our knowledge per date and country mentioned above. The contents of this leaflet are subject to change without notice. Philips does not accept any liability as to the contents of this leaflet.

Compatibility

iPad	iPad 1 iPad 2 new iPad iPad mini iPad with Retina display
iPhone	iPhone 3 iPhone 3GS iPhone 4 iPhone 4S iPhone 5 iPhone 5C iPhone 5S iPhone 6 iPhone 6 Plus iPhone 6S
iPod touch	3rd generation or later
Android tablets and smartphones	with Android 2.1 and Bluetooth 2.1 or above

by-packed finely knitted strap



Our by-packed strap is made of a vibrant and finely knitted fabric sleeve making it stylish enough to be a fashion accessory.

Built-in microphone



With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



work with other Bluetooth-enabled device	Bluetooth 4.0 or below Yes
--	-------------------------------

Design and finishing

Colour	Black
--------	-------

Connectivity

Bluetooth profiles	A2DP AVRCP HFP
Bluetooth range	Line of sight, 20 m or 66 ft
Audio in (3.5 mm)	Yes
USB charging	Yes

Convenience

Built-in microphone	for speaker conference
---------------------	------------------------

Splash-proof IPX 4

Sound

Output power (RMS) 4 W
Sound System Mono
Speakers 1 x 38.1-mm (1.5") full range driver and passive radiator

Power

Operating time on battery 8 hr
Battery type lithium (built-in)

Accessories

Included accessories USB cable for PC charging
World Wide Warranty leaflet
Quick install guide
carrying strap

Dimensions

Product dimensions (WxDxH) 98 x 35 x 77 (7.2" x 3.2" x 3.4") mm
Packaging dimensions (WxDxH) 108 x 84 x 145 mm (9.2" x 3.7" x 3.8")
Product weight 0.15 kg
Weight incl. Packaging 0.25 kg



data subject to change
2023, June 18

Version: 3.1.6
EAN: 4895185620053

© 2023 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com