

Philips  
SoundBar DVD home  
theatre



HTS6100

## Complete home theatre in one bar

with Ambisound

Enjoy 5.1 surround sound in any sort of room, in any sitting position. Featuring Ambisound, this one-piece integrated system fits underneath any flat TV and provides a thrilling listening experience with excellent sound and picture quality.

### Hear and see

- Ambisound for 5.1 surround sound from fewer speakers
- 1080p HDMI upconverts to high definition for sharper images

### Live

- SoundBar with integrated speakers, amplifiers and DVD player
- Matches any flat TV with optimal fit for 37" TV or larger

### Connect

- Dock your iPod for audio playback
- Hi-Speed USB 2.0 Link plays media from USB flash drives

### Use

- EasyLink for easy control of connected devices via HDMI CEC




[asimpleswitch.com](http://asimpleswitch.com)

# PHILIPS

sense and simplicity


# Highlights

## Ambisound

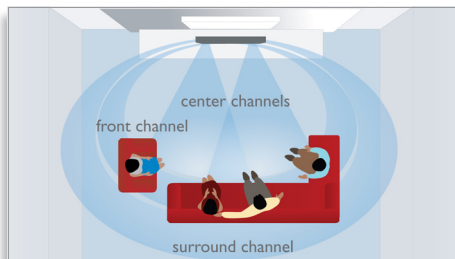


Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## SoundBar

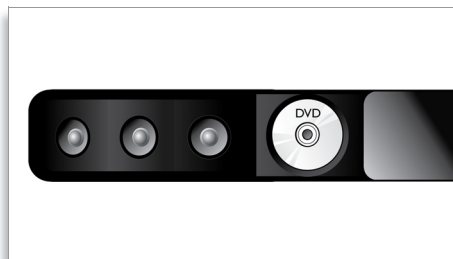

The SoundBar is a complete all-in-one home theatre solution that delivers superb 5.1 surround sound for an immersive movie experience. With integrated speakers, amplifiers and DVD player, the SoundBar is all you need below your television. It lets you keep your living room the way you want it, yet delivers an amazing multi-channel sound experience - for movie moments shared with friends and family.

## Dock your iPod

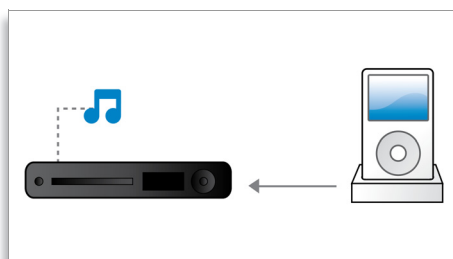

The docking station, included with your home theatre system, lets you play music from your

iPod. What's more, you can also control the iPod with the home theatre system's remote. The docking station brings portable entertainment into your living room — with absolute convenience.

## 1080p HDMI



1080p HDMI upconversion delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution — ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.



# Specifications

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

## Sound

- Sound System: Ambisound, DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Smart Surround, DoubleBass, Treble and Bass Control, ClearVoice, FullSound
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Speaker Impedance: 6 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 35-200 Hz

## Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture compression format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB

flash drive

- Picture enhancement: Slideshow with music playback, Rotate, Zoom

## Tuner/reception/transmission

- Tuner Bands: FM

## Connectivity

- Front/Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit speaker connectors, Interconnect (to Power Box)
- Subwoofer (Power Box): FM Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit)

## Dimensions

- Set dimensions (W x H x D): 955 x 153 x 295 mm
- Set weight: 7.2 kg
- Subwoofer dimensions (W x H x D): 295 x 446 x 295 mm
- Subwoofer Weight: 11.2 kg
- Packaging dimensions (W x H x D): 1035 x 550 x 354 mm
- Weight incl. Packaging: 30.4 kg

## Accessories

- Included Accessories: Quick start guide, User manual, Dock for iPod, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, FM antenna, Interconnect cable, Power cord, Wall mounting bracket, Product Registration Card

## Electricity

- Power supply: 120 V, 60 Hz
- Standby power consumption: <1 W



Issue date 2009-05-08

Version: 1.0.6

12 NC: 8670 000 36219  
UPC: 6 09585 14677 8

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)