

Philips
Soundbar speaker

Virtual surround

Integrated subwoofer
2 HDMI In & HDMI out ARC
Bluetooth®

HTL5120S



Powerful sound for any TV

with Integrated subwoofer

Unleash the full sound potential of all your media devices. With its integrated subwoofer and orientation sensor, it gives you the freedom to place the soundbar just the way you like it.

Full and rich sound, effortlessly

- Integrated active subwoofer for powerful bass
- Virtual Surround Sound for a realistic movie experience

Connect and enjoy all your entertainment

- Connect to HDMI x 2 for great picture and sound quality
- Wireless music streaming via Bluetooth

Richer sound for watching TV and movies

- Dolby Digital for ultimate movie experience


Designed to enhance your cinema at home

- Minimalistic chic design to suit a modern decor
- Orientation sensor ensures the best sound in any placement

PHILIPS


Highlights

Virtual Surround Sound

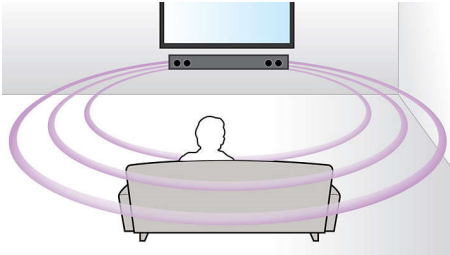

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

HDMI x 2

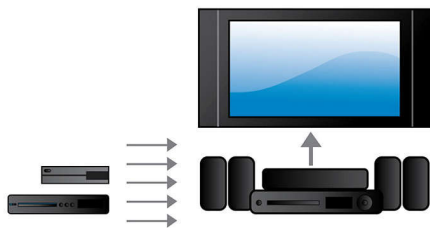

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio HDMI x 2 output to the connection in your non-3D AV receiver.

Integrated active subwoofer




Integrated active subwoofer for powerful bass

Minimalistic chic design

Minimalistic chic design to suit a modern decor

Orientation sensor

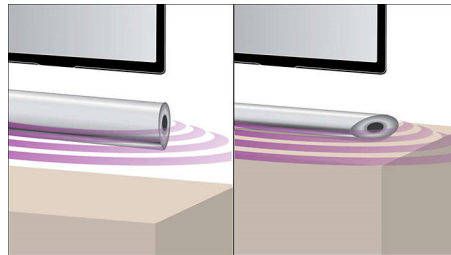


The quality of your sound experience is determined by how the soundbar is positioned in a room. Luckily, this system comes with a smart auto-orientation sensor that instantly optimizes audio quality once it detects whether your soundbar is placed horizontally or vertically. So, whether you choose to sit your soundbar on a shelf or mount it on a wall, you can be sure you'll always have a superb audio experience.

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Dolby Digital

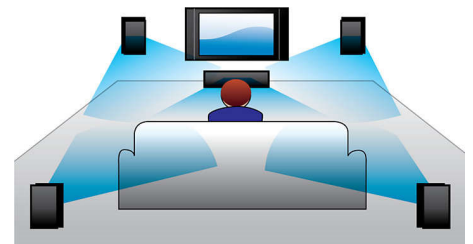

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Specifications

Sound

- Sound Enhancement: Auto Volume Leveler, Double Bass Sound, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Speaker output power: 2x 60 W
- Total Power RMS @ 30% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 x 1" tweeter, 1 x 4" woofer
- Speaker Frequency Range: 55 - 18k Hz
- Speaker Impedance: 3 ohm
- Tweeter Impedance: 12 ohm

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2
- iPod/iPhone: via 3.5mm Music iLink
- Side Connections: Audio In (3.5mm)

Outer Carton

- EAN: 87 12581 66852 5
- Length: 111.2 cm
- Number of consumer packagings: 1
- Width: 14.2 cm
- Gross weight: 6.1 kg
- Height: 21.8 cm
- Nett weight: 4.323 kg
- Tare weight: 1.777 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough,

System standby

- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 40 W
- Power supply: 110-127V / 220-240V, ~50-60Hz, 50Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 21.8 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 14.2 cm
- Depth: 111.2 cm
- Number of products included: 1
- EAN: 87 12581 66852 5
- Gross weight: 6.1 kg
- Nett weight: 4.323 kg
- Tare weight: 1.777 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 1010 x 154 x 81 mm
- Weight incl. Packaging: 6.2 kg
- Main Unit Weight: 3.9 kg
- Packaging (W x H x D): 1112 x 218 x 142 mm

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

