


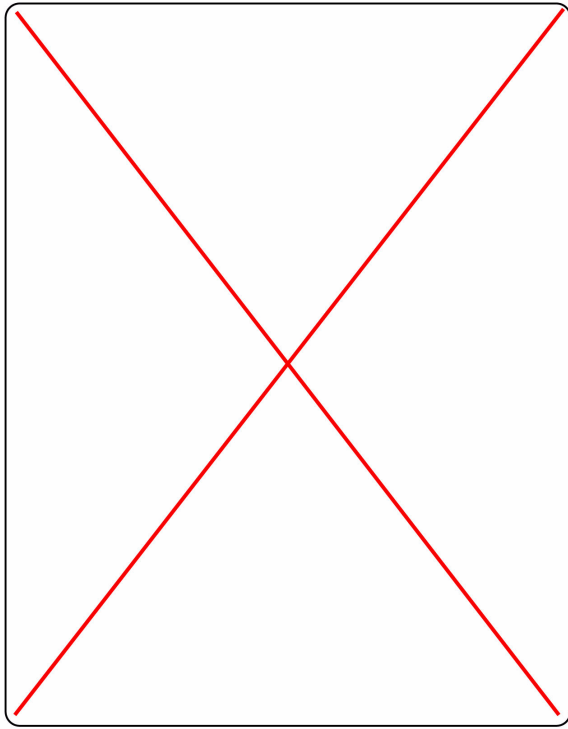

Philips
Cordless phone answer
machine

TU7371

A true 2 in 1 SMS phone

At the cutting edge of creative technology

The Zenia 300 offers the guarantee of having an exclusive product at home since not everyone can treat themselves to the most sophisticated design and most integral, extensive series of features.

Experience best sound quality

- Talk on the phone without holding the handset
- CS² Crystal Sound System improves message intelligibility
- FAST automatically selects optimum antenna during a call

Maximize your messaging experience

- Text messaging (SMS) for short messages over a fixed line
- Eatoni predictive text entry simplifies writing SMS messages
- Create several SMS mail boxes that can be PIN-code protected

Benefit from easy-to-use technology

- LCD screen with backlighting for convenience in the dark
- Fast forward message tracking and pause of messages
- Pilot key & carousel menu navigates in a menu-in-cycle form
- Answering machine control from base and handset

PHILIPS

Highlights

Handsfree on Handset

The handsfree speaker phone lets you hold a conversation while your hands are busy with something else and wherever you are. With both the speaker and the microphone in front of the handset, it is just like talking face to face with your correspondent.

CS² Crystal Sound System

Philips' unique Crystal Sound System (CS²) audio technology improves the sound quality of Philips DECT phones. CS² audio quality is demonstrably better than competitive DECT products and brings with it distinct benefits.

FAST

FAST= Fast Antennae Selection Technology makes the most of your DECT telephone by improving listening quality. It allows the phone to defend itself against problems such as fading and distortion. Thanks to the small size of the radio, 2 antennae have been placed inside the base. During a call, the optimum antenna is selected automatically depending on the distance of the handset from the base and the environment you are in.

Text messaging (SMS)

The Short Message Service (SMS) is a mechanism for delivery of short messages which can have up to 160 characters of text. These 160 characters are plain text in nature and can be comprised of words, numbers or an alphanumeric combination. The Eaton@LetterWise predictive text editor

helps you to write text messages more quickly. With its unique SMS system you can receive up to 200 messages in 10 different mailboxes. Greeting to a loved one, a quick reminder about an important meeting, ...all this can now be put in a SMS and sent over the fixed network.

Eatoni text editor

Eatoni's LetterWise is an easy-to-use text-entry solution requiring just 1.16 taps per correct letter. It makes typing on phone keypads as comfortable, fast, and accurate as using a typewriter keyboard. It is unique among predictive text entry solutions in its ability to easily handle the entry of abbreviations, names, addresses, and URLs.

Personal mail boxes

Children at a certain age need some privacy at home when sending SMS to their friends. But paying for several mobile phones quickly gets very expensive. DECT phones provide up to 9 personal SMS mail boxes which can be protected by a PIN code - SMS can stay private despite collective phone usage. The user must tell his correspondents his mail box number so that they can send short messages directly to this personal mail box. Sending a SMS from a personal mailbox makes it easy for the addressee to reply directly to this mailbox without having to remember the mailbox number.

Backlight on screen

Backlighting is a feature that illuminates the LCD screen or keypad for use in the dark. The two most common types of backlighting include LED and electroluminescent (EL). Remotes backlit with LEDs are typically bright but uneven with a yellow or green color, while EL panels are smooth with blue, white or green shades.

Fast forward and pause

No need to listen to entire messages of 5 minutes before getting the information you want. With the fast forward key you can skip all the bla bla and go directly to the part that interests you. The pause key allows you to stop at a certain point of the message, to write down a number, adress etc.

Pilot key & carousel menu

The pilot key navigation system allows easy navigation and settings. The pilot key is a roller on the left side of the phone that can be scrolled up and down and pressed in the middle. It commands the Carousel menu which is a circular loop of menu icons displayed on the screen.

Base and handset TAM control

Just look at the base station to know instantly whether you received messages. Listening or deleting messages then become as simple as pressing one key on the base station - for those who never remember where they left their handset.

Specifications

Picture/Display

- Backlight
- Backlight color: Blue
- Diagonal screen size - tele: 4.0 cm
- Display screen type: LCD TFT
- Color cabinet: Silver

Sound

- Handset ringers: Instrumental
- Volume Control: digital, Volume Control rotary/encoder

Convenience

- Auto out of range warning
- Battery full indication
- Battery low indication
- Carousel Icons: Phonebook, Answerphone, Messages, SMS, Intercom, Network, Extra, Base, Handset, Call log
- Clock with calendar
- Drop proof: 120 cm
- Function: Do not disturb ringer mute, Cheapest rate function, Call cost, Alarm clock, Babysit function, Microphone mute, Chain dialling, Direct to Do Not Disturb mode, Short cut keys, Keypad lock, Free handset to handset call
- Handset Keys: Line, Pilot key, Cancel / Recall, Dialling keypad, Loudspeaker, Call log, Phonebook
- Hard Icons: Answerphone message, Battery level, In range / Out of range, Line / Internal call, Loudspeaker, Not locked, Silence, SMS
- Headphone jack
- Lines of text: 4
- Multi base capability: Up to 4 bases
- Multi handset capability: NA
- Text input: Eatoni
- Vibrator
- VIP group with own melody: Yes, 3 groups
- Volume control

Accessories

- Headset: Mono headset

Green Specifications

- Eco Designed
- Halogen-free housing
- Packaging material: Carton
- Packaging type: Giftbox

Dimensions

- Base dimensions: NA
- Base weight: NA
- Box dimensions (W x H x D): 245 x 100 x 105 mm
- Form Factor: Handset separate from base
- Handset dimensions: L*H=121*46*30mm
- Handset weight: 114 g
- Temperature range (operation): 0°C to 40°C
- Temperature range (storage): -25°C to 70°C
- Weight incl. Packaging: 0.425 kg

Power

- Ambient temperature: 5 °C to 40 °C
- Battery Type: NiMH
- Charging time: 12 hours hr
- Kind of Battery: Rechargeable
- Standby time: up to 250 hours
- Talk time: up to 16 hours

Network Features

- Antenna: Fast Selection Technology, Integrated on base, Integrated on handset
- Compatible: GAP
- Dialing: Tone, Pulse

Operator Requirements

- SMS
- Name and Caller ID
- Caller ID on call waiting
- Operators services phonebook

Answering Machine

- Plug & Play Answering machine
- Recording time capacity: 55 min max
- Message counter on base
- Fast Forward message tracking
- Pause during message playback
- VIP outgoing message
- Call screening
- Answerphone remote access

Memory Capacity

- Name & number shared phonebook: 255 names and numbers
- SMS storage capacity: 200 SMS
- Call log entries: 80 entries



Issue date 2014-02-07

Version: 1.0.2

12 NC: 9961 400 01998
EAN: 87 10895 81639 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com