



Philips
5.1 Home theater

3D Angled Speakers
HDMI 1080p

HTS5540



Obsessed with sound

True cinematic experience with sound evenly spread

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play your favorite entertainment content on the innovative Philips 5000 series home theater system

Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- 1200W RMS power delivers great sound for movies and music
- DTS, Dolby Digital and Pro Logic II surround sound
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your living space

- Sleek high gloss finishing with unique touch controls

Connect and enjoy all your entertainment

- Plays DVD, VCD, CD and USB devices
- Wireless rear audio ready for fewer wires across your room

PHILIPS


Highlights

1200W RMS power



1200W RMS power delivers great sound for movies and music

3D Angled speakers

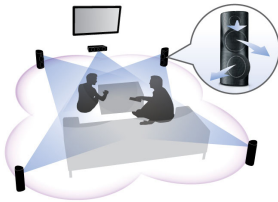


3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

DTS, DolbyDigital, ProLogic II

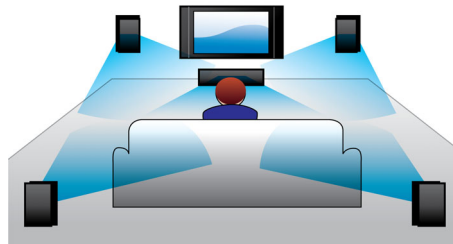

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and

dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Sleek high gloss finishing



Sleek high gloss finishing with unique touch controls



Specifications

Accessories

- Compatible accessories: RWSS5510 Wireless Rear Audio, STS1300 Floor stand
- Included accessories: Audio/Video cable, Batteries for remote control, FM antenna, Quick start guide, Remote Control, Stand Screw x 2, User Manual, World Wide Warranty leaflet

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

Karaoke Playback

- Advance functions: Scoring, Voice Cancellation
- Standard functions: Echo level control, Mic volume control, Pitch control

Still Picture Playback

- Compression format: JPEG, JPEG HD
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, XviD, WMV SD
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG, JPG
- Video: asf, avi, divx, mpeg, mpg, wmv

Connectivity

- Front / Side connections: Microphone In, MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, Wireless Rear Audio

Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby, Remote Control-Passthrough

Dimensions

- Main Unit (W x H x D): 435 x 58 x 358 mm
- Main Unit Weight: 3.56 kg
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.40 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 115 mm

- Front Speaker Weight: 1.05 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.77 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.25 kg
- Subwoofer cable length: 4 m
- Packaging (W x H x D): 400 x 470 x 1180 mm
- Weight incl. Packaging: 24.50 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Satellite speaker: 2 x 3" Full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer impedance: 3 ohm
- Subwoofer freq range: 20 - 150 Hz

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Power

- Power consumption: 150 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.9 W

Sound

- Equalizer settings: Action, Rock, Classic, Concert, Drama, Jazz, Sports
- Frequency response: 20-20k Hz
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Dialog Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Total Power RMS @ 30% THD: 1200 W

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2014-02-12

Version: 9.4.5

12 NC: 8670 000 59915
EAN: 87 12581 52518 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com