



Philips Harmony
Component Hi-Fi system

Dock for iPod/iPhone/iPad

DAB+

Harmony

DCB8000



Natural, true-to-life sound

Obsessed with sound

A top-mounted tweeter delivers your favourites with details that sound natural. Whether you are playing and charging an iPod/iPhone/iPad or listening to DAB+ radio, this aluminium Philips DCB8000/10 Hi-Fi system offers a great experience.

Enrich your sound experience

- ClariSound for pristine sound with true-to-life details
- Top mounted tweeter for detailed and natural sound
- Glass fibre woofer for natural reproduction of sound
- Innovative bass port to deliver pure and rich bass
- Gold-plated speaker connector for finest signal transmission
- 160 W RMS total output power

Enjoy your music from multiple sources

- Play and charge your iPod/iPhone/iPad
- DAB and FM compatible for a complete radio experience
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- MP3 Link for portable music playback


Premium finishing with noble materials

- Aluminium cabinet for quality look and feel

PHILIPS
sense and simplicity

Highlights

ClariSound

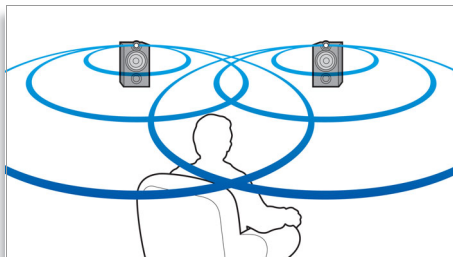

ClariSound breathes new life into your favourite music with pristine and detailed sound laced with warmth and texture. A top-mounted tweeter delivers sound enriched with brilliant clarity while a super-efficient glass fibre woofer cone ensures a wide sound stage to fill any room. The pure sound performance is balanced with deep, well-defined bass, thanks to Philips' innovative bass port technology. A soft dome ensures true-to-life reproduction of voice and instrument details so you can appreciate all the dynamic and emotive nuances of the original production.

Gold-plated speaker connector



The gold-plated speaker connector ensures better audio signal transmission compared to traditional click-fit connections. It also minimises the electrical signal loss from the amplifier to the speaker box, resulting in sound

reproduction that's as close to reality as possible.

DAB and FM compatible



DAB (Digital Audio Broadcasting) digital radio is a new way of broadcasting radio, in addition to FM analogue transmission, via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear, crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is

also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Play and charge iPod/iPhone/iPad



Enjoy your favourite MP3 music while charging your iPod/iPhone/iPad! The dock lets you connect your portable device directly to the Philips system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone/iPad while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The system automatically charges your portable device while it is docked.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Specifications

Sound

- Output power (RMS): 2 x 80 W
- Sound Enhancement: Treble and Bass Control, Loudness, Class "D" Digital Amplifier

Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 5.25" woofer, 2-way, Bass Reflex Speaker System, Speaker grilles detachable
- Loudspeaker enhancement: Gold-plate speaker connectors

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, CD-R/RW, MP3-CD, WMA-CD, USB flash drive
- Docking playback modes: play and pause, fast forward and reverse, menu, up and down, next and previous track
- USB Direct playback modes: play/pause, fast reverse/fast forward, previous/next, repeat, shuffle, stop
- Others: ID3-tag support

Tuner/Reception/Transmission

- DAB/DAB+: Info display, Menu, Smart scan
- Tuner bands: FM stereo, FM mono
- Station presets: 20
- RDS: station name, programme type, radio text, RDS clock set
- Tuner enhancement: Easy set (plug and play), auto digital tuning, auto scan

Connectivity

- Front/Side connections: USB 2.0
- Headphones: 6.3 mm
- Rear Connections: AUX in, Left and right speakers, Line out, MP3 Link, DAB antenna

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm, iPod Alarm
- Clock: On main display, sleep timer

- Display Type: VFD display
- Indications: DIM mode
- Charging device: iPad, iPhone, iPod
- Loader type: tray

Accessories

- Included accessories: AC Power Cord, 3.5 mm stereo line-in cable, DAB antenna, Quick Use Guide
- Remote control: 44-key remote with 2 x AAA batteries
- User Manual: English, German, French, Danish, Norwegian, Italian

Dimensions

- Main unit width: 270 mm
- Main unit height: 146 mm
- Main unit depth: 295 mm
- Main speaker dimensions (W x D): 180 x 282 mm
- Main speaker height: 325 mm
- Packaging width: 750 mm
- Packaging height: 350 mm
- Packaging depth: 340 mm
- Gross weight: 16.5 kg
- Net weight: 14.5 kg

Power

- Power supply: 220-240 V, 50 Hz

iPod compatibility

- Compatible with: iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch, iPod touch 3rd generation, iPod touch 4th generation, iPod 5th Generation, iPod classic, iPod mini

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

iPad compatibility

- Compatible with: iPad, iPad 2



Issue date 2013-04-24

Version: 1.1.9

12 NC: 8670 000 80471
EAN: 87 12581 61647 2

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com