



Wireless speaker

- Bluetooth®
- 30 W Output Power
- 20 hours play time
- Built-in power-bank function

TAS6305/00

Party day and night

Keep the party going for longer with the waterproof Bluetooth speaker that gives you 20 hours play time. Strong bass keeps everyone moving. You can charge your smart device via the USB port thanks to the speaker's high-capacity battery.

Benefits

20 hours play time. Tough and IPX7 waterproof.

- Waterproof and ready to go
- 20 hours play time. Built-in power-bank function
- Audio-in. Connect to almost any source
- Charge smart devices via USB port

Play what you love

- Play it loud. Pair for stereo
- 2x 2.25" full-range drivers. Vibrant sound
- Anti-clipping function. Play it loud without distortion

- Bluetooth 5.0. Up to 20 m wireless range
- Two passive radiators for strong bass

Take the party anywhere

- Dimensions: 230x100x100 mm
- Multi-color LED lights blaze to the beat
- Pair with an identical speaker for stereo sound

PHILIPS

Features

Waterproof and ready to go




This portable Bluetooth speaker is IPX7-rated—which means it can withstand total immersion in water up to 1 m deep for up to 30 minutes. You can party in the shower, by the pool, or even in the pool! The wireless range is 20 m.

20 hours play time



The 4400 mAH rechargeable Li-ion battery gives you 20 hours of play time and you can charge your smart device via the speaker's USB port. A full charge of the battery takes 6 hours.

Play it loud. Pair for stereo

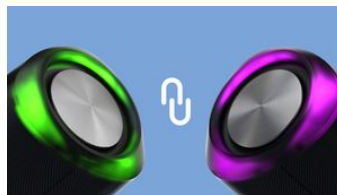

Twin passive radiators deliver strong bass and sound stays clear even at high volume. Want to make the party even bigger? Pair with an identical speaker for stereo sound. LED lights at each end of the speaker flash to the tunes.

Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.

Specifications

[field not found 'disclaimer_text']

Compatibility

Smartphone/tablet APP control	Yes
Android tablets & smartphones	with Android 2.1 and Bluetooth 2.1 or above

Sound

Output power (RMS)	30W
Output power (MAX)	60W
Frequency response	100 Hz - 20 KHz
Sound System	Stereo

Loudspeakers

Number of sound channels	2
Driver configuration	Full range
Number of full range drivers	2
Full range driver diameter	57mm
Passive radiators	2

Connectivity

Bluetooth profiles	A2DP AVRCP HFP HSP
Bluetooth range	Line of sight, 20m or 66ft
Bluetooth version	5.0
USB charging	5V, 2A
Audio Connections	3.5mm Line in
DLNA Standard	No
Multiple speaker connection	Yes
Multiple speaker scenario	Stereo
Multiple speaker technology	TWS
USB	Type-C

Convenience

Water resistance	IPX7
Ease of Installation	Automatic pairing
Volume control	Digital up/down
Automatic power off	Yes
Handsfree calling	Yes
Call Management	Answer/End Call
Built-in microphone	Yes
Display screen	No
Light Effect	Yes

Power

Power LED indicator	Blue
Battery type	Lithium-ion (built-in)
Battery Capacity	4400mAh, 7.4V
Operating time on battery	20 hr
Charging time	6 hr
Power bank	Yes, integrated

Accessories

3.5mm audio cable	Yes
Cable	USB charging cable
Included accessories	Quick install guide Warranty Card World Wide Warranty leaflet

Design and finishing

Color	Black
-------	-------

Product dimensions

Depth	10 cm
Depth	3.9 inch
Height	3.9 inch
Height	10 cm
Weight	1.764 lb
Weight	0.8 kg
Width	23 cm

Width	9.1 inch	Nett weight	1.764 lb
Packaging dimensions		Number of products included	1
	Depth	Packaging type	Box
	Depth	Tare weight	0.2 kg
	Gross weight	Tare weight	0.441 lb
	Gross weight	Width	28.8 cm
	Height	Width	11.3 inch
	Height	EAN	48 95229 10222 4
Nett weight	0.8 kg		



data subject to change
2023, June 19
Version: 10.1.2
EAN: 4895229102224

© 2023 Koninklijke Philips N.V.
All rights reserved.
Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.
www.philips.com