




Philips Original radio

- Chili red
- Dock for iPod/iPhone

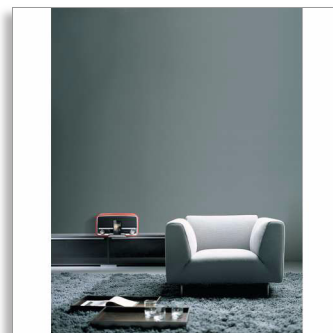

ORD7100R



The original radio

Let this Philips Original radio complete your listening experience. Designed in the style of the iconic 1955 Philips radio, it plays and charges iPods and iPhones, and comes with a stereo FM tuner.

Enrich your sound experience

- High fidelity sound
- Play and charge your iPod/iPhone simultaneously
- FM stereo tuner
- Bass Reflex Speaker System delivers a powerful, deeper bass

Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronisation with iPod/iPhone when docked
- Audio-in for easy portable music playback


Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

PHILIPS

Highlights

Play and charge your iPod/iPhone

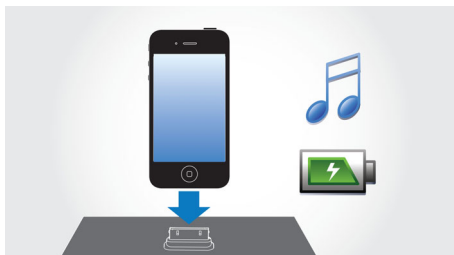

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a

bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

Auto clock synchronisation



When connected and docked, this docking system will automatically synchronise the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Specifications

iPod compatibility

- Compatible with: iPod touch, iPod touch 2nd Generation, iPod classic, iPod nano 3rd Generation, iPod nano 4th Generation, iPod 5th Generation, iPod with colour display, iPod nano, iPod mini, iPod nano 1st Generation, iPod nano 2nd Generation

iPhone compatibility

- Compatible with: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

iPod/iPhone App

- App name: HomeStudio, Free download from App store
- Compatibility: Dock radio for iPod/iPhone, iPod Touch, iPhone
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Clock: analogue display, digital display
- Alarm: multiple alarms, sleep timer
- Radio: FM radio, preset, scan, tune

Audio Playback

- Playback mode: Charging iPod, Charging iPhone

Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: (FM) 87.5–108 MHz

- Station presets: 20
- Auto digital tuning

Connectivity

- Audio in (3.5 mm)
- Antenna: FM antenna (75 ohm)

Convenience

- Display Type: LED white

Sound

- Sound System: Stereo
- Volume control: rotary (digital)

Loudspeakers

- Built-in speakers: 2

Power

- Power type: AC input

Dimensions

- Product dimensions (WxDxH): 330 x 150 x 163 mm
- Packaging dimensions (WxDxH): 460 x 250 x 245 mm

Accessories

- Included accessories: AC power cord (VDE and UK), User Manual, Warranty certificate



Issue date 2013-05-21

Version: 2.0.2

12 NC: 8670 000 98927
EAN: 08 71258 16725 84

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com