

Philips  
Portable speaker

Grey



SBA1710



## Mobile speaker

Pumping out larger-than-life sound, Philips SBA1710 speakers come complete with a handy mobile stand that ensures they're incredibly easy to use!

### Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- 4W RMS total output power

### Designed for grab and go

- Music on the go
- Up to 8 hours music playback

### Simplicity

- Battery powered for portability
- Compatible with any media

**PHILIPS**

Portable speaker  
Grey

# Specifications

## Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

## Design and finishing

- Color: Grey

## Sound

- Impedance: 4
- RMS Power rating: 4 W
- Frequency response: 200Hz – 20KHz (+/- 3 dB)

## Power

- Operating time on battery: 8 hr
- Battery type: 4 x AA (not included)

## Outer Carton

- Gross weight: 1.6 kg
- Gross weight: 3.527 lb
- GTIN: 1 06 09585 22536 4

- Outer carton (L x W x H): 8.7 x 8.3 x 6.9 inch
- Outer carton (L x W x H): 22.2 x 21 x 17.5 cm
- Nett weight: 1.411 lb
- Nett weight: 0.64 kg
- Number of consumer packagings: 4
- Tare weight: 2.116 lb
- Tare weight: 0.96 kg


## Packaging dimensions

- Packaging dimensions (W x H x D): 4.2 x 6.3 x 3.9 inch
- Packaging dimensions (W x H x D): 10.6 x 16 x 10 cm
- Gross weight: 0.33 kg
- Gross weight: 0.728 lb
- Nett weight: 0.353 lb
- Nett weight: 0.16 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.17 kg
- Tare weight: 0.375 lb
- UPC: 6 09585 22536 7

SBA1710/37

# Highlights

## Class D Digital Amplifier

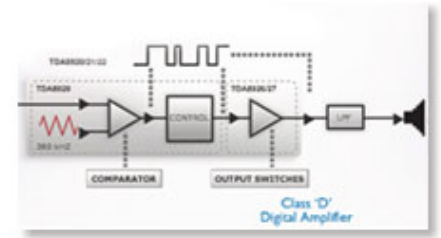


Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

## 4W RMS total output power



RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

## Up to 8 hours music playback

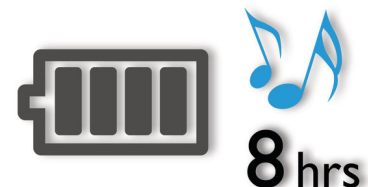

Enjoy music playback for up to 8 hours on a single charge.

## Music on the go

Enjoy the convenience of playing music the way you want - play it out loud through the mobile speaker.



Issue date 2020-07-09

Version: 4.0.3

12 NC: 8670 000 88785  
EAN: 00 60958 52253 67

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)