




Philips Streamium
Network Music Player
with FullSound™

Free Internet radio
Full colour display

Streamium

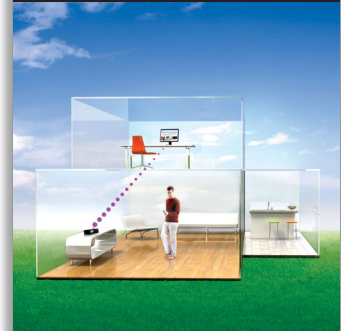

NP2900

Free your music

Enjoy music from PC and Internet — wirelessly

Philips Streamium network music player NP2900 with its built-in speakers gives you wireless access to your PC music and Internet radio — all delivered by the immersive LivingSound and superb FullSound technologies.

Unlimited listening pleasure - wirelessly

- Thousands of free Internet Radio Stations
- Wireless music playback from PC/Mac

Easy navigation and control

- Easy and intuitive user interface with album art display
- Alphanumerical search for speedy access
- Large screen and remote control

Quality sound performance

- LivingSound for wider, immersive stereo sound
- FullSound™ to bring your MP3 music to life
- 4-speaker system for superb sound
- 30 W RMS



asimpleswitch.com

PHILIPS

Highlights

Free Internet radio stations

Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kinds of music worldwide. Connect your Streamium to the Internet and listen to your favourite online programmes on your audio system without having to turn on your PC.

Wireless music playback

Free your entire music collection from your PC and play it back through your audio system with the Streamium Network music player! With the UPnP connection that lets you connect to any Universal Plug and Play-enabled device to receive or transmit music; the Streamium enables you to access, select and search your music collection in your PC. Just use the remote control and choose your songs

through the Streamium and play it back through an audio system. Meanwhile you can enjoy album art displayed on the colourful LCD screen. Experience listening to your favourite music wirelessly and effortlessly.

LivingSound

Philips' patent-pending LivingSound vastly expands the sweet spot (the ideal listening location in your room) so you can enjoy truly immersive music over a wider area. Combining various sound processes, LivingSound recovers the richness and spatial details of the soundstage that are often lost with a compact stereo system. The effect is a larger than expected sweet spot - one that is extensively and evenly distributed around the room. Now your music enjoyment is no longer confined to

the traditionally narrow area. Enjoy optimum stereo sound in a wider area.

FullSound™

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.



Specifications

Sound

- Equalizer settings: Classic, Jazz, Pop, Rock
- Sound Enhancement: Equalizer, Dynamic Bass Boost
- Music Power: 30 W
- Volume Control: Volume Control up/down
- Type: FullSound, LivingSound

Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: Non-detachable

Audio Playback

- Compression format: non DRM AAC (m4A), MP3, WMA, eAAC+, FLAC, Ogg Vorbis
- ID3-tag support
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192 kbps, CBR/VBR
- Internet Radio

Connectivity

- Headphones: 3.5 mm
- LAN wired: Ethernet (RJ 45) 1 x
- Other connections: Digital coaxial out
- Wireless connections: Wireless LAN (802.11 g), Wireless LAN (802.11b)
- Wireless Universal Plug and Play: Enabled
- Audio Connections: Analogue Audio In (L/R)
- Encryption/security: WEP 128 bit, WEP 64 bit, WPA
- Power: 110-230V

Convenience

- Backlight
- Backlight colour: White
- Clock: On main display
- Display Enhancements: Brightness Control
- Display Type: LCD
- Eco Power Standby: 1 watt
- Headphone jack
- Indications: DIM mode
- On-Screen Display languages: Dutch, English, French, German, Italian, Spanish
- Signal strength indication
- Alarms: Buzzer Alarm, Sleep timer
- OSD Languages: Portuguese, Swedish
- Remote control: 1-way
- Wall mountable/Ceiling Throw: Wall mountable

Accessories

- AC/DC Adapter: 110-240V
- Included accessories: Wall mounting bracket
- Batteries: 2 x AAA
- CD-ROM: CD-ROM with TwonkyMedia, Video Tutorial and manuals
- Remote control: 1-way Remote
- Warranty Card: Warranty Card
- User Manual: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian (on CD)
- Quick start guide: English

Dimensions

- Product dimensions (WxDxH): 346.5 x 69 x 99 mm
- Set weight: 1.48 kg



Issue date 2018-03-21

Version: 4.9.9

12 NC: 8670 000 40318
EAN: 87 12581 42837 2

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Some features require broadband Internet access support
* Some services are not available in all areas