

Philips
In.Sight wireless HD baby
monitor

Watch from anywhere

Hear & speak
Night vision
For iPhone, iPad



B120

Always close to your baby

Watch from anywhere on your iPhone/iPad

The Philips In.Sight wireless HD baby monitor lets you watch and listen to your baby from your iPhone/iPad. Watch in crystal clear HD quality and with night vision you can watch your baby even in the dark.

Stay close to your baby wherever you are

- Wi-Fi baby monitor for placement anywhere in your home
- Watch your baby on your iPhone via Wi-Fi/3G/4G LTE
- HD video quality for crystal clear viewing
- Night vision mode to see baby clear in the dark

Stay reassured with alerts and notifications

- Hear your baby continuously even when phone is locked
- Phone alerts when monitor detects noise/motion
- Parents talk to baby via iPhone/iPad
- Real time monitoring with temperature & humidity sensor
- Parents to share monitors

Easy, safe and secure

- Easy set-up of Wi-Fi baby monitor via QR code
- Video encrypted for secure connection
- PVC-BFR free power cables and monitor

PHILIPS

In.Sight wireless HD baby monitor
Watch from anywhere Hear & speak, Night vision, For iPhone, iPad

B120/97

Highlights


Continuous audio streaming

In.Sight wireless HD baby monitor streams audio continuously even when your iPhone or iPad is locked or when you are docking or charging your iPhone or iPad.

Easy set-up via QR code

Set-up is simple with the app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

Encrypted direct networking

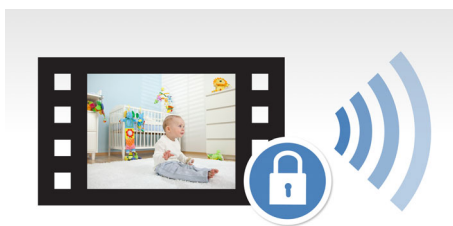

In.Sight wireless monitor uses highly secure encryption to provide you with privacy at all times. In.Sight wireless monitor uses a unique encryption key each time it makes a connection, providing you a highly secure connection each time you look at your loved ones.

HD video quality



In.Sight wireless HD baby monitor allow you to watch your baby in vivid detail. View videos in high definition 720p quality. The "720" refers to the number of horizontal lines of resolution on the screen. The "p" stands for progressive scan or the sequential appearance of the lines in each frame. With 720p resolution, videos are sharper and more true-to-life.

Parents talk via iPhone/iPad




With In.Sight wireless HD baby monitor, you can talk to your baby anytime you want. Simply press "talk" on your iPhone or iPad and sing her a nursery rhyme. Watch as she falls asleep in your soothing voice.

Multi-user mode

Share monitors with your spouse, family, friends and even your baby sitters. The app lets you share each monitor with two other users so that they have access to live videos and sound via their smartphones as well. You can even upgrade the app to share the monitor with up to 10 users.

Night vision mode

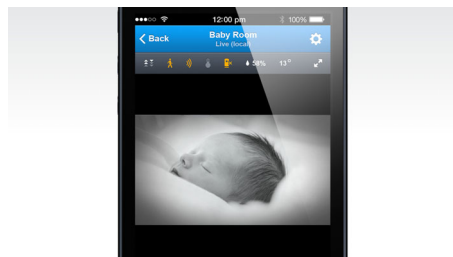

Night vision mode allows you to see your baby's lovely face in the dark. Infrared light goes on for the monitor to capture clear black and white video when it is dark. Night vision mode switches on and off automatically, or you can adjust it manually.

Noise and motion alerts

It's impossible to predict when something might happen to your baby. In.Sight wireless HD baby monitor keeps watching with adjustable noise and motion detection. You will be alerted anytime noise or motion is detected. Automatically receive push

notifications on your iPhone or iPad when the monitor detects motion or noise.

Temperature & humidity sensor

Temperature and humidity sensors on In.Sight wireless HD baby monitor show temperature and humidity level on your iPhone or iPad. The humidity sensor measures humidity level, for instance, detecting dry air that may irritate baby's throat. The app will even alert you when the temperature is too high/low.

PVC and BFR-free

In.Sight wireless HD baby monitor is free from brominated flame retardant (BFR) and polyvinyl chloride (PVC). It adheres to the stringent safety standards for infant utensils and is absolutely baby-proof, safe and eco-friendly.

Watch your baby on Wi-Fi/3G/4G



In.Sight wireless HD baby monitor allow you to watch your baby on your iPhone or iPad wherever you are. Once you have downloaded the free Apple App and set up your In.Sight wireless baby monitor, you can access the video stream from your iPhone or iPad anywhere on Wi-Fi, 3G or 4G LTE networks. There's no limit to where and how you view your loved ones.

Wi-Fi enabled baby monitor

Have ultimate peace of mind with In.Sight wireless baby monitor. It connects to Wi-Fi 802.11 bgn networks. Place the monitor right in your baby room, you can watch and hear your baby right from your iPhone or iPad wherever you are.



Specifications

Lens & Sensor

- Sensor: 720p HD video image sensor
- Aperture: F2.8
- Digital zoom: 2x digital
- Focus mode: Fixed
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red
- IR control: via App
- IR range: 4 meters

Video Quality

- HD/VGA/QVGA streaming
- Resolution: HD (1280 x 720p) at 30 fps
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Features

- Wi-Fi: 802.11 a/ b/ n
- Motion detection
- Noise detection
- Direction adjustable base
- LED indicator
- Reset button
- Screw holes: Yes, 1
- Temperature measurement: -10 – 50 °C
- Humidity measurement: 20 – 90%

Software

- Installation: via App
- Automatic App update

- Web browser support
- System supported: iOS4.3 or above
- iPad compatibility: iPad 2, New iPad, iPad with Retina display, iPad mini
- iPhone compatibility: iPhone 4, iPhone 4S, iPhone 5
- iPod compatibility: iPod Touch 4th generation & up

Accessories included

- Extra wall mount
- USB power adapter
- USB cable: Yes, 2.5 m
- Screws / wall anchors: 1
- Quick Start Guide

Input and Output

- Audio: 2-way, parent talk back
- Microphone: High-sensitive, Mono
- Built-in speaker
- USB: Mini-USB port

Minimum Requirements

- Windows: Windows 7, Internet Explorer 9.0, Chrome 20.0, Firefox
- MAC: MACINTOSH 10.6, Safari 5.1.7, Chrome 21.0, Firefox

Dimensions

- Packaging dimensions (W x H x D):
158 x 160 x 70 mm
- Product dimensions (W x H x D):
66.2 x 104 x 66.2 mm



Issue date 2014-09-03

Version: 3.0.1

12 NC: 8670 000 98825
EAN: 87 12581 67215 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Viewing live video over your home Wi-Fi network using the In.Sight wireless home monitor is free and unrestricted. Viewing live video remotely (either over an external Wi-Fi network or 3G network) is also free for unlimited sessions, but subject to a limit of 5 minutes per session.

* Longer remote viewing session times and other premium features are available for purchase from the App. These conditions are subject to change.