




Philips
Wireless sports
headphones

Washable ear-cup cushions
Lightweight and rugged
IP55 dust/water protection

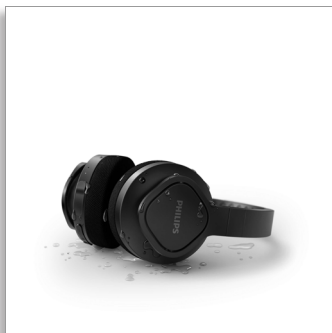

TAA4216BK

Stay active. Feel fresh. Rock out.

These tough, lightweight wireless on-ear headphones are built for active lifestyles. Removable and washable ear-cup covers keep you comfortable whether you're hitting the treadmill or the beach. 35 hours play time keeps the music going.

From the park to the streets to the beach

- Easy storage. Compact-folding design
- Multi-function button. Built-in mic. Easy pairing
- Compatible with an audio cable (3.5 mm jack)

Rugged, cool, light.

- Go further. 35 hours play time
- For sports or on the go. Washable ear-cup cushions
- Cooling ear cups
- IP55 dust/water protection

From workout playlist to vital call

- Powerful 40 mm neodymium drivers
- Clear sound and powerful bass
- Your tunes stay yours. Closed-back design
- Charge for 15 minutes, get 2 hours extra play time

PHILIPS

Highlights

35 hours play time



With 35 hours play time from a single charge, these wireless on-ear headphones are with you while you train-and beyond. A full charge takes less than 2 hours. Need an extra boost? 15 minutes charging gives you 2 hours more play time.


Washable ear-cup cushions



The soft, breathable ear-cup cushion sleeves are detachable for easy cleaning and are filled

with cooling gel. No matter what you do when you're wearing these headphones, you'll always be able to get them feeling fresh again!

IP55 dust/water protection

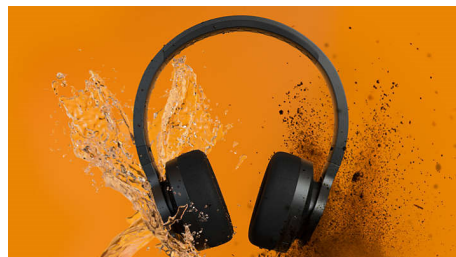

An IP55 rating means your headphones are as happy on dusty trails as they are in heavy rain. However hard you sweat-and wherever you go-nothing will stop you!

Closed-back design

Perfectly tuned 40 mm neodymium drivers deliver the bass to keep you going. The closed-back construction delivers great passive noise isolation. You get to pump up your tunes without annoying others.

Compact-folding design

The sleek design looks great whether you're going for your personal best or having fun on a

weekend break. Inward-folding ear cups make storage easy.

Easy control and pairing

The multi-function button lets you pause your playlist, take calls, control volume, and wake your phone's voice assistant. The headphones are ready to pair the instant you switch on Bluetooth. Once they're paired, they remember the last device they were paired with.

3.5 mm audio port

The 3.5 mm audio port lets you connect these sports headphones directly to compatible phones or music players. Perfect for those times when the battery is running low and you don't have a way to charge your headphones.

Specifications

Sound

- Frequency range: 20 - 20,000 Hz
- Speaker diameter: 40 mm
- Impedance: 32 Ohm
- Maximum power input: 30 mW
- Sensitivity: 118 dB (1K Hz)
- Driver type: Dynamic

Connectivity

- Microphone: Built-in microphone
- Bluetooth version: 5.0
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Supported codec: SBC
- Type of wireless transmission: Bluetooth
- Headphone socket: 3.5 mm

Outer Carton

- Length: 22.1 cm
- Number of consumer packagings: 3
- Width: 18.5 cm
- Gross weight: 1.282 kg
- Height: 25 cm
- GTIN: 1 48 95229 11756 0
- Nett weight: 0.714 kg
- Tare weight: 0.568 kg

Convenience

- Volume control
- Water resistance: IP55
- Type of controls: Button

Power

- Rechargeable
- Number of batteries: 1 pcs
- Music play time: 35 hour(s)
- Talk time: 35 hr
- Charging time: 2 hour(s)
- Fast charging time: 15 mins for 2 hrs

- Battery weight (Total): 6.75 g
- Battery capacity(Headphones): 350 mAh
- Battery type(Headphones): Lithium Polymer (built-in)

Packaging dimensions

- Height: 23.7 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 19.5 cm
- Depth: 5.5 cm
- Number of products included: 1
- EAN: 48 95229 11756 3
- Gross weight: 0.363 kg
- Nett weight: 0.238 kg
- Tare weight: 0.125 kg

Product dimensions

- Height: 19.9 cm
- Width: 17.2 cm
- Depth: 5 cm
- Weight: 0.214 kg

Accessories

- Quick Start Guide
- Charging cable: USB-C cable, 500 mm

Design

- Color: Black
- Wearing style: On-ear
- Foldable design: In-ward
- Ear coupling material: Fabric
- Ear fitting: On-ear
- Earcup type: Closed-back

Telecommunication

- Microphone for call: 1 mic

UPC

- UPC: 8 40063 20175 0



Issue date 2024-06-04

Version: 8.2.3

EAN: 48 95229 11756 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com