




Philips  
Wireless sports  
headphones

Washable ear-cup cushions  
Lightweight and rugged  
IP55 dust/water protection

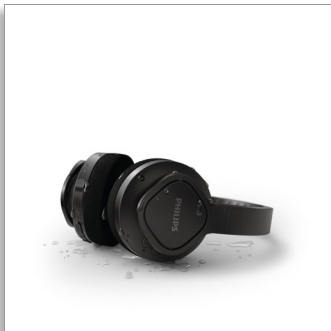

TAA4216BK

## Stay active. Feel fresh. Rock out.

These tough, lightweight wireless on-ear headphones are built for active lifestyles. Removable and washable ear-cup covers keep you comfortable whether you're hitting the treadmill or the beach. 35 hours play time keeps the music going.

### **Rugged, cool, light.**

- Go further. 35 hours play time
- For sports or on the go. Washable ear-cup cushions
- IP55 dust/water protection
- Cooling ear cups

### **From workout playlist to vital call**

- Powerful 40 mm neodymium drivers
- Clear sound and powerful bass
- Your tunes stay yours. Closed-back design
- Charge for 15 minutes, get 2 hours extra play time

### **From the park to the streets to the beach**

- Easy storage. Compact-folding design
- Multi-function button. Built-in mic. Easy pairing
- Compatible with an audio cable (3.5 mm jack)

# PHILIPS

Wireless sports headphones  
Washable ear-cup cushions Lightweight and rugged, IP55 dust/water protection

TAA4216BK/00

## Highlights

### 35 hours play time



With 35 hours play time from a single charge, these wireless on-ear headphones are with you while you train-and beyond. A full charge takes less than 2 hours. Need an extra boost? 15 minutes charging gives you 2 hours more play time.

### Washable ear-cup cushions



The soft, breathable ear-cup cushion sleeves are detachable for easy cleaning and are filled with cooling gel. No matter what you do when you're wearing these headphones, you'll always be able to get them feeling fresh again!

### IP55 dust/water protection



An IP55 rating means your headphones are as happy on dusty trails as they are in heavy rain. However hard you sweat-and wherever you go-nothing will stop you!

### Closed-back design

Perfectly tuned 40 mm neodymium drivers deliver the bass to keep you going. The closed-back construction delivers great passive noise isolation. You get to pump up your tunes without annoying others.

### Compact-folding design

The sleek design looks great whether you're going for your personal best or having fun on a weekend break. Inward-folding ear cups make storage easy.

### Easy control and pairing

The multi-function button lets you pause your playlist, take calls, control volume, and wake your phone's voice assistant. The headphones are ready to pair the instant you switch on Bluetooth. Once they're paired, they remember the last device they were paired with.

### 3.5 mm audio port

The 3.5 mm audio port lets you connect these sports headphones directly to compatible phones or music players. Perfect for those times when the battery is running low and you don't have a way to charge your headphones.

## Specifications

### Sound

- Impedance: 32 Ohm
- Speaker diameter: 40 mm
- Sensitivity: 118 dB (1K Hz)
- Frequency range: 20 - 20,000 Hz
- Maximum power input: 30 mW
- Driver type: Dynamic

### Telecommunication

- Microphone for call: 1 mic

### Connectivity

- Bluetooth version: 5.0
- Supported codec: SBC
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Type of wireless transmission: Bluetooth
- Headphone socket: 3.5 mm
- Microphone: Built-in microphone
- Wireless

### Convenience

- Water resistance: IP55
- Type of controls: Button
- Volume control

### Design

- Color: Black
- Foldable design: In-ward
- Wearing style: On-ear
- Ear coupling material: Fabric
- Ear fitting: On-ear
- Earcup type: Closed-back

### Power

- Music play time: 35 hr
- Talk time: 35 hr
- Battery type(Headphones): Lithium Polymer (built-in)
- Battery capacity(Headphones): 350 mAh
- Charging time: 2 hr
- Fast charging time: 15 mins for 2 hrs
- Number of batteries: 1 pcs
- Battery weight (Total): 6.75 g
- Rechargeable

### Accessories

- Charging cable: USB-C cable, 500 mm
- Quick Start Guide

### Outer Carton

- Number of consumer packagings: 3
- GTIN: 1 48 95229 11756 0
- Gross weight: 1.282 kg
- Outer carton (L x W x H): 22.1 x 18.5 x 25 cm
- Nett weight: 0.714 kg
- Tare weight: 0.568 kg

### Packaging dimensions

- EAN: 48 95229 11756 3
- Packaging dimensions (W x H x D): 19.5 x 23.7 x 5.5 cm
- Gross weight: 0.363 kg
- Nett weight: 0.238 kg
- Number of products included: 1
- Packaging type: Box
- Tare weight: 0.125 kg
- Type of shelf placement: Hanging

### Product dimensions

- Product dimensions (W x H x D): 17.2 x 19.9 x 5 cm
- Weight: 0.214 kg

### UPC

- UPC: 8 40063 20175 0



Issue date 2022-10-20

Version: 8.2.3

12 NC: 8670 001 73894  
EAN: 48 95229 11756 3

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)