




Philips ActionFit  
Earhook Headphones

ActionFit  
Orange & Grey

SHQ3000

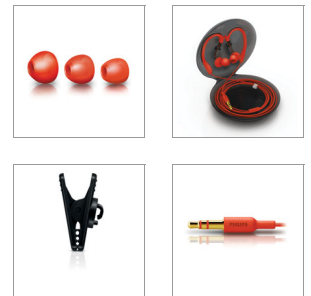

## Tuned for sports

with adjustable fit

Constructed with water proof materials coupled with an anti bacterial agent that helps kill germs, these headphones have been designed for the fitness enthusiast

### Innovation for Athletes

- Customizable ear hooks
- Ultra-soft silicon caps sit comfortably in your ears
- A 1.2m long cable that is ideal for outdoor use

### Designed for active use

- Washable
- Sweat proof
- Cable clip

### Energize you

- Bass thumping stereo sound - fuel for your workout
- Sound Isolation headphones to minimize environmental noise
- Keep track to your fitness regimen via free ActionFit app

**PHILIPS**

# Highlights

## Washable




Constructed with water proof materials allowing you to wash your headphones under running tap water

## Sweat proof



Designed with a water resistant seal to protect your headphones from sweat related damage

## Customizable ear hooks



Customizable ear hooks for enhanced fit - designed for sports

## Bass thumping stereo sound

Acoustics finely tuned to enhance the sporting experience - fuel for your workout

## 3-size ultra-soft silicon caps



The 3 sizes of ultra-soft silicon caps of these Philips earphones sit comfortably in your ears without adding pressure to them whilst blocking out unwanted noise.

## Cable clip



Clip helps fix cable securely

## Sound Isolation




With sound isolation, you will hear and enjoy greater music details at a lower volume than is

possible with normal headphones. Based on thorough understanding of the human ear canal anatomy, the sound isolation earphone's angled acoustic design creates a perfect seal between the ambient sound source and the ear canal, thus eliminating unwanted background noise while delivering sound directly to your ears. Even at a moderate volume setting, you can still discern music details without noise distractions from the environment. Earphone sleeves are available in three sizes to provide the best fit.

## 1.2m cable

The ideal cable length to give you the freedom to put your audio device where you want.

## Free ActionFit application

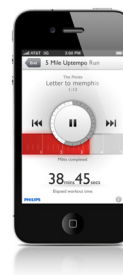

Keep track of your fitness regimen with this smart, simple and free app - created by Philips just for you. The ActionFit app lets you create customized workouts that include time, distance and calorie goals - and you can even assign your favorite music to each target. Once you've completed your workout, use the app to share your results with friends on Twitter and Facebook. You'll need GPS for your distance and calorie goals, so download it for free from the App Store - and you're good to go!

# Specifications

## Sound

- Diaphragm: Mylar dome
- Frequency response: 15 - 22 000 Hz
- Impedance: 16 ohm
- Magnet type: Neodymium
- Maximum power input: 20 mW
- Sensitivity: 102 dB
- Speaker diameter: 9 mm
- Type: Dynamic
- Voice coil: CCAW

## Connectivity

- Cable Connection: two-parallel, symmetric
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: gold-plated
- Type of cable: OFC

## Accessories

- Included: transport case

## Packaging dimensions

- Packaging dimensions (W x H x D):  
9.5 x 17.5 x 3.5 cm
- Nett weight: 0.023 kg
- Gross weight: 0.07 kg
- Tare weight: 0.047 kg
- Number of products included: 1
- Packaging dimensions (W x H x D):  
3.7 x 6.9 x 1.4 inch

- Gross weight: 0.154 lb
- Nett weight: 0.051 lb
- Tare weight: 0.104 lb
- UPC: 6 09585 19304 8
- Packaging type: Box

## Outer Carton

- Outer carton (L x W x H): 38.8 x 25.6 x 24.8 cm
- Nett weight: 0.552 kg
- Gross weight: 2.464 kg
- Tare weight: 1.912 kg
- Number of consumer packagings: 24
- Gross weight: 5.432 lb
- GTIN: 1 06 09585 19304 5
- Outer carton (L x W x H): 15.3 x 10.1 x 9.8 inch
- Nett weight: 1.217 lb
- Tare weight: 4.215 lb

## Inner Carton

- Inner carton (L x W x H): 18.3 x 11.7 x 10.4 cm
- Nett weight: 0.069 kg
- Gross weight: 0.258 kg
- Tare weight: 0.189 kg
- Number of consumer packagings: 3
- Gross weight: 0.569 lb
- GTIN: 2 06 09585 19304 2
- Inner carton (L x W x H): 7.2 x 4.6 x 4.1 inch
- Nett weight: 0.152 lb
- Tare weight: 0.417 lb



Issue date 2014-03-14

Version: 2.0.4

12 NC: 8670 000 65435  
UPC: 6 09585 19304 8

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)