

Philips
DVD home theatre system



HTS3264D



Powerful home theatre

with dock for iPod included

Indulge in stunning home entertainment with powerful multi-channel surround sound delivered effortlessly by this system. Also enjoy the convenience of playback from USB drives, portable media players and practically any type of disc.

Connect and enjoy multiple sources

- Dock included for iPod
- USB Link plays photos and music from USB flash drives
- MP3 Link plays music from portable media players

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- Dolby Digital and Pro Logic II surround sound

Easy to set up and use

- Easy-fit™ connectors with colour-coding for a simple setup


Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

PHILIPS
sense and simplicity

Highlights

USB Link

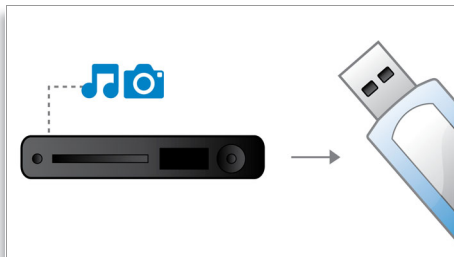

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Link, all you have to do is plug in your USB device, select the photo or music, and play away.

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

12-bit/108 MHz video DAC




12-bit video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

Easy-fit™ connectors

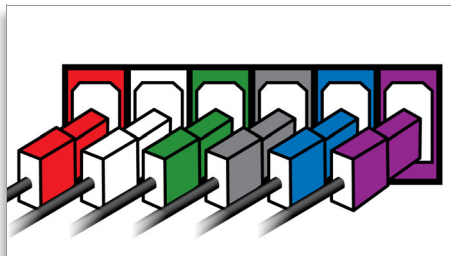

Colour-coded connectors provide a simple and user-friendly solution for connecting the speakers and subwoofer to the centre unit of the home entertainment system simply by plugging the connectors into the matching coloured interface at the rear of the centre unit.


Dolby Digital and Pro Logic II

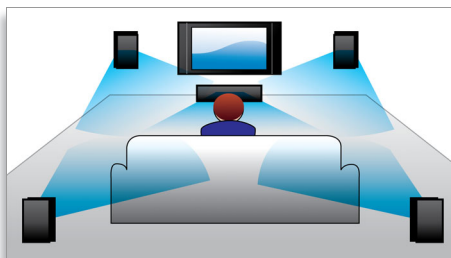

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all


six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Plays it all

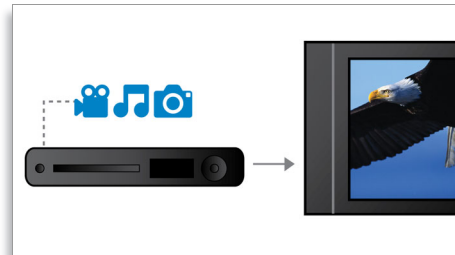

Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

Plays it all

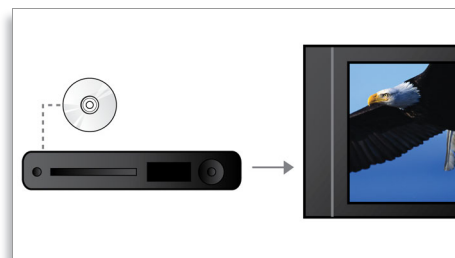

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.



Specifications

Picture/Display

- D/A converter: 12bit, 108MHz
- Picture enhancement: Progressive Scan

Sound

- Total Output Power: 600 W
- Output power (RMS): 4x75W, 2x150W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: > 60 dB
- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Lounge, Rock, Sports
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode

Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: PAL, NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD-R/-RW, CD, CD-R, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/-RW, USB flash drive
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/reception/transmission

- Tuner Bands: FM
- No. of preset Audio Channels: 40

Connectivity

- Rear Connections: Component Video output, Composite video (CVBS) output, FM Antenna, AUX in, Easy-Fit speaker connectors
- Front/Side connections: MP3 Line-in, USB

Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 100 W

Loudspeakers

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded
- Centre speaker drivers: 3" full-range woofer
- Centre speaker impedance: 8 ohm
- Centre freq range: 150-20,000 Hz
- Subwoofer driver: 6.5" high-efficiency woofer

- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 45-150 Hz

Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, User manual, Quick start guide, World Wide Warranty leaflet, Dock for iPod, Product Registration Card

Dimensions

- Set dimensions (W x H x D): 360 x 58 x 332 mm
- Set weight: 2.8 kg
- Surround Speaker dimensions (W x H x D): 103 x 203 x 71 mm
- Surround Speaker Weight: 0.45 kg
- Center speaker dimensions (W x H x D): 244 x 105 x 74 mm
- Centre Speaker Weight: 0.78 kg
- Subwoofer dimensions (W x H x D): 123 x 310 x 369 mm
- Subwoofer Weight: 3.85 kg
- Packaging dimensions (W x H x D): 446 x 417 x 378 mm
- Weight incl. Packaging: 12.5 kg

Outer Box

- Gross weight: 12.13 kg
- Gross weight: 26.742 lb
- Outer carton (L x W x H): 17.6 x 14.9 x 16.4 inch
- Outer carton (L x W x H): 44.6 x 37.8 x 41.7 cm
- Net weight: 10.41 kg
- Net weight: 22.950 lb
- Number of consumer packages: 1
- Tare weight: 3.792 lb
- Tare weight: 1.72 kg
- UPC: 6 09585 14690 7

Packaging dimensions

- Packaging dimensions (W x H x D): 44.6 x 41.7 x 37.8 cm
- Packaging dimensions (W x H x D): 17.6 x 16.4 x 14.9 inch
- Gross weight: 12.13 kg
- Gross weight: 26.742 lb
- Net weight: 22.950 lb
- Net weight: 10.41 kg
- Number of products included: 1
- Packaging type: Box
- Tare weight: 3.792 lb
- Tare weight: 1.72 kg
- UPC: 6 09585 14690 7

Product dimensions

- Cable length: 0 cm
- Cable length: 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 lb
- Weight: 0 kg



Issue date 2009-05-23

Version: 3.0.7

12 NC: 8670 000 36289
UPC: 6 09585 14690 7

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com