

# PHILIPS



## Open-ear wireless sports headphones

Open-ear fit

Bone conduction

Clearer calls on the go

LED safety lights



TAA5608BK

## You move, they won't

Hit that rhythm with the wireless headphones that won't fall off no matter how you move! These open-ear sports headphones are super light, super comfortable and tough. Plus, they let you hear everything that's happening around you.

### Open-ear headphones. You move, they won't.

- Open-ear fit. Move it like you mean it
- Bone conduction. Sound without earphones
- Clearer calls on the go. They'll hear you, not the noise

### Always ready. Always yours.

- Charge for 15 minutes, get an extra hour
- Philips Headphones app
- Ready for you. 6 hours of play time
- Carry pouch included


### For your kind of active life

- Be seen. LED safety lights
- Get out there. IPX5 water resistant
- Better connectivity. Next-generation Bluetooth\*




# Highlights

## Open-ear fit

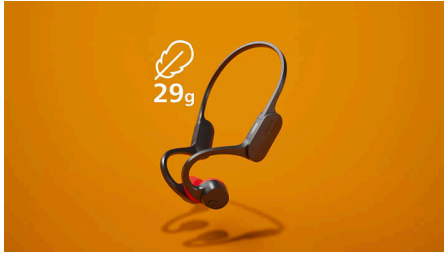


Run, jump, ride! These open-ear headphones won't fall off when you get moving. The neckband wraps around the back of your head and loops over the top of your ears to hold them comfortably in place: they won't move, even when you go for it. Plus, they're so light you'll barely feel them.

## Bone conduction

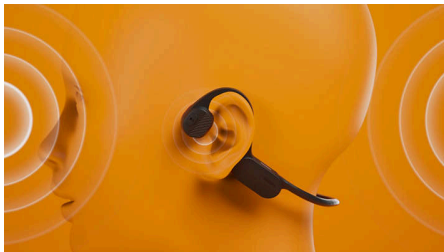


Bone conduction technology transmits sound through the bones of your skull, which means you don't need to put earbuds in your ears or wear headphones that cover your ears. Instead, the sound travels from your cheekbones directly to the inner ear — and your music magically appears in your head!

## Clearer calls on the go

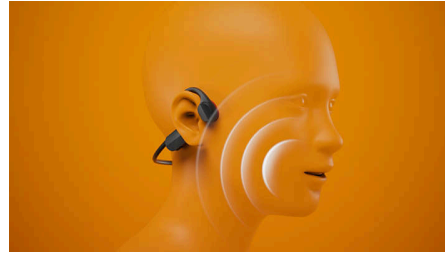


When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of the people next to you!

## Safety LED lights

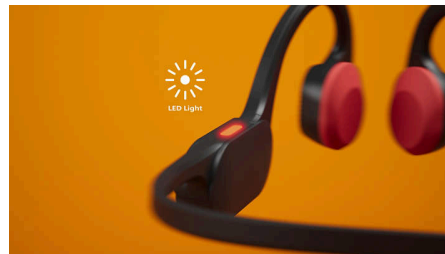

Run at night. Hike a mountain trail at dusk. Or cycle in the woods. LEDs on the frame mean that you'll stay visible in dim environments. You can control the LEDs via the Philips Headphones app or via the on/off button on the frame.

## IPX5 water resistant

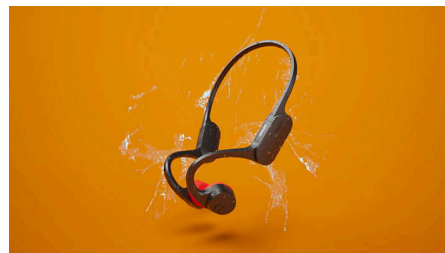

An IPX5 rating means that these open-ear headphones don't mind a drop of rain or even a downpour, so they'll never give you an excuse to


stay on the sofa! If you get a sweat on in the gym, they won't mind that either. When you're done and the headphones are dry, store them in the soft carry pouch.

## Next-generation Bluetooth\*



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec\* to give you a steadier connection wherever you are. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag when watching films or gaming.

## 6 hours of play time

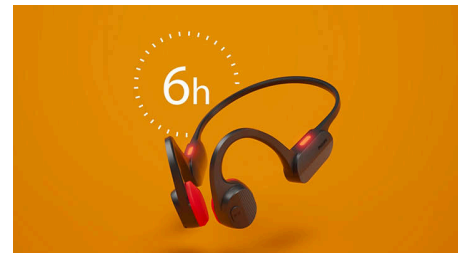

Pick up, rock on. With 6 hours of play time from a single charge, these bone-conducting, open-ear headphones are good to go for multiple workouts. A full charge takes just 2 hours. For a quick extra boost, just 15 minutes of charging gives you an extra hour of play time.

## Philips Headphones app

The Philips Headphones app lets you control the LED lights and puts you in charge of the music you're listening to.



# Specifications

## Sound

Frequency range: 130–16 000 Hz  
Speaker diameter: 15 mm  
Impedance: 8 Ohm  
Maximum power input: 300 mW  
Sensitivity: 88 dB (1 kHz)  
Driver type: Dynamic

## Connectivity

Bluetooth version: 5.3  
Bluetooth profiles: A2DP, AVRCP, HFP  
Maximum range: Up to 10 m  
Supported codec: SBC

## Outer Carton

Length: 20.2 cm  
Number of consumer packages: 3  
Width: 18.5 cm  
Gross weight: 0.941 kg  
Height: 19.5 cm  
GTIN: 1 48 95229 13148 1  
Net weight: 0.192 kg  
Tare weight: 0.749 kg

## Convenience

Volume control  
Water resistance: IPX5  
Philips Headphones app support  
Firmware updates possible  
Type of controls: Button  
LED safety lights

## Power

Number of batteries: 1 pcs  
Music play time: 6 hour(s)  
Charging time: 2 hour(s)  
Fast charging time: 15mins for 1 hr  
Battery weight (Total): 3 g  
Battery capacity (Headphones): 140 mAh  
Battery life standby time: 80 hr  
Battery type (Headphones): Lithium Polymer (Built-in)

## Packaging dimensions

Height: 19.8 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 17 cm  
Depth: 6.1 cm  
Number of products included: 1  
EAN: 48 95229 13148 4

Gross weight: 0.221 kg  
Net weight: 0.064 kg  
Tare weight: 0.157 kg

## Product dimensions

Height: 4.73 cm  
Width: 12.94 cm  
Depth: 10.05 cm  
Weight: 0.029 kg

## Accessories

Others: 1 pcs soft pouch  
Quick Start Guide  
Charging cable: USB-C charging cable, 200 mm

## Design

Colour: Black  
Ear fitting: Bone-conducting  
In-ear fitting type: Open fit

## Telecommunication

Microphone for call: 2 AI mics

## UPC

UPC: 8 40063 20308 2

