



Philips
DVD player

DVP3000



See, hear, play everything

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- High quality outputs for analog and digital audio

Play it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

PHILIPS

Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Smart Picture Setting, 3/2 - 2/2 motion pull down

Sound

- D/A converter: 24 bit, 96 kHz
- Signal to noise ratio: 95 dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 85 dB
- Sound System: Dolby Digital
- Frequency response: 30 - 20 000 Hz

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode), DVD-Video, CD-R
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, CD-R, MP3-CD, CD-RW
- Compression format: PCM, MP3
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow, Flip photos,

Rotate, Zoom

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Polish, Russian

Power

- Power consumption: 10 W
- Standby power consumption: < 0.8 W
- Power supply: 50Hz, 220-240V

Accessories

- Batteries: 2 x AA
- Cables: 1 x AV Cables
- Remote control: 3141 017 90221
- Warranty Card
- User Manual: Russian

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 265 mm
- Set weight: 1.98 kg
- Packaging dimensions (W x H x D): 415 x 82 x 352 mm
- Weight incl. Packaging: 2.98 kg

Connectivity

- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out

Highlights

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music


Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Ultra-slim design

The attractive enclosure has a very low profile.

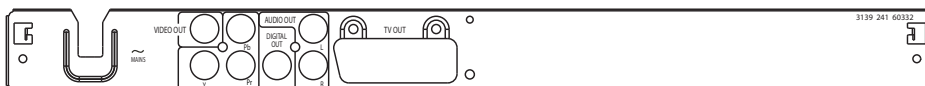

Issue date 2014-02-10

Version: 1.0.4

12 NC: 8622 810 12884
EAN: 87 10895 92666 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com