




Philips
docking speaker

for iPod/iPhone
Rechargeable battery

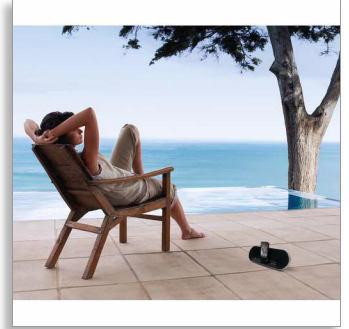

DS7550



Designed to travel the world with you

with this docking speaker

Compact and very portable, this DS7550/10 is no lightweight when it comes to sound performance. Designed to travel, it has a long-play rechargeable battery, robust aluminum finish and a carrying case. Enjoy great music wherever you are.

Sound that blows you away

- wOOx technology for rich yet precise bass without distortion
- DBB to preserve low tones for deep bass at any volume level
- Shielding technology to block mobile phone interference

Made to go places

- Elegant, slim and compact design to fit into any briefcase
- Robust aluminum finish and cover case for full protection

Truly portable and versatile

- Built-in rechargeable Li-ion battery for long music playback
- Battery or AC power option for music enjoyment anywhere
- Dock any iPod/iPhone, even in its case
- AUX-in for easy connection to almost any electronic device
- Free DockStudio app for internet radio & other cool feature

Docking speaker
for iPod/iPhone Rechargeable battery

Specifications

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32GB, iPod with color display, iPod 5th generation

iPod/iPhone App

- App name: DockStudio
- Free download from App store
- Compatibility: iPhone OS 3.0
- Playback: album/track navigation, playback controls
- Sound settings: DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer, wake up to music, wake up to nature sounds, wake up to photo
- Battery status: speaker battery status

Connectivity

- Aux in



Sound

- Sound enhancement: Dynamic Bass Boost, wOOx™ Technology
- Sound system: stereo
- Volume control: up/down
- Output power: 10 W RMS

Loudspeakers

- Speaker drivers: Neodymium magnet system

Accessories

- Cables/Connection: MP3 Link cable

Convenience

- Charging device: iPhone, iPod

Power

- Power supply: battery, 100 - 240V AC, 50/60Hz
- Battery type: lithium (built-in)
- Battery life time: 8 hr

Dimensions

- Gross weight: 1.04 kg
- Master carton weight: 2.3 kg
- Product dimensions (WxDxH): 310 x 110 x 40 mm
- Master carton dimensions: 175 x 162 x 440 mm
- Master carton quantity: 2
- Weight: 0.76 kg

DS7550/10

Highlights

wOOx technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

Dynamic Bass Boost (DBB)



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2014-07-24

Version: 8.0.3

12 NC: 8670 000 64029
EAN: 87 12581 54929 9

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com