

High fidelity sound made portable

Philips Fidelio wireless portable speaker



Obsessed with sound

Philips holds a special place within the world of audio. An admired innovator, Philips is responsible for numerous ground-breaking products including the portable radio, the compact cassette and recorder, the compact disc, and wireless Hi-Fi.

Philips' obsession with sound has taken it on a journey from bringing sound to everyone, to defining the standards of what we hear and how we experience it. Nearing its centenary in audio innovation, Philips continues to evolve the listening experience with the launch of its premium Fidelio range, offering even the most sophisticated audiophile the ultimate in sound enjoyment.

And for today's increasingly mobile lifestyle, the newest member of the Fidelio family, the Philips Fidelio wireless portable speaker, delivers uncompromised sound performance that is true to life, just as the artist intended.

Philips is and will always be obsessed with sour

Listening pleasure made portable

The Fidelio wireless portable speaker is for music lovers who want to appreciate every little detail. It delivers the perfect balance of portability and sound performance, with *Bluetooth*® which enables you to play your music wirelessly.

With best-in-class sound and a premium design for home and travel, it performs for you wherever you are. It comes in a stylish small package that will bring your music alive at home or at your next destination.

It's easy to stream your music from your iPhone, iPad, smartphone, tablet, laptop or other Bluetooth®-enabled device.





S & Ekstenn atlakti nrend

3/19/2013 4-49-55 PM







A timeless design, built to last

Sleek and good-looking, in a timeless design and built to last, these speakers exhibit all the key signatures expected from the Philips Fidelio proposition. Featuring a robust aircraft grade aluminum grille, these speakers are made with superior materials throughout, including genuine wood and leather for a quality finish.

The embodiment of modern elegance and understated sophistication, the Fidelio wireless portable speaker is designed as a stretched monoblock form factor which creates a wide stereo sound stage. So you get an attractive design with full functionality in a single speaker, and wireless convenience too.

The P8 comes with an easy to use protective pouch, whilst the P9 has an integrated leather jacket that doubles as a protective cover when traveling. The leather cover enables you to position the speaker at two different angles which are secured by magnets, for the optimal listening experience. And when you clip the cover closed, the speaker automatically turns off.

A refined listening experience

Don't think this is just another portable speaker. Philips sound technology lets you listen to truly authentic, detailed music which is clear, dynamic and hugely enjoyable. The result is a refined listening experience in a perfectly portable package.

Despite a very compact acoustic volume, the bass is solid and surprisingly deep, making it easier to enjoy all types of music. This is achieved by using a combination of one highpower 2.5" full-range speaker driver and one wOOx passive radiator, per channel. The large moving mass of the passive radiator makes it possible to tune the system to a very low frequency of 80Hz, while preventing air turbulence that may otherwise appear with a ported design.

Loudness and dynamics are great, thanks to a high performance amplifier coupled with 4 high-efficiency transducers, resulting in sound that is dynamic and impressive at all listening levels.

This portable speaker is equipped with a total of 8 highefficiency transducers: two high-power 2" woofers, one $\frac{3}{4}$ " soft dome tweeter and one wOOx large area passive radiator, per channel. Thanks to the use of soft dome tweeters, the high frequencies are very detailed and precise, resulting in very open spatial presentation. The woofers and wOOx in combination give a rich mid and low range with deep and tight bass.

The P9 uses the same high performance amplifier as the P8, with an optimized crossover filter to make sure that the sound remains as natural as possible in very different acoustic listening levels to maximum volume. Sound is clear and natural at all listening levels, so you can listen as long as you like to more of your favorite music.








Rear firing wOOx x 2

2" Woofer x 4

Smart and simple

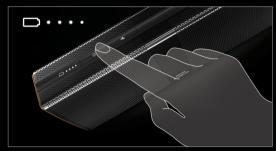

Battery level indicator



Smartphone charging

Battery level indicator

Just touch the speaker lightly and it will display the battery level.

Smartphone charging

Simply connect to the speaker and it will charge your phone for you.

Leather cover doubles as speaker stand (P9)

Optimal listening angle adjusted by the integrated cover.

Protective leather cover (P9)

Clip it closed for protection when you take it with you.

Range overview



	P8BLK	P9BLK	P9SLV	P9WHT
Bluetooth				
Power		20W		
Speaker drivers	2.5" Speaker driver × 2 Rear firing w00× × 2		2" Woofer x 4 ¾" Soft dome tweeter x 2 Rear firing w00x x 2	
		Wood, aluminum and leather		Wood, aluminum and leather
Integrated leather cover				
Rechargeable battery	8 hours			8 hours
USB port for charging				
Battery indicator level				
Audio in			√	





www.philips.com/fidelio

www.facebook.com/philipssound

© 2012 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent or other industrial or intellectual property rights.