



Philips
Mini Hi-Fi System

Bluetooth®

CD, MP3-CD, USB Direct, FM
Rip CD onto USB
1100W, Dual amplifier



FWT6600



Powerful wireless music

Obsessed with sound

Listen to all your digital music via Bluetooth. Absolute power and pure, natural sound - that's what the FWT6600 delivers, thanks to 1100W RMS/ 13000W PMPO, and UniSound. Two USB ports and dynamic lighting offer enhanced experiences.

Powerful sound you can hear and feel

- 1100W RMS total output power / 13000W PMPO
- Dual subwoofers for superb deep bass
- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- UniSound for natural and crystal-clear sound

Multiple source MP3 music

- Stream music wirelessly via Bluetooth™ from your smartphone
- Dual USB Direct for MP3 playback and transfer
- Rip music from CDs, radio and karaoke onto USB device
- Compatible with MP3-CD
- MP3 Link for portable music playback

Convenient and easy to use

- Stackable speakers for flexible placement
- Multiple color Lighting effect for your party mood enjoyment

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.


MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your


favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Rip music onto USB device

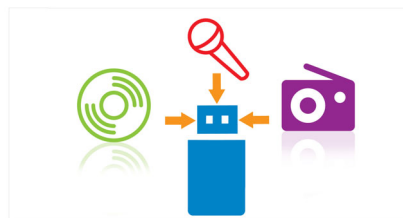

Rip music from CDs, radio and karaoke onto USB device

UniSound

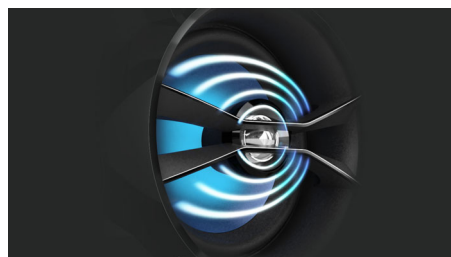

Get ready for music that is undeniably clearer and more natural. The UniSound technology harnesses acoustic design and engineering expertise to deliver sound the way it was meant to be heard. In conventional speakers, the tweeter and woofer deliver sound from

different locations. This creates strong interferences that distort sound, resulting in unnatural, flat and stifled audio. UniSound frees music by placing the tweeter and woofer in unique positions and incorporating rigorous crossover engineering, vastly reducing interference and delivering natural sound that is true to the original.

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Specifications

Sound

- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, digital sound control 4 modes, UniSound, incredible surround, virtual ambience control
- Output Power: 1100W RMS/ 13000W PMPO

Loudspeakers

- Number of speaker boxes: 4
- Speaker drivers: 2" tweeter, 6.5" woofer
- Subwoofer types: passive, 8" woofer
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Audio recording

- Recording media: USB device
- USB recording sources: CD, tuner, AUX, microphone in, USB
- USB recording modes: instant record, programmed tracks, schedule radio program, single disc, single track

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: FM, MW
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Connectivity

- MP3 Link: 3.5mm stereo line in
- Microphone: dual microphone sockets
- USB: Dual USB host
- PC in (Aux in): 2 x RCA (Audio)
- Bluetooth profiles: A2DP

Convenience

- Alarms: CD alarm, USB alarm, radio alarm
- Number of discs: 1
- Clock: on main display, sleep timer
- Display type: LCD display
- Karaoke: MIC volume

Accessories

- Remote control: 28-key with 2xAAA batteries
- Cables/Connection: MP3 Link cable
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

Dimensions

- Main speaker dimensions (W x D): 258 x 388 mm
- Main speaker height: 452 mm
- Main unit width: 220 mm
- Main unit height: 320 mm
- Main unit depth: 352 mm
- Subwoofer width: 315 mm
- Subwoofer height: 450 mm
- Subwoofer depth: 456 mm
- Packaging width: 1044 mm
- Packaging height: 689 mm
- Packaging depth: 550 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-06-13

Version: 2.0.4

12 NC: 8670 001 02971
EAN: 87 12581 68766 3© 2014 Koninklijke Philips N.V.
All Rights reserved.Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.www.philips.com* Avoid extensive use of the set in a volume higher than 85 decibel
because this may damage your hearing.