



Philips
True Wireless
Headphones

Detailed, natural sound

Noise Canceling Pro
Conversation Hearing mode
Clearer calls on the go



TAT6908BK

The earbuds that love to socialize

Enjoy your music. Love your podcasts. Do lunch. These noise-canceling true wireless earbuds give you great sound and customizable hearing modes that can help you hear face-to-face conversations better. Plus, they're super comfy.

Always ready to go

- No worries. Up to 28 hours play time with the case
- Charge for 5 minutes, get an extra hour
- Philips Headphones app. Customize hearing modes and more

Great sound and customizable hearing modes

- Warm, detailed, natural. Philips sound signature
- Immerse with Noise Canceling Pro
- Conversation Hearing mode for face-to-face chats
- Personal My Hearing mode. Take the in-app hearing test!

For your daily life

- IPX4 splash and sweat resistant
- Clearer calls on the go. They'll hear you, not the noise
- Snug, comfy fit that's right for your ears

PHILIPS


True Wireless Headphones

Detailed, natural sound Noise Canceling Pro, Conversation Hearing mode, Clearer calls on the go

TAT6908BK/00

Highlights

Noise Canceling Pro

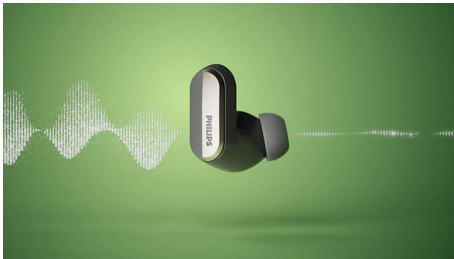

Enjoy a more immersive experience with noise canceling that blocks external noise for distraction-free listening. To hear what's going on around you, tap an earbud to activate Awareness Mode. You can adjust noise-canceling levels or turn on wind noise reduction via the Philips Headphones app.

Conversation Hearing mode




For face-to-face conversations, these earbuds can help you hear the other person better! Simply press the left earbud to activate Conversation Hearing mode or use the Philips Headphones app. Beamforming mics pick up the voice of the person in front of you while noise canceling filters out ambient sounds.

In-app hearing test




A simple hearing test in the Philips Headphones app lets you create a personal hearing mode that's tuned to the way you hear different frequencies in each ear. You can then use the app to tweak your custom profile or adjust the left and right earbuds individually at any time.

Philips Headphones app

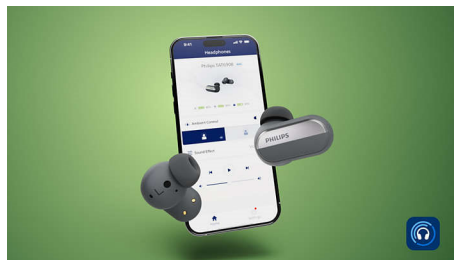

You can use the app to customize any of the hearing modes by tweaking the low, mid, or high sound frequencies for individual earbuds. Or use it to reduce how much of your own voice you hear during conversation. Time for music? Choose from four preset sound modes to suit your mood.

Clearer calls on the go

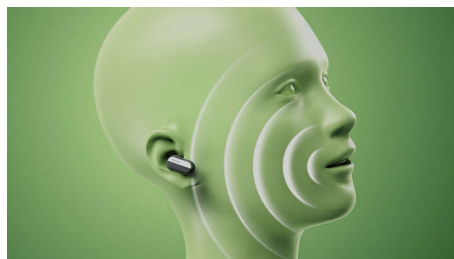

When you're on a call, beamforming mics accurately pick up the sound of your voice while

an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the noise-and with sidetone turned on, you can clearly hear your voice in the call too.

Comfy and secure



These earbuds fit snugly and are wrapped in comfy soft-touch silicone. Because no two ears are the same, you get four interchangeable sizes of flexible silicone ear tips: mix and match to get a fit that's just right for you.

Philips sound signature

Music to podcasts, you'll enjoy detailed, natural sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time.

28 hours play time with case

You get 7 hours play time and an extra 21 hours from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours: if you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

Specifications

Sound

- Frequency range: 20 - 20,000 Hz
- Speaker diameter: 10 mm
- Impedance: 16 Ohm
- Maximum power input: 10 mW
- Sensitivity: 97 dB (1k Hz)
- Driver type: Graphene coated

Connectivity

- Bluetooth version: 5.3
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: AAC, SBC
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 34.1 cm
- Number of consumer packagings: 24
- Width: 29.9 cm
- Gross weight: 4.832 kg
- Height: 30.1 cm
- GTIN: 1 48 95229 13168 9
- Nett weight: 1.728 kg
- Tare weight: 3.104 kg

Convenience

- Water resistance: IPX4
- Philips Headphones app support
- Google fast pair
- Mono mode for TWS
- Firmware updates possible
- Type of controls: Button

Inner Carton

- Length: 16 cm
- Number of consumer packagings: 3
- Width: 14 cm
- Height: 13.3 cm
- Nett weight: 0.216 kg
- Gross weight: 0.53 kg
- Tare weight: 0.314 kg
- GTIN: 2 48 95229 13168 6

Power

- Number of batteries: 3 pcs
- Charging time: 2 hour(s)
- Fast charging time: 5 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (built-in)
- Battery type(Earbud): Lithium Polymer (built-in)

- Battery weight (Total): 16.66 g
- Battery capacity(Case): 740 mAh
- Battery capacity(Earbud): 63 mAh
- Battery life standby time: 200 hr
- Music play time: 7 + 21 hr

Packaging dimensions

- Height: 13 cm
- Packaging type: Carton
- Type of shelf placement: Hanging
- Width: 11 cm
- Depth: 4.9 cm
- Number of products included: 1
- EAN: 48 95229 13168 2
- Gross weight: 0.14 kg
- Nett weight: 0.072 kg
- Tare weight: 0.068 kg

Accessories

- Quick Start Guide
- Eartips: 4 pairs
- Charging case
- Charging cable: USB-C cable, 200 mm

Design

- Color: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

Telecommunication

- Microphone for call: 2 mics (AI+NR)

Dimensions

- Charging case dimension(WxDxH): 6.50 x 3.00 x 4.00 cm
- Earbud dimension(WxDxH): 2.40 x 2.90 x 2.20 cm
- Total weight: 0.052 kg

UPC

- UPC: 8 40063 20312 9

ANC features

- ANC technology: Hybrid, ANC Pro
- Awareness mode
- ANC (Active Noise Canceling)

Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-06-04

Version: 2.0.2

EAN: 48 95229 13168 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com