



Philips Fidelio  
Headphones with mic

### High resolution audio

In-ear  
Ultra-soft silicone caps  
Flat cable



S1SB

## High fidelity, premium quality

Wherever you go

Philips Fidelio S1 headphones are precisely engineered to deliver natural, balanced sound, revealing every details as the artist intended. Amazing sound presented in a lightweight yet durable design for true comfort and pleasure on the go.

#### Designed for precision

- High Resolution audio reproduces music in its purest form
- High-powered 13.5mm neodymium drivers for exceptional sound
- Semi-closed back design for sound balance and bass extension
- Engineered metal housing reduces vibration and resonance
- Handpicked, tuned and tested drivers for a precise match

#### Listen in comfort

- Lightweight aluminum housing with refined brushed finish
- Ergonomic earphones fit perfectly while dispersing pressure
- Elasticized ring for in-ear stability and super secure fit
- Comply™ Foam Tips for superb custom fit and noise isolation
- Ultra-soft silicone tips in 3 sizes for a custom, snug fit

#### Created for convenience

- Switch between music and calls with in-line control and mic
- Durable flat cable keeps your headphones tangle free

**PHILIPS**  
Fidelio

Headphones with mic  
High resolution audio In-ear, Ultra-soft silicone caps, Flat cable

S1SB/00

# Highlights

## 13.5mm neodymium drivers



Each speaker driver is carefully hand picked, tuned and tested before being paired to ensure delivery of the most balanced, natural sound. The 13.5mm drivers utilize high power neodymium magnets to deliver deep bass impact, transparent mid-range and refined high frequencies.

## Handpicked, tuned and tested



Each speaker driver is specially tested and hand picked as ideal stereo pairs, together delivering superbly deep bass, transparent mid-range and refined high frequencies.

## Elasticized ring

Elasticized ring for in-ear stability and super secure fit

## Engineered metal housing



The metal housing is meticulously engineered to reduce resonance and vibration, delivering authentically precise sound marked by incredible sound detail.

## Ergonomic earphones



The Fidelio S1 earphones are ergonomically shaped to fit your ear's natural curve, all the while dispersing pressure. Its lightweight aluminum construction and superior materials ensure long-lasting comfort, allowing you to experience true comfort as you enjoy your music to the fullest.

## Lightweight aluminum housing




Lightweight aluminum housing with refined brushed finish

## Soft and durable flat cable


Durable flat cable keeps your headphones tangle free

## In-line control and mic

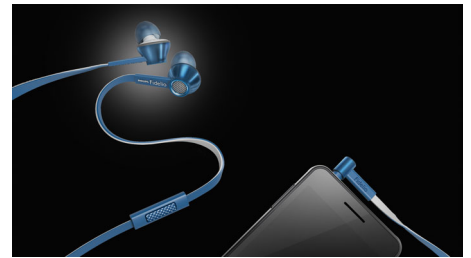

The Fidelio S1 in-ear headphones feature an in-line remote and microphone so you can switch easily between your music and calls. Stay connected with important people – and your music, always.

## 3 sizes of soft silicone tips

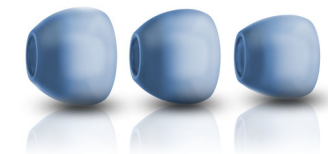

The Fidelio S1 in-ear headphones come with 3 pairs of acoustically sealed silicone tips to ensure a snug fit as well as longer wearing comfort.

# Specifications

## Sound

- Frequency response: 5 - 40 000 Hz
- Sensitivity: 107 dB
- Speaker diameter: 13.5 mm
- Maximum power input: 40 mW
- Impedance: 32 ohm
- Acoustic system: Semi-closed

## Connectivity

- Cable Connection: 3.5mm 4 pole (1.2M)
- Compatible with: iPhone®, BlackBerry®, HTC, LG, MOTOROLA, Sony, Nokia\*, SAMSUNG\*.  
\*Extra connector available through customer support for Sony Ericsson, older models from NOKIA and SAMSUNG

## Accessories

- Storage pouch



Issue date 2016-03-09

Version: 6.0.4

12 NC: 8670 001 08921  
EAN: 06 92341 07245 92

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)