



Philips  
Wireless speaker

**Bluetooth®**  
16 W Output Power  
12 hours play time  
IPX7 waterproof



TAS5305



## Bring the party

Bring the music anywhere with the waterproof Bluetooth speaker that's ready to party! You get 12 hours of play time and vibrant sound with punchy bass. Coloured LEDs put on a light show for your tunes. Audio-in lets you connect other sources.

### **12 hours of play time. Tough and IPX7 waterproof.**

- Waterproof and ready to go
- Party on with 12 hours play time
- Two passive radiators boost the bass
- 2 x 1.75" full-range drivers. Vibrant sound
- Anti-clipping function. Turn it up without distortion

### **Play what you love. Wherever you are.**

- Audio-in. Connect to almost any source
- Built-in mic for hands-free calls
- Bluetooth 5.0. Up to 20 m wireless range
- Easy to pair

### **Take the party anywhere**

- Blaze to the beat. LED lights
- Dimensions: 190 x 80 x 80 mm
- Pair with an identical speaker for stereo sound

# PHILIPS

Wireless speaker  
Bluetooth® 16 W Output Power, 12 hours play time, IPX7 waterproof

## Specifications

### Compatibility

- Smartphone/tablet APP control
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

### Sound

- Output power (MAX): 32 W
- Output power (RMS): 16 W
- Sound System: Stereo
- Frequency response: 100 Hz – 20 KHz

### Loudspeakers

- Number of sound channels: 2
- Driver configuration: Full range
- Number of full-range drivers: 2
- Full-range driver diameter: 44 mm
- Passive radiators: 2

### Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20 m or 66 ft
- Bluetooth version: 5.0
- Audio Connections: 3.5 mm Line in
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo
- Multiple speaker technology: TWS
- USB: Type-C

### Convenience

- Water resistance: IPX7
- Ease of Installation: Automatic pairing
- Volume control: Digital up/down
- Built-in microphone
- Hands-free calling
- Call Management: Answer/End Call
- Automatic power off
- Display screen: No
- Light Effect

### Power

- Power LED indicator: Blue
- Battery type: Lithium-ion (built-in)
- Battery Capacity: 2600 mAh, 7.4 V
- Operating time on battery: 12 hr
- Charging time: 6 hr
- Power bank: No

### Accessories

- 3.5 mm audio cable
- Cable: USB charging cable
- Included accessories: Quick install guide, World Wide Warranty leaflet, Warranty Card

### Design and finishing

- Colour: Black

### Product dimensions

- Product dimensions (W x H x D): 19 x 8 x 8 cm
- Product dimensions (W x H x D): 7.5 x 3.1 x 3.1 inch
- Weight: 1.323 lb
- Weight: 0.6 kg

### Packaging dimensions

- Packaging dimensions (W x H x D): 23.8 x 10.3 x 11 cm
- Packaging dimensions (W x H x D): 9.4 x 4.1 x 4.3 inch
- Gross weight: 1.764 lb
- Gross weight: 0.8 kg
- Net weight: 0.6 kg
- Net weight: 1.323 lb
- Number of products included: 1
- Packaging type: Box
- Tare weight: 0.2 kg
- Tare weight: 0.441 lb
- EAN: 48 95229 10221 7

TAS5305/00


## Highlights

### Waterproof and ready to go




This portable Bluetooth speaker is IPX7-rated—which means it can withstand total immersion in water up to 1 m deep for up to 30 minutes. You can party in the shower, by the pool or even in the pool! The wireless range is 20 m.

### Party on with 12 hrs of play time

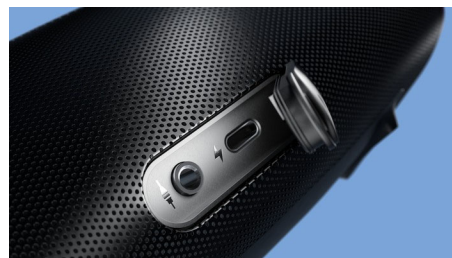

Sound stays clear even when you play the music loud and a passive radiator boosts the bass. You get 12 hours of play time and a full charge takes 6 hours. Want to make the party even bigger? Pair with an identical speaker for stereo sound.

### Blaze to the beat. LED lights

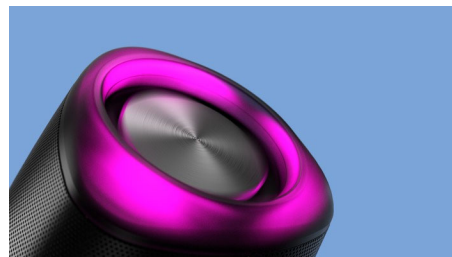

When the party's pumping, so is the light show. LED lights at each end of the speaker flash to the tunes.

### Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.

### Easy to pair

Connecting to your Bluetooth device is simple. One short press on the Bluetooth button and the speaker is ready to pair.



Issue date 2022-05-09

Version: 5.3.2

12 NC: 8670 001 62842  
EAN: 48 95229 10221 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)