


Philips  
Portable DVD Player



PET1000

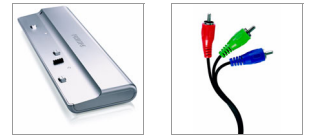

## Enjoy DVD and digital videos

with hi-resolution 25.9 cm (10.2") LCD display

For pure entertainment on the go! The PET1000 plays DVD movies on a high-resolution 25.9 cm (10.2") LCD screen. Enjoy multi-media ease with MPEG4 and DivX digital media format. High-quality S-video and component video output available.

### Immerse in AV entertainment on the go

- High-resolution 10.2" TFT LCD display for great viewing
- Play, DVD, DVD+R and DVD+RW
- DivX playback for high compression video
- MPEG4 playback ensures high-quality compressed video
- Plays CD-RW and MP3-CD
- Watch movies in 16:9 widescreen format

### Multiple sources for more choices

- S-Video output for better picture performance
- Component video output for the best analog video connection
- Line-in connection

### The ultimate in convenience

- Sleek design in high gloss finishing
- Car adaptor and handy remote control included
- Up to 2.5-hour playback with rechargeable battery

# PHILIPS

# Highlights

## DivX playback

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX CDs can be played back on selected DVD players, DVD Recorders and Home Theater Systems.

## MPEG4 playback

MPEG4 is a compression standard allows you to record movies at up to seven to 10 times smaller than the MPEG2 standard without compromising on the picture and sound quality. MPEG4 media can be saved on a CD-Rom, memory card or DVD disc and can be played back in selective DVD players, DVD recorder and Home theater systems.

## S-Video output

The ideal way to connect high-resolution picture sources like DVD, Digital Satellite &

Cable TV and video game consoles to TV set, for better detail than standard video outputs

## Component Video Output

YPbPr Component Video is a top-quality video connection ideal for connecting DVD players or recorders to high-end TV sets. It uses three separate wires for the luminance and colour difference signals to prevent interference. Because the video signal on the DVD disc is also stored in YPbPr format, no conversion steps are needed to generate the output signal.



# Specifications

## Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polarizer
- Diagonal screen size (inch): 10.2 inch
- Resolution: 800(w)x480(H)x3(RGB)
- Brightness: 450 cd/m<sup>2</sup>
- Contrast ratio (typical): 300:1
- Effective viewing area: 222.0X133.2mm
- Pixel pitch: 0.1905(w)x0.1905(H)mm
- Response time (typical): 18 ms

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, DVD+RW, DVD+R, Picture CD, SVCD, Video CD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, MPEG4
- Disc Playback Modes: OSD, A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps

## Connectivity

- AV output: Composite (CVBS) x1
- AV input: Composite (CVBS) x1
- Audio Output - Digital: Coaxial (cinch)
- Connector: 2 x 3.5 mm Headphones
- DC in: 9V
- Other connections: S-Video out, Component Video out Interlaced
- Power: 30W
- Audio Output - Analog: Audio L/R (cinch)

## Convenience

- Shock proof
- Battery charging indication

## Accessories

- Battery pack: DV 7.4V, Li-ion rechargeable batteries
- AC/DC Adaptor: ADPV18A(110-120v, 50/60Hz)
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: RC810(credit card style, 38 keys)
- Cables: A/V cable x1, S-video cable x1, Component video cable x1
- User Manual: Eng, Spa, Fre

## Dimensions

- Master carton dimensions: 388 x 388 x 256 mm
- Master carton quantity: 2
- Packaging dimensions (W x H x D): 370 x 245 x 78 mm
- Packaging type: D-box, Clamshell
- Product dimensions (W x H x D): 260 x 30 x 180 mm
- Product weight: 1.2 kg



Issue date 2014-02-11

Version: 4.0.7

12 NC: 9073 101 02036

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.