

# PHILIPS



## Sleep headphones

Soft, thin sleep buds

Intelligent noise masking

Sleep monitoring

Kokoon companion sleep app



TAN7808GY

## Start your journey to better sleep

Get your best sleep yet with the wireless sleep buds that help you fall asleep and stay asleep! Biosensors gently fade the audio as you drift off, and noise is masked as you slumber. Relax to specialist sleep sounds or your own playlists.

### Soothing sounds for restful nights

- Intelligent noise masking masks disturbances as you sleep
- Bluetooth connectivity lets you stream from any source
- Balanced-armature drivers for clear sound
- Control unit on the neckband that's easy to reach

### Sleep headphones. Get your best sleep yet!


- In-ear sleep buds developed with sleep specialists Kokoon
- 5 sizes of soft silicone ear tips for the perfect fit
- World's thinnest earbuds.\* Perfect for side sleepers!
- Kokoon companion app. Specialist sleep audio and insights
- Biosensors fade out audio and let you monitor your sleep

### Take control of your rest with sleep tracking

- Better sleep, better days with sleep tracking
- Up to 10 hours of play time and easy USB-C charging
- Relax and catch up. Clear calls via the headphones


# Highlights

## World's thinnest sleep buds\*

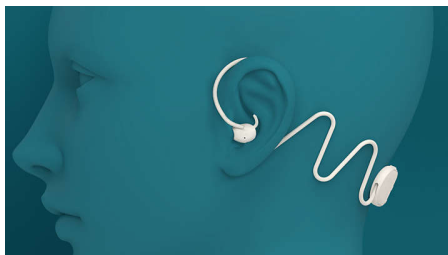

These soft, super-thin sleep buds sit snug within the ear and are suitable for all sleeping positions, including side sleepers. Each earbud loops over your ear so it won't fall out if you move, and you get five sizes of extra-soft silicone ear tips so you can find the fit that's right for you.

## Kokoon sleep app

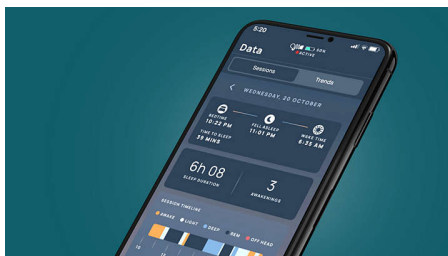

Listen to sounds endorsed by science to help you fall asleep easier, and wake to helpful insights on your sleep quality. The app's soothing sounds include meditations, soundscapes, binaural beats and more. Not sure what to try? The app can help you understand which sounds work best for you.


## Powerful biosensors



Powerful biosensors detect when you're falling asleep, and the audio you're listening to will automatically fade away as you drift off. These


same biosensors also let you monitor your sleep, so you can track your patterns in the Kokoon app and improve your sleep habits over time.

## Intelligent noise masking

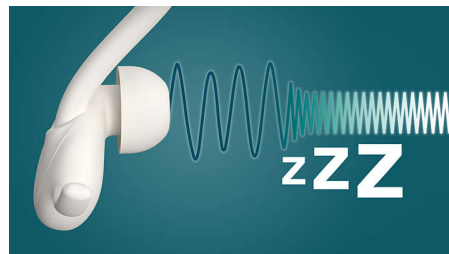


Noisy neighbours, a snoring partner or traffic disturbing your sleep? These sleep buds can help. Once the biosensors detect that you're sleeping, white or coloured noise is played to mask out external sounds. Use the Kokoon app to select the type of masking sound you want, or turn it off altogether.

## Balanced-armature drivers

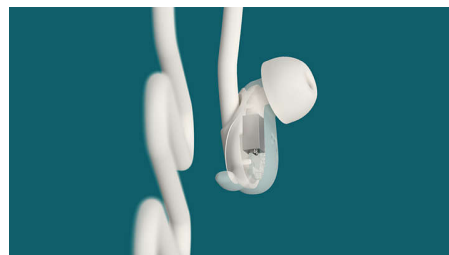

These sleep buds boast balanced-armature drivers specially designed to bring you clear sound while maintaining the barely-there feel of each earbud. Combined with excellent passive noise isolation, courtesy of the snug fit, you can let the world fade away as you relax with your sounds.

## Handy control unit

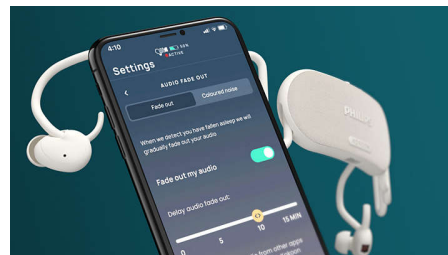

Carefully positioned so it gently hugs the nape of your neck, the neckband control unit is curved and clad in soft material so it's comfy in any sleeping position. The unit's multifunction button lets you adjust the volume or pick up calls — if you're still awake!

## Solid Bluetooth connectivity

Want to fall asleep to music or an audiobook on the beach? These sleep buds will stream content from any platform, and you can blend what you hear with Kokoon's soundscapes. Simply keep the Kokoon app open to hear a crackling fire or distant surf as you listen to the next tune or chapter.

## Sleep insights

Get more from your days when you get more from your nights! The Kokoon app gives you daily insights into your sleep, so you can determine what factors affect its quality and make simple tweaks to your routine. After a free trial, the app is available for a monthly subscription.\*

## Up to 10 hrs of play time

You get 10 hours of play time from a full charge, plenty to see you through the night. The earbuds can be recharged fully in 2 hours via a USB-C cable plugged into the control unit, and the included carrying pouch keeps the buds safe when not in use.

## Clear calls

Chat to a friend while you're unwinding before bed, or stay open to family calls during your afternoon nap. There's no need to reach for your phone — you can accept calls via the control unit's multifunction button.

# Specifications

## Sound

Frequency range: 20–20,000 Hz  
Speaker diameter: 2.96 x 2.7 mm  
Impedance: 22 Ohm  
Maximum power input: 1 mW  
Sensitivity: 110 dB (1 kHz)  
Driver type: Balanced Armature

## Connectivity

Bluetooth version: 5.0  
Wireless  
Bluetooth profiles: A2DP, AVRCP, HFP  
Maximum range: Up to 10 m  
Supported codec: SBC  
Type of wireless transmission: Bluetooth

## Outer Carton

Length: 47 cm  
Number of consumer packages: 24  
Width: 22.2 cm  
Gross weight: 9 kg  
Height: 59 cm  
GTIN: 1 48 95229 13289 1  
Net weight: 3.12 kg  
Tare weight: 5.88 kg

## Convenience

Volume control  
Type of controls: Button

## Inner Carton

Length: 21.2 cm  
Number of consumer packages: 3  
Width: 11 cm  
Height: 27.5 cm  
Net weight: 0.39 kg  
Gross weight: 0.998 kg  
Tare weight: 0.608 kg  
GTIN: 2 48 95229 13289 8

## Power

Number of batteries: 1 pcs  
Music play time: > 10 hour(s)  
Charging time: 2 hour(s)  
Battery weight (Total): 2.8 g  
Battery capacity (Headphones): 110 mAh  
Battery type (Headphones): Lithium Polymer (Built-in)

## Packaging dimensions

Height: 27.5 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 20 cm

Depth: 3.2 cm  
Number of products included: 1  
EAN: 48 95229 13289 4  
Gross weight: 0.28 kg  
Net weight: 0.13 kg  
Tare weight: 0.15 kg

## Product dimensions

Height: 1.5 cm  
Width: 20.5 cm  
Depth: 3 cm  
Weight: 0.022 kg

## Accessories

Others: 1 pcs hard carrying case  
Quick Start Guide  
Eartips: 5 pairs  
Charging cable: USB-C charging cable, 200 mm

## Design

Colour: Grey  
Ear coupling material: Silicone  
Ear fitting: Neckband  
In-ear fitting type: Silicone ear-tip

## UPC

UPC: 8 40063 20323 5

