

Philips  
Home cinema speakers



HTS7111



## Add superior 5.1 surround sound to your TV

### Obsessed with sound

Add superior surround sound to your TV without the clutter. Philips SoundBar with Ambisound allows you to enjoy amazing TV and movie entertainment with your Blu-ray or DVD player in cinema-like multi channel surround sound.

#### **Great listening experience**

- 300W RMS power delivers great sound for movies and music
- Dolby Digital and DTS for great surround sound
- Ambisound for surround sound from fewer speakers

#### **Designed to enhance your cinema at home**

- Touch panel for intuitive playback and volume control
- Flexible placement on the wall, tabletop or stand
- SoundBar design best fitting a 102cm (40") flat TV or larger


#### **Simply enjoy all your entertainment**

- Audio in to enjoy music from iPod/iPhone/MP3 player
- HDMI Hub to connect HDMI devices for great sound and picture
- Easily connect your TV via a single HDMI cable

# PHILIPS


# Highlights

## Ambisound

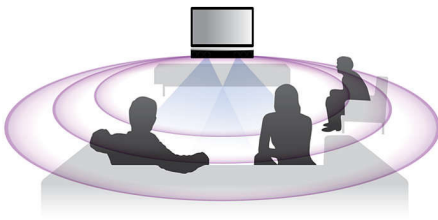

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## Dolby Digital and DTS

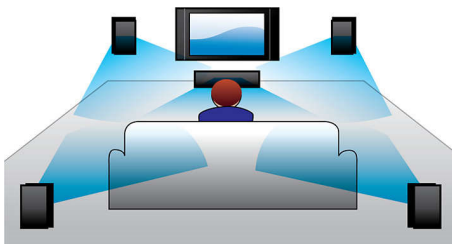


Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

## 300W RMS power




300W RMS power delivers great sound for movies and music

## Touch panel for playback

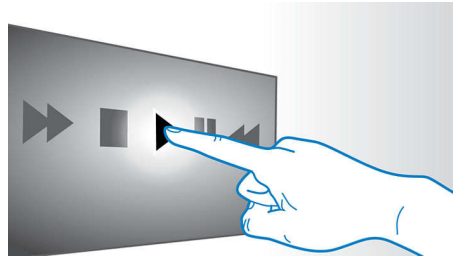


Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

## Flexible placement

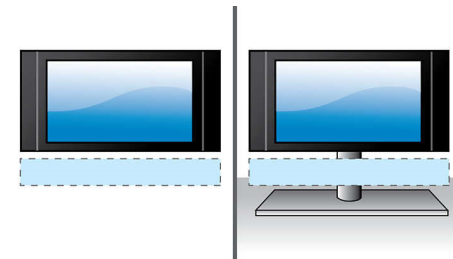

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

## HDMI Hub

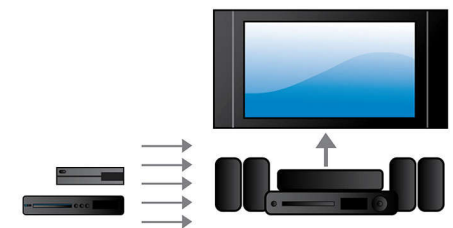

HDMI Hub provides additional HDMI ports to allow you to connect other devices such as your game console or HD set-top box to your home theater conveniently. By connecting your devices through the HDMI Hub, you can enjoy high-definition sound and picture for all your entertainment.

## Easily connect your TV




Easily connect your TV via a single HDMI cable

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## SoundBar design (102cm (40"))

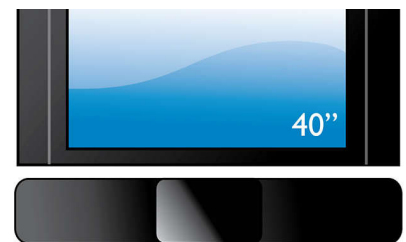

The SoundBar lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 102 cm (40") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

# Specifications

## Sound

- Sound Enhancement: Ambisound, Auto Volume Leveler, Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Subwoofer output power: 80 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 40 W x 2
- Surround speaker output power: 35 W x 4
- Total Power RMS @ 30% THD: 300 W

## Loudspeakers

- Loudspeaker types: 2 Integrated center speakers, 4 Integrated surround speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 6 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Subwoofer impedance: 6 ohm
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 3 ohm

## Connectivity

- Front / Side connections: Music iLINK
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI IN 1, HDMI IN 2, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough, System standby

## Power

- Power consumption: 55 W
- Power supply: 110-127V / 220-240V, ~50-60Hz, 50Hz
- Standby power consumption: <math>\leq 1</math> W

## Accessories

- Compatible accessories: 2.5cm Screw x 8, DCK3060 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand, Wall plug x 8
- Included accessories: 2 x AAA Batteries, Music iLINK Cable, Power cord, Quick start guide, Remote Control, User Manual, Wall mount bracket, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 945 x 108 x 86 mm
- Weight incl. Packaging: 13 kg
- Main Unit Weight: 3.8 kg
- Packaging (W x H x D): 1010 x 248 x 452, mm
- Subwoofer (W x H x D): 192 x 447 x 253 mm
- Subwoofer Weight: 4.4 kg
- Subwoofer cable length: 3 m

## Matching Philips Televisions\*

- 7000 Series 3D: 42PFL7606, 47PFL7606, 55PFL7606
- 7000 Series 2D: 42PFL7406



Issue date 2024-04-13

Version: 8.2.9

EAN: 87 12581 58040 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The home theater can also be matched with all other Philips TVs.