

Philips
Portable Radio

Digital Display

AE1850



Radio on the go

with digital display

Stylish, pocket-size Philips MW/FM radio with easy-to-read digital display, backlight, clock and alarm features.

Pocket-size radio

- AM/ FM tuner for radio enjoyment

Easy to use

- Large backlit LCD display for easy viewing in low light
- Built-in clock function
- Built-in speaker to enjoy radio out-loud in good sound
- Stereo headphone jack for better personal music enjoyment

PHILIPS
sense and simplicity

Specifications

Sound

- Sound system: mono
- Volume control: rotary (analogue)
- Output power: 100 mW RMS

Tuner/Reception/Transmission

- Tuner bands: FM, MW

Connectivity

- Audio/Video output: Headphone (3.5mm)

Convenience

- Backlight color: white

- Display Digits: 4
- Display type: LCD display

Dimensions

- Product weight: 0.165 kg
- Main unit depth: 29 mm
- Main unit height: 71 mm
- Main unit width: 115 mm

Power

- Battery type: AA size (LR6)
- Battery voltage: 1.5 V
- Number of batteries: 2

Highlights

AM/ FM tuner



AM/ FM tuner for radio enjoyment

Large backlit LCD display




Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

Built-in clock

A built-in clock keeps time accurately. When the radio is off, the clock display comes on for added convenience.

Built-in speaker

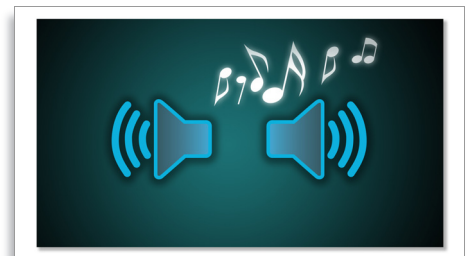

A speaker offers good sound quality for more pleasure.

Stereo headphone jack

Connect your own headphone this Philips radio for a more personal listening experience whenever you want it. You can enjoy your favorite movie or music in great sound without disturbing others by connecting your headphones to the player.



Issue date 2012-07-31

Version: 1.0.8

12 NC: 8670 000 37429
EAN: 87 12581 39896 5

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com