




Philips
Soundbar speaker

Virtual surround

External subwoofer
Opt, Coax, Aux in, Audio in
Bluetooth®

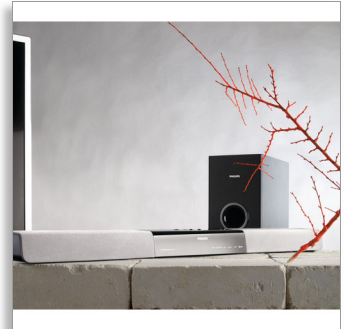

HTL2160C



Powerful sound for any TV

with subwoofer

Fill your home with superb Bluetooth wireless music. In addition to TV & home theater, it also boosts your gaming console and MP3 player. So start enjoying top-quality Virtual Surround Sound movies and music now.

Connect and enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Wireless music streaming via Bluetooth
- Enjoy MP3/WMA music directly from your portable USB devices

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Ultra-compact 80cm-wide soundbar suits any home décor

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- External subwoofer adds thrill to the action
- Twin tweeters for optimum clarity performance

PHILIPS

Soundbar speaker

Virtual surround External subwoofer, Opt, Coax, Aux in, Audio in, Bluetooth®


Highlights

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Virtual Surround Sound

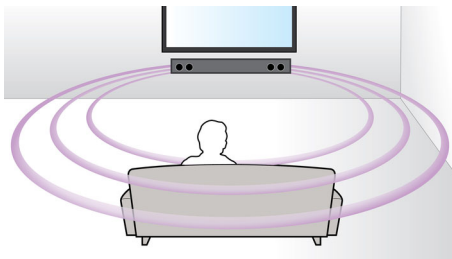

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

External subwoofer




External subwoofer adds thrill to the action

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Dolby Digital

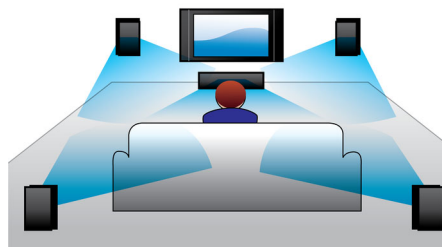

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

HTL2160C/12

Specifications

Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control
- Sound System: Dolby Digital
- Speaker output power: 15 W x 2
- Subwoofer output power: 30 W
- Total Power RMS @ 30% THD: 60 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 8 ohm

Connectivity

- Integrated Connections: Bluetooth
- Side Connections: Audio In (3.5mm), USB
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in

Design

- Wall mountable

Power

- Power consumption: 30 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Dimensions

- Main Unit (W x H x D): 800 x 52.4 x 75.6 mm
- Main Unit Weight: 1.2 kg
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 292 x 349 mm
- Weight incl. Packaging: 5.4 kg

Accessories

- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2020-07-08

Version: 4.0.3

12 NC: 8670 000 99286
EAN: 87 12581 67420 5

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com