

Philips
SoundBar Home cinema
speakers

Virtual surround

External subwoofer
Opt, Coax, Aux in, Audio in



CSS2123

Powerful sound for any TV

with subwoofer

Don't judge by its size, because this Philips soundbar CSS2123 packs a lot of punch! No more muffled dialogues with 2 dedicated tweeters. DoubleBASS and Virtual Surround Sound technology add excitement and surround sound to the movie.

Designed for simplicity

- Ultra-compact soundbar - just 70cm/28" wide
- Low-rise profile for the perfect fit in front of your TV

Richer sound for watching TV and movies

- Dolby Digital for ultimate movie experience
- DoubleBASS technology for fuller and deeper bass
- Virtual Surround Sound for a realistic movie experience
- Separate subwoofer adds thrill to the action


Connect and enjoy all your entertainment

- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy music from iPod/iPhone/iPad with Music iLink

PHILIPS


Highlights

Virtual Surround Sound

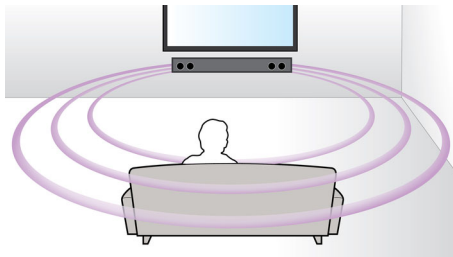

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

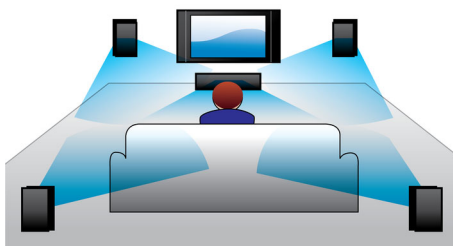

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

Music iLink



Philips Music iLink allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home theater. Simply connect your audio device to the Music iLink jack to enjoy your music with the superior sound quality of the Philips home theater.

Specifications

Accessories

- Compatible accessories: Screw x 2, Wall plug x 2
- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Connectivity

- Front / Side connections: Music iLINK
- Rear Connections: AUX IN 1, Digital coaxial in, Digital optical in, Subwoofer out

Dimensions

- Main Unit (W x H x D): 708 x 47 x 65 mm
- Main Unit Weight: 1.03 kg
- Subwoofer (W x H x D): 165 x 295 x 240 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3.3 m
- Packaging (W x H x D): 756 x 395 x 220 mm
- Weight incl. Packaging: 5.4 kg

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 x 5" woofer, 1 x 1.5" Mylar tweeter
- Speaker Impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 8 ohm

Power

- Power consumption: 20 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Sound

- Sound Enhancement: DoubleBass, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital
- Speaker output power: 15 W x 2
- Subwoofer output power: 30 W
- Total Power RMS @ 30% THD: 60 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2020-07-08

Version: 6.2.5

12 NC: 8670 000 81183
EAN: 87 12581 61825 4

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com