

Philips  
2.1 Home theater

DVD playback

HTS5200



## Obsessed with sound

True-to-life sound in perfect style

Enjoy your movies, music & TV experience in great surround sound! With a built in DVD player, entertainment has never looked so elegant with this multi-entertainment home theater.

### Superior listening experience

- Crystal Clear Sound for superbly clear and detailed sound
- Soft dome tweeters for pure sound and voice clarity
- DTS, Dolby Digital and Pro Logic II surround sound
- 400W RMS power delivers great sound for movies and music

### Designed to enhance your living space

- Elegantly designed in fine materials to match your flat TV

### Connect and enjoy all your entertainment

- DVD and CD playback to enjoy all your movies and music
- Sharper high definition pictures with HDMI 1080p
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- EasyLink to control all HDMI CEC devices via a single remote
- Optional dock for convenient playback from your iPod/iPhone



asimpleswitch.com




asimpleswitch.com

# PHILIPS

sense and simplicity

# Highlights

## Crystal Clear Sound

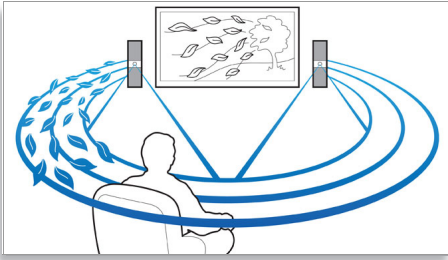

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

## Soft dome tweeters




Soft Dome Tweeters reproduce clear high and mid-range frequencies that enhance the overall clarity of sound from the speakers.

## Elegantly designed




Elegantly designed in fine materials to match your flat TV

## DVD and CD playback

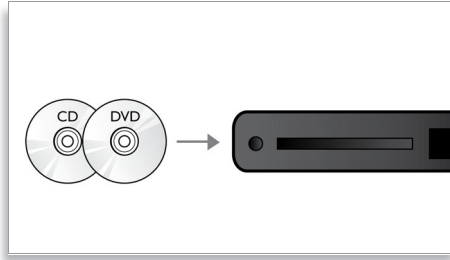

DVD and CD playback to enjoy all your movies and music

## Hi-Speed USB 2.0 Link

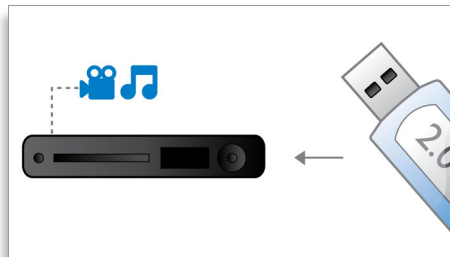

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## 400W RMS power



400W RMS power delivers great sound for movies and music

## DTS, DolbyDigital, ProLogic II

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information

to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone
- Included accessories: Batteries for remote control, Quick start guide, FM antenna, Remote Control, Speaker Cables, User Manual, Video Cable, World Wide Warranty leaflet

## Audio Playback

- Compression format: MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Compression format: JPEG, JPEG HD, JPEG Progressive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, WMV SD, XviD
- Video disc playback system: NTSC, PAL

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: mp3, wma
- Picture: JPEG, JPG
- Video: asf, avi, divx, mpeg, mpg, wmv

## Connectivity

- Front / Side connections: MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, iPod/iPhone Dock Jack

## Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough

## Dimensions

- Main Unit (W x H x D): 434 x 253 x 129 mm

- Main Unit Weight: 3.6 kg
- Satellite Speaker (W x H x D): 114 x 316 x 114 mm
- Satellite Speaker Weight: 1.03 kg
- Satellite Speaker Cable length: 2 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.25 kg
- Subwoofer cable length: 4 m
- Packaging (W x H x D): 397 x 406 x 578 mm
- Weight incl. Packaging: 13.16 kg

## Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 3" Woofer, 1 Tweeter
- Satellite speaker impedance: 6 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Power

- Power consumption: 100 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.3 W

## Sound

- Equalizer settings: Rock, Action, Classic, Concert, Drama, Jazz, Sports
- Frequency response: 20-20k Hz
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Dolby Digital Prologic II, Dolby Virtual Speaker, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Total Power RMS @ 30% THD: 400 W

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2013-02-12

Version: 10.2.8

12 NC: 8670 000 59832  
EAN: 87 12581 52464 7

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)