




Philips
In-ear wireless TV
headphones

3 x Equaliser settings

Comfort fit
Up to 12 hours of play time
Auto on/off

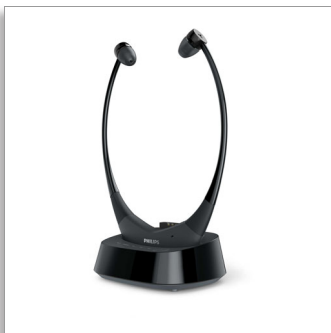

TAE8005BK

Loud and clear

Hear your TV louder and more clearly without disturbing others. These in-ear TV headphones automatically select the wireless channel that gives you the best sound, and you can adjust the volume in either ear. Auto on/off keeps things simple.

Hear it all

- Every film, every show. Always your ideal sound
- Auto-tuned digital wireless connection. Always clear sound
- 14.8 mm neodymium drivers. Left/right balance controls
- Awareness Mode. Easily hold conversations

Wherever you love to sit

- 2 rechargeable batteries give 6 hours play time each
- Any TV. Optical and 3.5 mm audio cables
- Auto on/off. Put the headphones on to turn them on
- Dock/wireless station also charges the spare battery

Always a comfortable, secure fit

- 3 interchangeable rubber earbud covers
- 40 m wireless range. Listen anywhere in your home
- Preset sound modes: Extra Treble, Extra Bass, Voice
- Light, comfortable stethoscope-style neck band

PHILIPS

In-ear wireless TV headphones
3 x Equaliser settings Comfort fit, Up to 12 hours of play time, Auto on/off

Specifications

Sound

- Frequency range: 20–20,000 Hz
- Speaker diameter: 14.8 mm
- Impedance: 16 Ohm
- Maximum power input: 20 mW
- Sensitivity: 127 dB (1K Hz)
- Driver type: Dynamic

Connectivity

- Wireless
- Detachable cable
- Maximum range: Up to 40 m
- Type of wireless transmission: Digital FM
- Channel selection: Automatic
- Headphone socket: 3.5 mm

Outer Carton

- Length: 30.5 cm
- Number of consumer packages: 3
- Width: 25.5 cm
- Gross weight: 2.92 kg
- Height: 31.5 cm
- GTIN: 1 48 95229 11222 0
- Net weight: 1.545 kg
- Tare weight: 1.375 kg

Convenience

- Automatic power off
- Volume control
- Type of controls: Button

Power

- Rechargeable
- Number of batteries: 2 pcs
- Music play time: 12 hour(s)
- Charging time: 2.5 hour(s)
- Battery weight (Total): 22.24 g
- Battery capacity (Headphones): 350 mAh
- Battery life standby time: up to 7000 hr
- Battery type (Headphones): Lithium Polymer

Packaging dimensions

- Height: 32 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 24 cm
- Depth: 9.5 cm
- Number of products included: 1
- EAN: 48 95229 11222 3
- Gross weight: 0.837 kg
- Net weight: 0.515 kg
- Tare weight: 0.322 kg

Accessories

- Others: 2 x lithium-polymer batteries, 3.5 mm optical cable
- Audio cable: 3.5 mm TV cable
- Quick Start Guide
- Eartips: 3 pairs
- Docking station (connector): 3.5 mm
- Docking station (transmitter)
- Included adapters: Charge adapter, TV RCA adapter

Design

- Colour: Black
- Wearing style: In-ear
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear-tip

Dimensions

- Product dimensions (WxDxH): 15.89 x 2.15 x 21.61 cm
- Docking station weight: 0.112 kg
- Stethoscope weight: 0.065 kg
- Docking station dimensions: 12.0 x 9.5 x 4.2 cm (W x D x H)

TAE8005BK/10

Highlights

Every film, every show



Two rechargeable batteries give you 6 hours play time each, for a total of 12 hours. 14.8 mm drivers deliver clear sound. If you'd like things a little louder, simply turn the left/right balance control knob in either direction to increase sound in the corresponding ear.

Always clear sound



These wireless headphones boast interference-free sound with no latency. They turn on automatically when you put them on and automatically select the best available connection. You won't have to adjust anything and you'll always get the best sound.

Preset sound modes



Extra Bass, Extra Treble and Voice modes let you select the sound that's most comfortable for you. When you want to hear what's going on around you, Awareness Mode shuts off the TV or input audio and amplifies environmental sound.

Light and comfortable

These wireless TV headphones sit comfortably in your ears and are particularly useful if you wear glasses. Three styles of interchangeable rubber earbud covers let you choose your perfect fit for excellent passive noise isolation.

Any TV

The included optical and 3.5 mm audio cables let these headphones connect to almost any TV. Whatever you're into, from series to films, bring the sound closer, louder and clearer.



Issue date 2024-10-17

Version: 7.4.8

EAN: 48 95229 11222 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Battery life of play time is approximate and may vary depending on application condition.