



Philips  
Wireless speaker

**Bluetooth®**

30 W Output Power  
20 hours of play time  
Built-in power-bank function



TAS6305



## Party day and night

Keep the party going for longer with the waterproof Bluetooth speaker that gives you 20 hours of play time. Strong bass keeps everyone moving. You can charge your smart device via the USB port thanks to the speaker's high-capacity battery.

### **20 hours of play time. Tough and IPX7 waterproof.**

- Waterproof and ready to go
- 20 hours of play time. Built-in power-bank function
- Charge smart devices via USB port
- Audio-in. Connect to almost any source

### **Play what you love**

- 2 x 2.25" full-range drivers. Vibrant sound
- Two passive radiators for strong bass
- Anti-clipping function. Play it loud without distortion
- Bluetooth 5.0. Up to 20 m wireless range
- Play it loud. Pair for stereo

### **Take the party anywhere**

- Multi-colour LED lights blaze to the beat
- Dimensions: 230 x 100 x 100 mm
- Pair with an identical speaker for stereo sound

# PHILIPS

Wireless speaker  
Bluetooth® 30 W Output Power, 20 hours of play time, Built-in power-bank function

# Specifications

## Compatibility

- Smartphone/tablet APP control
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

## Sound

- Output power (RMS): 30 W
- Output power (MAX): 60 W
- Frequency response: 100 Hz – 20 KHz
- Sound System: Stereo

## Loudspeakers

- Number of sound channels: 2
- Driver configuration: Full range
- Number of full-range drivers: 2
- Full-range driver diameter: 57 mm
- Passive radiators: 2

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20 m or 66 ft
- Bluetooth version: 5.0
- USB charging: 5 V, 2 A
- Audio Connections: 3.5 mm Line in
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo
- Multiple speaker technology: TWS
- USB: Type-C

## Convenience

- Water resistance: IPX7
- Ease of Installation: Automatic pairing
- Volume control: Digital up/down
- Automatic power off
- Hands-free calling
- Call Management: Answer/End Call
- Built-in microphone
- Display screen: No
- Light Effect

## Power

- Power LED indicator: Blue
- Battery type: Lithium-ion (built-in)
- Battery Capacity: 4400 mAh, 7.4 V
- Operating time on battery: 20 hr
- Charging time: 6 hr
- Power bank: Yes, integrated

## Accessories

- 3.5 mm audio cable
- Cable: USB charging cable
- Included accessories: Quick install guide, Warranty Card, World Wide Warranty leaflet

## Design and finishing

- Colour: Black

## Product dimensions

- Product dimensions (W x H x D): 23 x 10 x 10 cm
- Product dimensions (W x H x D): 9.1 x 3.9 x 3.9 inch
- Weight: 1.764 lb
- Weight: 0.8 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 28.8 x 13 x 13 cm
- Packaging dimensions (W x H x D): 11.3 x 5.1 x 5.1 inch
- Gross weight: 2.205 lb
- Gross weight: 1 kg
- Net weight: 0.8 kg
- Net weight: 1.764 lb
- Number of products included: 1
- Packaging type: Box
- Tare weight: 0.2 kg
- Tare weight: 0.441 lb
- EAN: 48 95229 10222 4

TAS6305/00

# Highlights

## Waterproof and ready to go




This portable Bluetooth speaker is IPX7-rated—which means it can withstand total immersion in water up to 1 m deep for up to 30 minutes. You can party in the shower, by the pool or even in the pool! The wireless range is 20 m.

## 20 hours of play time



The 4400 mAh rechargeable Li-ion battery gives you 20 hours of play time and you can charge your smart device via the speaker's USB port. A full charge of the battery takes 6 hours.

## Play it loud. Pair for stereo

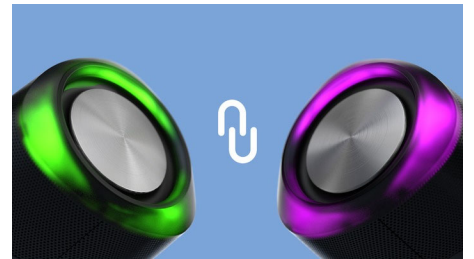

Twin passive radiators deliver strong bass and sound stays clear even at high volume. Want to make the party even bigger? Pair with an identical speaker for stereo sound. LED lights at each end of the speaker flash in time with the tunes.

## Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.



Issue date 2022-05-09

Version: 10.1.2

12 NC: 8670 001 62843  
EAN: 48 95229 10222 4

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)