

Philips
WeCall Bluetooth
conference speaker

Bluetooth® and USB

Superior sound
Built-in battery
for iPhone



AECS7000



Make clear conference calls anywhere

that sound like talking in person

Make conference calls anywhere with the portable Philips WeCall. It comes with four microphones and advanced echo cancellation for smooth conversations, while the LED indicators and Bluetooth® connectivity offer you the utmost convenience.

Best-in-class sound and voice performance

- Four microphones for perfect voice pick-up in 360 degrees
- Advanced noise cancellation for clear sound
- Advanced echo suppression for smooth conversations
- Powerful speaker to easily hear voices and play music
- Advanced HD audio technology for natural voice

Ease of use

- Easily connect to Bluetooth-enabled smartphones and laptops
- Free WeCall app for quick and intuitive conference calls
- LED status indicators for call, charging and mute functions
- USB connectivity for making calls via laptops

Portable and convenient

- Slim and compact design for high portability everywhere
- Slim and light travel case to take it anywhere
- Up to 8 hours of battery life and USB cable recharging




PHILIPS

WeCall Bluetooth conference speaker
Bluetooth® and USB Superior sound, Built-in battery, for iPhone

AECS7000/00

Highlights

Perfect voice pick-up

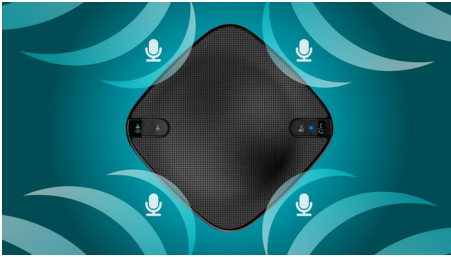

Four omnidirectional microphones enable 360-degree voice pick-up from up to 5 metres away, for clear and natural communication without raising your voice or leaning over a speaker - even in the most difficult environment.

Advanced noise cancellation

Advanced noise cancellation with four omnidirectional microphones around the speaker enables multiple people to join the conversation and ensures voices can be heard in the clearest way. Stationary and non-stationary noises are suppressed for a noise-free conversation.

Advanced echo suppression

Very fast and advanced echo suppression for a revolutionary hands-free, full-duplex conversation a few metres from the speaker. An adaptive algorithm is designed to eliminate echoes and prevent howling due to feedback from loudspeaker to microphone, which is especially ideal in difficult acoustical conditions and reverberant rooms such as offices with little furniture.

Powerful built-in speaker

2-inch high-sensitivity, low-distortion neodymium magnet speaker with specially designed low-profile cone resulting in a wide-range response and wide-dispersion directivity. Talk while walking around the room and from anywhere in the room with no drop in quality. Or perfect for music playback.

Advanced audio technologies


Advanced HD audio technology for natural voice

Seamless Bluetooth connections



Seamless connectivity via auto pairing with iPhones and any Bluetooth-enabled smartphones, computers and laptops, with up to 10-metre wireless range.

Intuitive conference calls

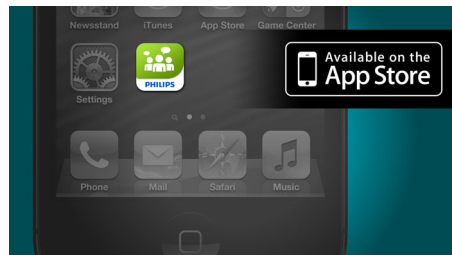

The handy Philips WeCall app manages conference call numbers and even enters access codes directly from your calendar, making it a breeze to dial and access calls from your calendar at the push of a button.

Built-in LED indicators

LED status indicators for call, charging and mute functions

USB connectivity

USB connectivity enables you to use the speaker for making calls from laptops with Plug and Play functionalities and automatic device detection.

Slim and compact design

The slim and portable design allows you to take the conference speaker wherever you want. It easily fits in your laptop bag for use while on the go, working from home, in a hotel room or visiting a business partner.

Long built-in battery life



Up to 8 hours' battery life while being used on a call, and up to 200 hours on standby. The USB cable included allows for very easy and convenient charging.

Travel case for easy transport

Durable and ultra-light travel case helps to protect the speaker while you are travelling, with an elegant and functional design for a professional appearance.

CES 2014 Innovation Awards

2014 CES Innovations Design and Engineering Award

Sleek, compact and filled

with innovative and intuitive technology, the Philips WeCall Bluetooth® conference speaker AECS7000 is ideal for conference calls on your smartphone. Four omni-directional microphones and echo cancellation ensure clear conversations even when you are 16 feet away.

Specifications

Bluetooth® wireless technology

- Version: V2.1 + EDR
- Range: 10 M (free space)
- Profiles: HSP, HFP, A2DP, AVRCP, (HFP supports wideband speech)

Philips WeCall App

- Free Download: Yes, search for "Philips WeCall"
- From Apple Store: Requires iOS 4.3 or later

iPad compatibility

- Compatible with: iPad, iPad 2, iPad 4, iPad mini

iPhone compatibility

- Compatible with: iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5

iPod compatibility

- Compatible with: iPod touch 3rd generation, iPod touch 4th generation, iPod touch 5th generation

Sound

- Built-in speakers: 1 x 2"
- Output Power: 2 W
- Frequency response: 140 - 18,000 Hz
- Signal to noise ratio: >75 dB

Microphone

- Omnidirectional microphones: 4
- 360-degree voice pick-up from: up to 5 m away
- Noise and echo cancellation

Convenience

- Speakerphone — talk hands-free
- Volume control: Up/Down

Power

- Power input: 5 V, 1 A
- Battery capacity: 3.7 V, 1000 mAh
- Battery Type: Lithium Ion Polymer
- Talk time: Up to 8 hours

Accessories

- Travel case
- USB cable
- Quick start guide

Dimensions

- Product dimensions (W x H x D):
110 x 28 x 110 mm
- Product weight (g): 182



Issue date 2018-03-22

Version: 5.2.7

12 NC: 8670 001 00807
EAN: 69 23410 72365 6

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Philips is not responsible for stolen valuables of any kind that may be caused by the use of InRange.