

Philips  
DVD/SACD Player

DivX playback

DVP5500S



## See, hear, play everything

Be impressed with this Philips DVD/SACD player. It gives you the wonder of multi-channel Super Audio CD music and surround sound cinematic movie experience. Immerse yourself in your personal entertainment.

### Unrivalled video performance

- PAL & NTSC Progressive Scan gives razor-sharp images
- 108MHz/12 bit video processing high-resolution images

### Pure multi-channel sound

- Multi-channel Super Audio CD for total music immersion
- 192kHz/24 bit audio DAC enhances analogue sound input
- Built-in decoders for Dolby Digital and DTS

### Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Music: SACD, CD, MP3-CD, CD-R, CD-RW & Windows Media™ Audio
- Picture CD (JPEG) with music (MP3) playback

**PHILIPS**  
sense and simplicity

# Highlights

## PAL & NTSC Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending fields with the odd lines to the screen first, followed by the fields with the even lines, both fields are written at one time. A flicker-free high resolution image is created giving you the best viewing experience.


## 108MHz/12 bit video processing

Video Upsampling is a technology that decreases distortion to dramatically improve picture quality. It is a technology that allows the normal 13.5MHz video signal to be up sampled to 8 times the frequency.

## Multi-channel Super Audio CD


Multi-channel SACD is a new generation music format that offers ultra high quality music reproduction. With a 5.1 multi-channel surround sound and full CD compatibility both forward and backward, what results is unsurpassed audio performance for your listening pleasure.

## 192kHz/24 bit audio DAC

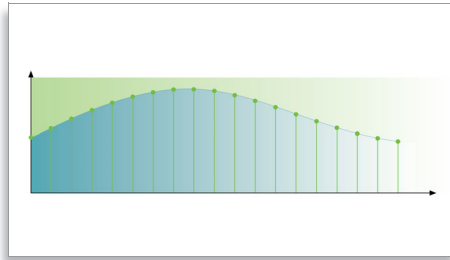

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Built-in DD and DTS decoders

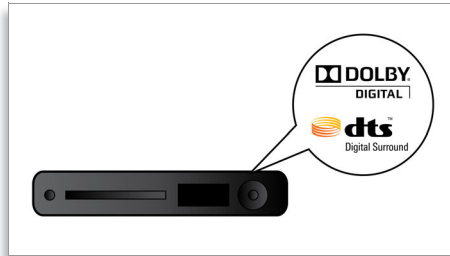

A Built-in Dolby Digital decoder eliminates the need for an external decoder by processing all

six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism.

## Multi-format Movies with DivX

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

## Music:SACDWindows Media™ Audio

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

## Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Smart Picture Setting

## Sound

- D/A converter: 192kHz/24-bit
- Signal to noise ratio: 100 dB
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital, Dolby Prologic II, DTS
- Sound Enhancement: 3D Virtual Surround, Night Mode, Smart Sound

## Video Playback

- Playback Media: CD, CD-R, CD-R/CD-RW, Video CD/SVCD, DVD-Video, DVD, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode)
- Compression formats: MPEG1, MPEG2, MPEG4, DivX 3.11, DivX 4.x, DivX 5.x, XviD
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, SACD Stereo, SACD Multichannel
- Compression format: PCM, MP3, Windows Media™ Audio
- MP3 bit rates: 32 - 256 kbps

## Still Picture Playback

- Playback Media: Picture CD, DVD+R/+RW

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow with MP3 playback

## Connectivity

- Other connections: ComponentVideo out, Progressive, Composite video (CVBS) out, Analog audio Multi-channel, Digital coaxial out

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Malay, Simplified Chinese, Traditional Chinese, Korean, Thai

## Power

- Power supply: 50/60 Hz, 110-240V
- Power consumption: 10 W
- Standby power consumption: < 0.8 W

## Accessories

- Batteries: 2 x AA
- Remote control: 3139 248 72031
- Cables: 1 x AV Cables
- User Manual: English, Simplified Chinese, Traditional Chinese, B. Melayu
- Warranty Card

## Dimensions

- Set dimensions (W x H x D): 435 x 37 x 265 mm
- Set weight: 2.17 kg
- Packaging dimensions (W x H x D): 488 x 82 x 352 mm
- Weight incl. Packaging: 3.45 kg



Issue date 2009-07-03

Version: 8.0.9

12 NC: 8622 810 12051  
EAN: 87 10895 85266 1

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)