



Philips Harmony
DVD component Hi-Fi
system

Dock for iPod/iPhone/iPad
HDMI 1080p

Harmony



DCD7010



Enjoy high fidelity music and movies

Obsessed with sound

Get superbly detailed and natural audio with this gorgeous aluminium set—thanks to Hi-Fi dome tweeters. Listen to CDs, or play and charge your iPod/iPhone/iPad. Watch DVDs with HDMI 1080p upscaling to achieve a rich movie experience.

Enrich your sound experience

- Hi-Fi dome tweeter for detailed and natural sound
- Class 'D' digital amplifier for quality sound performance
- Treble and Bass Control for easy high and low tone settings
- Gold-plated speaker connector for finest signal transmission
- 100 W RMS total output power

Enjoy your music and movies from multiple sources

- Play and charge your iPod/iPhone/iPad via USB socket
- Play DVD, DivX® Ultra, MP3/WMA-CD, CD and CD-RW
- Dolby Digital for ultimate movie experience
- HDMI 1080p upscales to high definition for sharper pictures
- USB Direct for music and photo playback
- MP3 Link for portable music playback

Premium finishing with noble materials

- Aluminium cabinet for quality look and feel

PHILIPS

Highlights


Treble and Bass Control

Treble and bass are equalizer features that control the high and low frequency sound levels of your audio respectively. Treble specifically regulates the amplification of the high tones in the music, while bass controls the amplification level of the low tones. Using the up and down keys, the listener can conveniently place more or less emphasis on the low and high tones, or leave treble and bass flat to play back music according to its original recorded setting. Treble and Bass Control lets you listen to your music the way you like it.

Class 'D' Amplifier

The Class 'D' Digital Amplifier takes an analogue signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, the Class 'D' Digital Amplifier has over 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

Dolby Digital

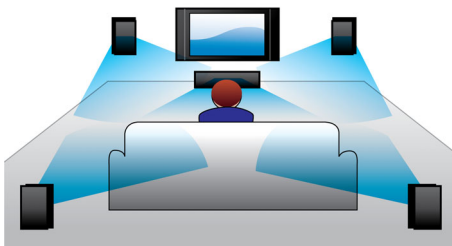

Because Dolby Digital standards, the world's leading digital multi-channel audio standards,

make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Play and charge iPod/iPhone/iPad



Enjoy your favourite MP3 music while charging your iPod/iPhone/iPad! The dock lets you connect your portable device directly to the Philips system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone/iPad while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The system automatically charges your portable device while it is docked.

Gold-plated speaker connector



The gold-plated speaker connector ensures better audio signal transmission compared to traditional click-fit connections. It also minimises the electrical signal loss from the amplifier to the speaker box, resulting in sound reproduction that's as close to reality as possible.



Specifications

Sound

- Output power (RMS): 2 x 50 W
- Sound System: Dolby Digital
- Sound Enhancement: Class "D" Digital Amplifier, Treble and Bass Control, Loudness

Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 5" woofer, 2-way, Bass Reflex Speaker System, Speaker grilles detachable
- Loudspeaker enhancement: Gold-plate speaker connectors

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Docking playback modes: play and pause, fast forward and reverse, menu, up and down, next and previous track
- USB Direct playback modes: play/pause, fast reverse/fast forward, previous/next, repeat, shuffle, stop
- Playback media: CD, CD-R/RW, MP3-CD, WMA-CD, USB flash drive
- Others: ID3-tag support

Video Playback

- Playback Media: DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, DivX Ultra, Video CD/SVCD, USB flash drive
- Disc Playback Modes: Standard Play, Search forward/reverse, Fast Reverse, Fast Forward, Pause, Skip, Resume Playback from Stop, A-B Repeat, Repeat, Angle, Slow Motion, Zoom, Parental control, Disc Menu, OSD
- DVD Region Code: 2

Picture/Display

- Picture enhancement: Video upscaling, High Def (720p, 1080i, 1080p)

Digital Photo Playback

- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow with MP3 playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

Tuner/Reception/Transmission

- Station presets: 20
- RDS: station name, programme type, radio text, RDS clock set
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: Easy set (plug and play), auto digital tuning, auto scan
- Tuner bands: FM mono, FM stereo

Connectivity

- Front/Side connections: USB 2.0
- MP3 Link: 3.5 mm stereo line in
- Headphones: 3.5 mm
- Rear Connections: HDMI output, Composite video (CVBS) output, Digital coaxial out, AUX in, Line out, FM Antenna, Left and right speakers

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm, iPod Alarm
- Clock: On main display
- Display Type: VFD display
- Indications: DIM mode
- On-Screen Display languages: English, French, German, Italian, Danish, Dutch, Finnish, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish, Russian, Czech, Greek, Hungarian, Romanian, Slovak
- EasyLink (HDMI-CEC): One touch play, One touch standby, System volume control

Accessories

- Included accessories: Composite video cable (Y), AC Power Cord, FM antenna, 3.5 mm stereo line-in cable, Warranty certificate, IFU/User Manual
- Remote control: 44-key remote with 2 x AAA batteries

Dimensions

- Main unit width: 250 mm
- Main unit height: 92 mm
- Main unit depth: 285 mm
- Main speaker dimensions (W x D): 174 x 240 mm
- Main speaker height: 260 mm
- Packaging width: 425 mm
- Packaging height: 441 mm
- Packaging depth: 310 mm
- Gross weight: 10 kg
- Net weight: 8.5 kg

Power

- Power supply: 220-240 V, 50 Hz

iPad compatibility

- Compatible with: iPad

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

iPod compatibility

- Compatible with: iPod mini, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch, iPod touch 2nd Generation, iPod touch 3rd generation, iPod touch 4th generation



Issue date 2016-12-14

Version: 2.0.6

12 NC: 8670 000 71461
EAN: 87 12581 57924 1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com