



Philips  
2.1 Multimedia speakers

### 2500W PMPO

USB / SD / FM playability  
Bluetooth connectivity



MMS2550B/94

## Make your music come alive

With 28W RMS sound output and Bluetooth connectivity, this integrated 2.1 channel speakers are perfect for playing music, games, movies and online videos on mobile phones, Mac and PC.

#### Powerful sound

- 28W RMS for powerful sound experience
- 4 inch subwoofer for extra bass

#### Multiple connectivity


- Wireless music streaming via Bluetooth
- USB and SD card playability for music playback
- FM radio let you enjoy music or news everyday

#### Elegant and durable

- Durable wooden cabinet with matt finish

# PHILIPS

### Feature highlights

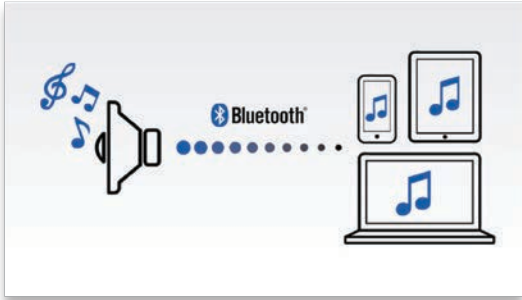

#### Bluetooth-enabled

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphones, tablets or even laptops including iPod or iPhone on Bluetooth-enabled speaker easily.



#### USB direct for MP3 music

USB slots for music playback. Thanks to the complete file transferability, Enjoy MP3 music directly from your portable USB devices.



#### FM tuner

The built-in FM tuner lets you enjoy your favorite songs or news from your radio station every day. Simply tune into the station that you want to listen.



#### SD card connectivity

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music via SD card slots.



#### Audio-in

Make one easy connection and enjoy all your music from portable devices. Simply plug your device with given 3.5mm input cable and enjoy music.

# Specifications

### Audio system

- Total system power: 28W RMS
- Subwoofer output Power: 16W RMS
- Satellite output Power: 2 x 6W RMS
- Frequency range: 20 Hz – 20 kHz
- Signal/Noise ratio:  $\geq 60$ dB
- Subwoofer sensitivity: 660mV
- Satellite sensitivity: 130mV
- Separation:  $\geq 40$ dB

### Speakers system

- Woofer driver: 4 inch
- Woofer Impedance: 4 ohm
- Woofer magnet size: 60( $\emptyset$ ) x 12(H) mm
- Speaker driver: 3 inch
- Speaker Impedance: 8 ohm
- Speaker magnet size: 43( $\emptyset$ ) x 8(H) mm

### Connectivity

- Connections: USB 2.0 (Supports upto 64GB), SD card (Supports upto 64GB), FM, Audio-in, Bluetooth version 3.0

### Design

- Wooden cabinet

### Power

- Power consumption: 38W
- Power supply: 230V AC, 50Hz
- Standby power consumption:  $< 7.9$ W
- Display: Orange LED

### Front Panel Controls

- PREVIOUS / PLAY PAUSE / NEXT / VOL+, SOURCE / VOL-

### Back Panel Controls

- Bass

### Accessories

- Included accessories: User manual, Remote Control, 3.5mm to RCA cable

### Packaging Dimensions

- No. of sets per packaging: 1 sets
- Packaging (W x H x D): 314mm x 374mm x 200mm
- Gross Weight: 3.5 kg

### Product Dimensions

- Subwoofer (W x H x D): 156 x 253 x 271 mm
- Satellite (W x H x D): 94 x 160 x 117 mm

### Outer Carton

- Outer carton (L x W x H): 646 x 415 x 392 mm
- Number of consumer packagings: 4

