

Philips  
5.1 Home theatre

DVD

HTD3500



## Powerful Surround Sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

### Great listening experience

- 300 W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

### Designed to enhance your cinema at home

- Modern design to complement your home environment

### Simply enjoy all your entertainment

- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices

# PHILIPS


# Highlights

## 300 W RMS power



300 W RMS power delivers great sound for movies and music

## Dolby Digital

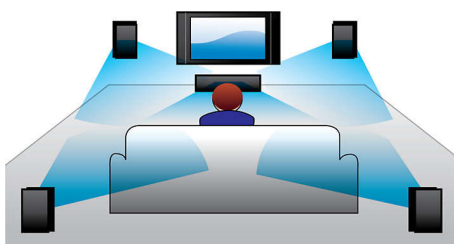

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to

your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition

can now be enjoyed in true high definition resolution—ensuring more details and more true-to-life pictures.

## Plays it all



Play virtually any disc and any media devices you want - whether they are DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system.

## Modern design

Modern design to complement your home environment

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound



# Specifications

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Cube speaker output power: 5 x 50 W
- Total Power RMS @ 30% THD: 300 W

## Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Cube speaker freq range: 150–20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer freq range: 20–150 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Drivers per Cube speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Fixed FM Antenna

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40

## Outer Carton

- EAN: 87 12581 64834 3
- Length: 52 cm
- Number of consumer packages: 1
- Width: 37,7 cm
- Gross weight: 7,38 kg
- Height: 31 cm
- Net weight: 6,33 kg
- Tare weight: 1,05 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

## Power

- Power consumption: 55 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0,5 W

## Packaging dimensions

- Height: 31 cm
- Packaging type: Soother
- Type of shelf placement: Soother
- Width: 52 cm
- Depth: 37,7 cm
- Number of products included: 1
- EAN: 87 12581 64834 3
- Gross weight: 7,38 kg

- Net weight: 6,33 kg
- Tare weight: 1,05 kg

## Product dimensions

- Height: 5,8 cm
- Width: 36 cm
- Depth: 32,5 cm
- Weight: 2,3 kg

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, HDMI cable, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, VDE to 2-pin Flat Adapter, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Weight incl. Packaging: 9 kg
- Main Unit Weight: 2.40 kg
- Packaging (W x H x D): 520 x 310 x 377 mm
- Centre Speaker (W x H x D): 84.5 x 89 x 89 mm
- Centre Speaker Weight: 0.28 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 89 x 89 mm
- Subwoofer (W x H x D): 160 x 267.5 x 265 mm
- Front Speaker Weight: 0.28 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 89 x 89 mm
- Rear Speaker Weight: 0.28 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 2 m

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

## File Format

- Audio: mp3, wma
- Video: avi, DivX, mpeg, mpg
- Picture: JPEG

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 5.1.2

EAN: 87 12581 64834 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)