

Philips  
docking system for iPod/  
iPhone

Aluminium

DC290



## Rise and shine

to great music from your iPhone/iPod

Awake gently to great music, or get updated with news from the radio with the Philips docking system for iPhone/iPod. Make your mornings brighter with crystal clear sound and add a dash of style to your bedroom with the aluminum cabinet.

### **Rich and clear sound**

- Play and charge your iPod/iPhone simultaneously
- MP3 Link for portable music playback
- 10W RMS total output power
- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound

### **Start the day your way**

- Weekday/ weekend alarm setting to complement your lifestyle
- Wake up to your iPod/ iPhone music or radio tunes
- Gentle wake for a pleasant wake up experience
- Digital tuning with preset stations for extra convenience

### **Design that blends into your interior**

- Aluminum cabinet

# PHILIPS


# Highlights

## Weekday/ weekend alarm



Designed with modern day lifestyles in mind, this clock radio has a dual alarm feature, allowing you to set different alarm times for weekdays and weekends or even vary the alarm settings for couples. The alarm settings can be tailored for the same alarm times for the entire week from Monday to Sunday. Or you can set the alarm for an early start on weekdays from Monday to Friday, and lazy lie-ins for Saturday and Sundays. Whichever you choose, this convenient features saves you from the hassle of fiddling with different alarm times every single night.

## Play & charge your iPod/iPhone

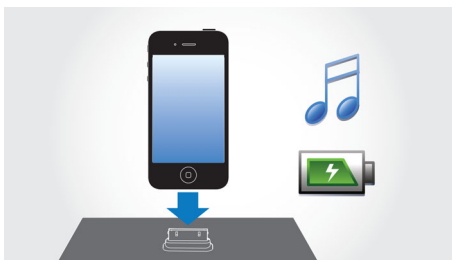

Enjoy your favorite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

## Wake up to iPod/iPhone/radio

Wake up to your iPod/ iPhone music or radio tunes

## Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## 10W RMS



This Philips music system has 10W RMS total output power. RMS refers to Root Mean

Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

## Digital Sound Control




Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



# Specifications

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS

## iPod compatibility

- Compatible with: iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32GB, iPod classic, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod 5th generation, iPod mini

## Audio playback

- Docking playback modes: fast forward and backward, next and previous track, play and pause

## Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- Antenna: FM antenna, FM fixed pigtail antenna
- Tuner enhancement: auto digital tuning, auto scan

## Convenience

- Alarms: buzzer alarm, radio alarm, repeat alarm (snooze), dual alarm
- Backlight color: white
- Clock: Digital, sleep timer
- Display type: LCD display
- Charging device: iPhone, iPod

## Sound

- Sound system: stereo
- Volume control: up/down
- Sound enhancement: digital sound control,

- Dynamic Bass Boost
- Output power: 2 x 5 W

## Loudspeakers

- No. of built-in speakers: 2
- Speaker types: bass reflex speaker system

## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Power supply: 120V, 60Hz
- Power type: AC Input

## Dimensions

- Master carton dimensions: 325 x 223 x 305 mm
- Gross weight: 2.1 kg
- Master carton quantity: 2
- Master carton weight: 5 kg
- Packaging width: 310 mm
- Packaging height: 139 mm
- Packaging depth: 208 mm
- Weight: 1.6 kg
- Main unit depth: 165 mm
- Main unit height: 78 mm
- Main unit width: 263 mm

## Accessories

- Cables/Connection: MP3 Link cable
- Remote control
- Others: Quick start guide, User Manual
- Warranty: Warranty Certificate



Issue date 2014-02-12

Version: 2.1.4

12 NC: 8670 000 61233  
UPC: 6 09585 18744 3

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)