



Philips  
Original radio

with 30-pin connector  
for iPod/iPhone  
FM  
10W



ORD7100R



## The original radio

Let this Philips Original radio complete your listening experience. Designed in the style of the iconic 1955 Philips radio, it plays and charges iPods and iPhones, and comes with a stereo FM tuner.

### Enrich your sound experience

- High fidelity sound
- Play and charge your iPod/iPhone simultaneously
- FM stereo tuner
- Bass Reflex Speaker System delivers a powerful, deeper bass

### Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronization with iPod/iPhone when docked
- Audio-in for easy portable music playback

### Contemporary retro design


- Contemporary reinterpretation of the iconic Philetta design

# PHILIPS

Original radio  
with 30-pin connector for iPod/iPhone, FM, 10W

## Highlights

### Play & charge your iPod/iPhone

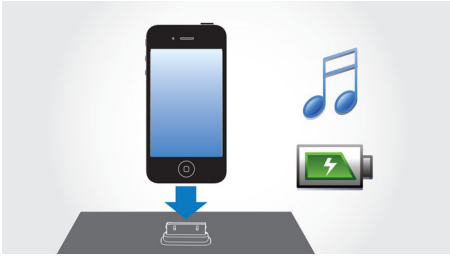

Enjoy your favorite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

### Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

### Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

### Auto clock synchronization



When connect and dock, this docking system will automatically synchronize the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

### AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

ORD7100R/37

## Specifications

### iPod compatibility

- Compatible with: iPod touch, iPod touch 2nd Generation, iPod classic, iPod nano 3rd Generation, iPod nano 4th Generation, iPod 5th Generation, iPod with color display, iPod nano, iPod mini, iPod nano 1st Generation, iPod nano 2nd Generation

### iPhone compatibility

- Compatible with: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

### iPod/iPhone App

- App name: HomeStudio, Free download from App store
- Compatibility: Dock radio for iPod/iPhone, iPod Touch, iPhone
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer
- Radio: FM radio, preset, scan, tune

### Audio Playback

- Playback mode: Charging iPod, Charging iPhone

### Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: (FM) 87.5-108 MHz
- Station presets: 20
- Auto digital tuning

### Connectivity

- Audio in (3.5mm)
- Antenna: FM antenna (75 ohm)

### Convenience

- Display Type: LED white

### Sound

- Sound System: Stereo
- Volume control: rotary (digital)

### Loudspeakers

- Built-in speakers: 2

### Power

- Power type: AC input

### Dimensions

- Product dimensions (WxDxH): 325 x 175 x 167 mm
- Packaging dimensions (WxDxH): 390 x 250 x 247 mm

### Accessories

- Included accessories: AC power cord (VDE & UK), User Manual, Warranty certificate



Issue date 2017-05-04

Version: 5.0.5

12 NC: 8670 000 94851  
UPC: 6 09585 22930 3

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)