

Philips  
Soundbar speaker

2.1 CH wireless subwoofer  
Bluetooth® aptX, AAC and NFC  
1 HDMI in & HDMI out ARC  
Only 29.8mm slimness



HTL6140S



# Powerful sound for any TV

with wireless subwoofer

At just 2.98cm thick, the Philips HTL6140 is a super flat Soundbar that can be mounted anywhere. Boasting 320W of power and a 220W 8" subwoofer it sounds much bigger than it looks and it streams music over Bluetooth® with aptX® and AAC.

## Richer sound for watching TV and movies

- Powerful 320W sound output
- 8" woofer for thumping bass
- Premium soft dome tweeters for Crystal Clear Sound
- Dolby Digital and DTS for great surround sound
- Virtual Surround Sound for a realistic movie experience

## Connect and enjoy all your entertainment

- HDMI ARC to access all the sound from your TV
- Connect to one HDMI in for great picture and sound quality
- Bluetooth® (aptX® and AAC) for wireless music streaming
- One-Touch with NFC-enabled smartphones for Bluetooth pairing

## Designed to enhance your living space

- 2.98cm slimness
- Wireless subwoofer for clutter free placement
- Minimalistic chic design to suit a modern decor

**PHILIPS**

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness

# Highlights

### Powerful 320W sound output




6 neodymium woofers and 2 premium soft dome tweeters, which produce crystal clear high tones, ensure premium quality sound. Their total output is 320W, which is matched with a powerful 8" 220W subwoofer. The HTL6140 is not just extremely thin, it sounds extremely good.

### Premium soft dome tweeters


With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

### Bluetooth® (aptX® and AAC)

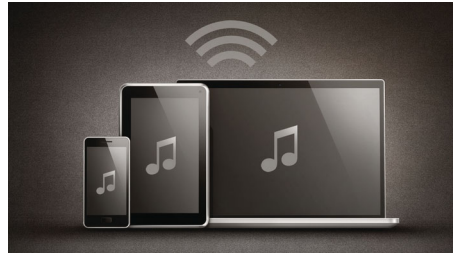

Bluetooth® (aptX® and AAC) for wireless music streaming

### NFC technology

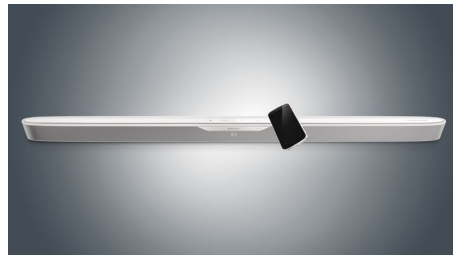

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

### Dolby Digital and DTS

Go digital and get the most out of your music and movies. Even stereo music sounds great


HTL6140S/12

because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

### One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output to the connection in your non-3D AV receiver.

### Virtual Surround Sound

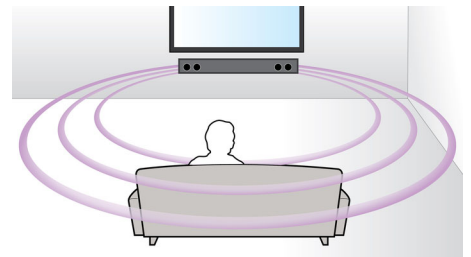

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness

HTL6140S/12

# Specifications

### Sound

- Sound Enhancement: Treble and Bass Control, Audio sync, Auto Volume Leveler, Virtual Surround Sound
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220W
- Speaker output power: 100W
- Total Power RMS @ 10% THD: 320 W

### Loudspeakers

- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Soundbar: 2X 1" soft dome tweeters, 6 X 2" neodymium woofers

### Connectivity

- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC
- Integrated Connections: Bluetooth APT-X, NFC

### Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

### Power

- Power supply: 110-240V, 50Hz
- Standby power consumption: <0.5 W

### Dimensions

- Main Unit (W x H x D): 1046X71.6X30 mm
- Subwoofer (W x H x D): 208 x 301 x 403 mm

### Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, Wall mount bracket

### Design

- Wall mountable

### Packaging dimensions

- EAN: 87 12581 71555 7
- Packaging dimensions (W x H x D): 110 x 31.4 x 35.5 cm
- Gross weight: 12.7 kg
- Nett weight: 7.8 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 4.9 kg
- Type of shelf placement: Laying

### Outer Carton

- EAN: 87 12581 71555 7
- Gross weight: 12.7 kg
- Outer carton (L x W x H): 110 x 35.5 x 31.4 cm
- Nett weight: 7.8 kg
- Number of consumer packagings: 1
- Tare weight: 4.9 kg

### Product dimensions

- Product dimensions (W x H x D): 104.6 x 7.16 x 3 cm
- Weight: 1.5 kg



Issue date 2022-06-03

Version: 10.1.3

12 NC: 8670 001 13183  
EAN: 87 12581 71555 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)