



Philips
Portable speaker

Grey



SBA1710



Mobile speaker

Pumping out larger-than-life sound, Philips SBA1710 speakers come complete with a handy mobile stand that ensures they're incredibly easy to use!

Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- 4W RMS total output power

Designed for grab and go

- Music on the go
- Up to 8 hours music playback

Simplicity

- Battery powered for portability
- Compatible with any media

PHILIPS
sense and simplicity

Portable speaker
Grey

Specifications

Product dimensions

- Product dimensions (W x H x D):
13,2 x 7,7 x 9,9 cm
- Product dimensions (W x H x D):
5,2 x 3,0 x 3,9 inch
- Weight: 0,283 kg
- Weight: 0,624 lb

Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

Design and finishing

- Color: Grey

Sound

- Impedance: 4
- RMS Power rating: 4 W
- Frequency response: 200Hz – 20KHz (+/- 3 dB)

Power

- Operating time on battery: 8 hr
- Battery type: 4 x AA (not included)

Outer Carton

- Gross weight: 1,873 kg
- Gross weight: 4,130 lb
- GTIN: 1 69 23410 71552 8
- Outer carton (L x W x H): 13,0 x 8,3 x 6,0 inch
- Outer carton (L x W x H): 33 x 21 x 15,2 cm
- Nett weight: 2,787 lb
- Nett weight: 1,264 kg
- Number of consumer packagings: 4
- Tare weight: 1,343 lb
- Tare weight: 0,609 kg


Packaging dimensions

- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D):
16 x 14 x 10 cm
- Packaging dimensions (W x H x D):
6,3 x 5,5 x 3,9 inch
- EAN: 69 23410 71552 1
- Gross weight: 0,437 kg
- Gross weight: 0,963 lb
- Nett weight: 0,697 lb
- Nett weight: 0,316 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,266 lb
- Tare weight: 0,121 kg

SBA1710/00

Highlights

Class D Digital Amplifier

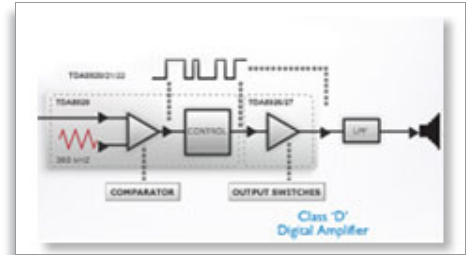

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

4W RMS total output power



RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

Up to 8 hours music playback



Enjoy music playback for up to 8 hours on a single charge.

Music on the go

Enjoy the convenience of playing music the way you want - play it out loud through the mobile speaker.



Issue date 2013-02-12

Version: 4.0.13

12 NC: 8670 000 88784
EAN: 69 23410 71552 1

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com