



Philips Prestigo
Universal remote control

Touch 15-in-1

PRESTiGo



SRT8215



Total control simplified

Full functionality with only the keys you need

It's time to put away all those remote controls! The Prestigo SRT8215 controls up to 15 devices in one and presents the keys you need, easily accessible via the LCD touch screen. Set up your Prestigo via computer and enjoy your home entertainment.

Intuitive navigation

- Easy access to specific functions via the 5.6-cm LCD screen
- Full-colour touch screen for easy navigation
- Backlit buttons to control your devices in the dark

Fast, easy access to your entertainment

- Activities to control multiple devices
- Direct access to your favourite channels

Simple and easy setup

- Easy computer setup in a few simple steps, on Windows or Mac
- Software updates via Internet
- Control any device of almost any brand



asimpleswitch.com



asimpleswitch.com

PHILIPS

sense and simplicity

Highlights

Control virtually any device



The Prestigo infrared code database with over 300,000 devices allows you to control virtually every device on the market today, regardless of model or brand. Via the computer setup, the correct infrared code will be selected for your devices in the database.

Easy access via LCD screen



A 5.6-cm (176 x 220 pixels) full-colour LCD display provides high resolution quality and easy readability. The touch-sensitive screen shows only the keys you need and allows you to navigate quickly through the remote screen.

Activity-based control

Start your home entertainment activities with one touch of a button instead of controlling each individual device in separate steps. Simply press the activity button like 'Watch a movie' and the Prestigo will automatically switch on the different devices, such as the TV, DVD player and Home theatre system, to watch a movie.

Future Proof




The Philips Configo software automatically informs you about online updates for your Prestigo. The Configo software will download the updates and take care of the installation.

Easy computer setup



Connect your Prestigo remote to your PC or Mac via USB for an easy computer setup in your language. Customise any functionality in a few simple steps.

Backlit keys

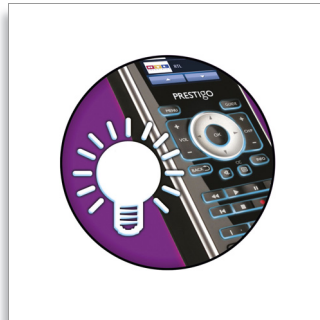

The illuminated keypad makes it easy to control all your devices, even in the dark.

Direct favourite channel access

Channel icons for most countries' main TV and radio stations can be installed on your remote control. Once set, you zap easily to your favourite channels using the stations' icons instead of pressing the digit buttons on your remote.

Specifications

Accessories

- USB cable: 1.2 m

Convenience

- Backlight buttons
- Battery low indication
- Display Type: LCD
- Number of activities: 15
- Number of devices: 15
- Online updates: available
- On-Screen Display languages: Danish, Dutch, English, Finnish, French, German, Greek, Italian, Norwegian, Portuguese, Russian, Spanish, Swedish
- Programmable channel icons: 100
- Supported devices: AMP, Audio system, Blu-ray player, CABLE, CD/MD, DVB-T/S, DVD, DVD recorder, DVD-VCR combo, DVDR-HDD combo, Digital Media Receiver, Game console, HD-DVD player, HTS, Hard Disk recorder, Home Theatre, MP3 Player Dock, Minidisc, PC, Projector (IR), RECEIVER, SAT, TAPE, TV, TV-DVD combo, TV-VCR combo, TV-VCR-DVD combo, Tuner, VCD, Laser Disk, VCR

Display

- Touch panel

Infrared Capabilities

- Learning IR codes
- Operating distance: 33 ft (10 m)

Power

- Batteries included

Setup

- Setup Method: PC Setup



Issue date 2013-03-03

Version: 2.0.13

12 NC: 8670 000 58083
EAN: 87 12581 51497 6

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com