# Register your product and get support at www.philips.com/welcome



# Thank you for choosing Philips.

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable. If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/welcome or call I-888-PHILIPS (744-5477) while with your product. (and Model / Serial number)



Philips vous remercie de votre confiance.

### Besoin d'une aide rapide?

Le Guide rapide de début et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre probléme, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/welcome ou formez le I-800-661-6162 (Francophone) I-888-PHILIPS (744-5477) (English speaking) Veillez à avoir votre produit à portée de main. (et model / serial nombre)



Lea primero la Guía rápida del comienzo o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips. Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/welcome o llame al teléfono I-888-PHILIPS (744-5477) y tenga a mano el producto. (y número de model / serial)



# User manual



# Contents

1	<b>Important</b> Safety	2
	Important Safety Instructions	2
2	Your Docking System for	
	Android™	3
	Introduction	3 3
	What's in the box	
	Overview of the docking system	4
3	Get started	6
	Connect power	6
	Turn on	6
	Switch to standby mode	6
	Select a source	6
4	Play and charge	7
	Compatible with Android™	7
	Play audio through manual Bluetooth	
	connection	7
	Play audio through auto Bluetooth	
	connection with Philips DockStudio	8
	Install DockStudio app onto	
	Android-powered device	9
	Activate Bluetooth with	
	DockStudio app	11
	Sync time automatically	14
	Play audio with Philips Songbird	14
	Install Songbird on Android-	
	powered device	14
	Install Songbird on PC	16
	Sync with PC through Philips	
	Songbird	16
	Use more features with DockStudio	17
	Set alarm timer	17
	Set sleep timer	18
	Listen to Internet radio	19
	Dock and charge Android-powered	
	phone	20
	Dock Android-powered phone	20
	Use dock extension	20
	Charge Android-powered phone	21

5	Listen to FM radio	22
	Tune to FM radio stations	22
	Store FM radio stations automatically	22
	Store FM radio stations manually	22
	Select a preset radio station	22
6	Other features	23
	Set time	23
	Set alarm timer	23
	Set alarm	23
	Select alarm source	23
	Activate/deactivate alarm timer	23
	Snooze alarm	23
	Set sleep timer	23
	Play audio from an external device	24
	Adjust display brightness	24
7	Product information	25
	Specifications	25
	Amplifier	25
	Tuner	25
	General information	25
8	Troubleshooting	26
	About Bluetooth device	26
9	Notice	27
	RSS	27
	Disposal of your old product	27

# 1 Important

# Safety

### Important Safety Instructions

- 1 Read these instructions.
- (2) Keep these instructions.
- 3 Heed all warnings.
- (4) Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- (8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- (9) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (10) Only use attachments/accessories specified by the manufacturer.

 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing.
- (15) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- (16) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

# 2 Your Docking System for Android™

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

## Introduction

With this docking system, you can:


- enjoy audio from your Android-powered device;
- charge your phone through micro USB connector;
- listen to FM radio;
- wake up to buzzer alarm, radio, or audio in your device; and
- experience a variety of features brought by Philips DockStudio and Philips Songbird app.


# What's in the box

Check and identify the contents of your package:

- Main unit
- Power adapter
- Dock extension
- MP3 link cable x 1
- Quick start guide

# Overview of the docking system

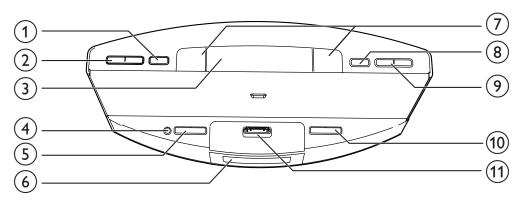

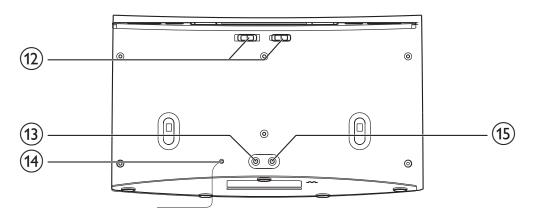

### (1) SET TIME/PROG

- Set clock.
- Store FM radio stations.

### 2 PRESET ▲ / ▼

- Select a preset radio station.
- Adjust hour and hour format.

### 3 SNOOZE/BRIGHTNESS

- Snooze alarm.
- Adjust display brightness.
- ④ ७
  - Turn the docking system on or off .
  - Switch the system to standby mode.
- 5 SOURCE
  - Select a source: FM tuner, Bluetooth device, or MP3 link.

### 6 Display panel

• Show current information.

## 7 AL1/AL2

- Set alarm.
- View alarm settings.
- Activate or deactivate alarm timer.
- 8 SLEEP
  - Set sleep timer.
- 9 TUNING · I◄ / ►►I
  - Tune to FM radio stations.
  - Adjust minute.
- (10) VOLUME +/-
  - Adjust volume.
- (1) Dock for Android phone
  - Dock your Android-powered phone.

### (12) AL1/AL2 RADIO BUZZ DOCK

• Select alarm source for Alarm 1 or Alarm 2.

### (13) MP3 LINK

• Connect an external audio device.

### (14) FM ANTENNA

• Improve FM reception.

### 15 DC IN

• Connect power.

### 3 Get started

Always follow the instructions in this chapter in sequence.

# Connect power

### Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the device.
- Risk of electric shock! When you unplug the power adapter, always pull the plug from the socket. Never pull the cord.




### Note

• The type plate is located on the bottom of the docking system.

Connect the power adapter to:

- the **DC IN** socket of the docking system.
- the wall socket.

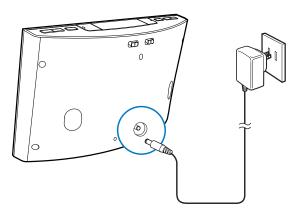

# Turn on

Press U.

→ The docking system switches to the last selected source.

## Switch to standby mode

Press & again to switch the docking system to standby mode.

→ [OFF] appears, and then the clock (if set) is displayed.

## Select a source

Press **SOURCE** repeatedly to select a source: Bluetooth, FM tuner, or MP3 link.



### Note

 When an android-powered device is docked, the system automatically switches to Bluetooth mode.

## Play and charge 4

With this docking system, you can enjoy audio in two ways:

- through manual Bluetooth connection;
- through automatic Bluetooth connection with **Philips DockStudio** app.

# Compatible with Android<sup>™</sup>

To make full use of your docking system, your Android-powered device should satisfy the following requirements:

- With Android operation system (Version 2.1 or above);
- With Bluetooth software (Version 2.1 or above); and
- With a micro USB connector.

For other devices with micro USB connector and Bluetooth function, you can still use the docking system to do the the following:

- Charge your device through the USB connector:
- Enjoy audio through Bluetooth.

· For more details, go to www.philips.com/flexidock.


# Play audio through manual **Bluetooth** connection

The docking system uses Bluetooth wireless technology to stream music from your portable device to the system.




### Note

- Before you connect a Bluetooth device to this docking system, familiarize yourself with the Bluetooth capabilities of the device.
- Keep this docking system away from other electronic devices that may cause interference.
- 1 On your docking system, press & to activate Bluetooth.
  - → The Bluetooth indicator **\*** blinks on the display panel.
- 2 Turn on Bluetooth function of your portable device.
  - Different devices may have different way to activate Bluetooth.

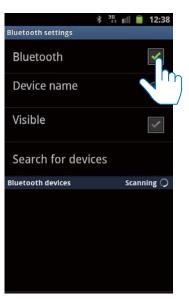


Tip

**3** Scan Bluetooth devices that can pair with your portable device.

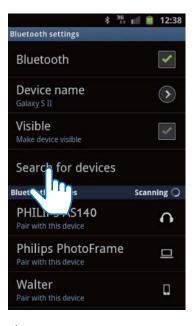

- 4 When [PHILIPS AS140] is displayed on your device, select it to start connection.
  - If connection is successful, you will hear double beep confirmation and find a different Bluetooth icon on the top of the screen.

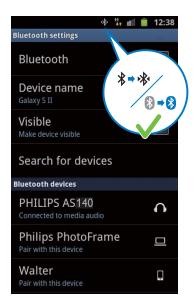

5 Play audio with the media player of your portable device.



→ The audio comes out through the docking system.

# 🔆 Тір

- The effective operation range between the docking system and the paired device is approximately 10 meters (30 feet).
- Any obstacle between the system and the device can reduce the operational range.

# Play audio through auto Bluetooth connection with Philips DockStudio

Philips DockStudio app brings a suite of new features to your docking system, including automatic Bluetooth connection, Songbird music player, Internet radio and a multi-function alarm clock. To enjoy more features, you are recommended to download and install the free app.

## Install DockStudio app onto Androidpowered device

You have two ways to install **Philips DockStudio** on your Android-powered device.

### Install DockStudio app through QR code



- Make sure that your Android-powered device is connected to the Internet.
- Make sure that your device has a barcode scanner such as "QR Droid". If not, download one from the Android market.
- 1 Use the barcode scanner to scan the QR code on the package or Quick Start Guide.



2 Follow the on-screen instructions to install **Philips DockStudio** app.



 \*\*\*\*
 9
 October 1, 2011

 500+ downloads
 Size: 8.62MB

### DESCRIPTION

The Philips DockStudio app brings a suite of cool, new features to your Philips DockStudio docking speaker, including automatic Bluetooth connection, Songbird music player, worldwide Internet radio, sound settings

worldwide internet radio, sound settings

**3** When installation is complete, tap **[Done]** (done).



→ The **DockStudio** icon appears on your portable device.



### Install DockStudio app through Android Market

You can also search **Philips DockStudio** in the Android Market directly, and then install the app.

=	Note
---	------

- Make sure that your Android-powered device is connected to the Internet.
- Make sure that Android Market is available on your Android-powered device.

1 Tap the "Android Market" icon on your device.



2 Tap the search icon on the screen.



- 3 In the search bar, type in "Philips DockStudio" to search the app.
- 4 From the search result list, find and tap **Philips DockStudio** to start downloading.

5 Follow the on-screen instructions to install the **DockStudio** app.



### DESCRIPTION

The Philips DockStudio app brings a suite of cool, new features to your Philips DockStudio docking speaker, including automatic Bluetooth connection, Songbird music player, worldwide Internet radio, sound settings

6 When installation is complete, tap **Done** (done).



### Activate Bluetooth with DockStudio арр

Philips DockStudio app helps to connect your Android-powered device and docking system through Bluetooth automatically.



### Note

Make sure that your Android-powered device is connected to the Internet.

### **First-time launch**

- 1 On your docking system, press Φ repeatedly to select Bluetooth source.  $\rightarrow$  \* blinks on the display panel.
- 2 On the home screen of your device, tap the **DockStudio** icon to launch the app.



→ A prompt message asking you to download Songbird appears.

## **3** Tap [Cancel] (cancel).



→ The device starts to scan Philips devices that can be paired automatically.



- 4 When [PHILIPS AS140] is displayed on your device, select it to start connection.
  - → It may take a few seconds to complete the connection.



→ After Bluetooth connection, a different Bluetooth icon can be found on the top of the screen.



English

5 Play audio with the media player of your portable device.



→ The audio comes out through the docking system.

### Next-time launch


Next time you launch the **DockStudio** app, connect to the docking system through Bluetooth as below.

1 Activate the Bluetooth function of your docking system.

2 Launch Philips DockStudio and access its menu.



**3** Tap **[Speaker Connection]** (Speaker Connection) to activate automatic Bluetooth connection.

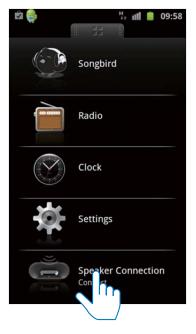


→ It may take a few seconds to complete the connection.

- 4 Play audio on your portable device.
  - → The audio comes out through the docking system.

### Sync time automatically

After you activate Bluetooth connection through **Philips DockStudio**, the docking system synchronizes time with your Bluetooth-enabled device automatically.



# Play audio with Philips Songbird

**Philips Songbird** is a simple, easy-to-use PC program and Android app. It lets you discover, play and sync your media from PC to your Android-powered devices seamlessly.

# Install Songbird on Android-powered device

1 Tap the **DockStudio** icon on your Androidpowered device.



→ The **DockStudio** menu is displayed.



# 2 Tap [Songbird].




- → You are requested to download **Songbird**.
- **3** Follow the on-screen instructions to download the app.




→ Songbird is installed on your device.

4 After installation, tap [Open] (Open) to access Songbird menu.

English

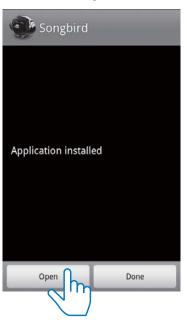

5 Select a track, and then tap  $\blacktriangleright$  to play music.

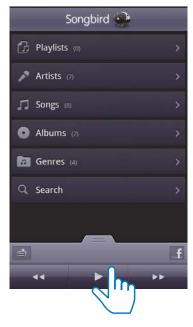



## Install Songbird on PC

- 1 Go to www.philips.com/songbird.
- 2 Search Songbird.

songbird

Q


- **3** Download the latest **Songbird** application.
- 4 Follow on-screen instructions to install **Philips Songbird** on your PC.

# Sync with PC through Philips Songbird

Note

• Make sure that you have turned on the USB storage.

- 1 On your PC, launch Philips Songbird.
- 2 Connect your Android-powered device to PC with a USB cable. Wait until the device is recognized by the **Songbird**.
  - → On Philips Songbird, the device is displayed when it is recognized by the PC.

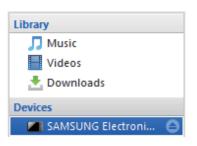

➡ If it is the first time you connect the device to Philips Songbird, a pop-up screen appears. Select auto sync as prompted.

Name:	SAMSUNG Electronics Co., Ltd. Samsung Android U
Auto	omatically sync music to this device
	lips Songbird will automatically sync media to this device each time you connect r whenever there's a change to your library.
🗌 Igno	ore this device
On	ly select if you do not want Philips Songbird to manage this device

➡ The device synchronizes with Philips Songbird automatically.

If you didn't select auto sync, you can sync with **Songbird** manually.

**1** Select the device under **Devices**.



Manual

2 Select Manual or Auto.

Audio Syncing:

Sync

- 3 Click Sync.
  - ➡ If you have selected auto sync, auto sync starts automatically when you connect the device to the PC.

Auto

# Use more features with DockStudio

With **Philips DockStudio**, you can also listen to Internet radio, set alarm timer and sleep timer.


## Set alarm timer

With **Philips DockStudio**, you can set multiple alarms and know the latest weather. It even alerts you when weather conditions are suitable for your favorite outdoors activity.

1 Launch the app.



2 Tap the icon **\*** to access clock setting menu.

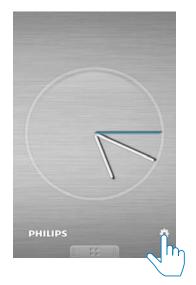

**3** Tap **[Alarm settings]** (Alarm settings).



4 Tap + to access alarm setting menu.

5	Alarm Settings	+
🗮 Alar 05:1-	m 1 4	
T Ala	arm 2 :17	
Alar	rm 3 4	
	a co a	

- 5 Set the alarm, and tap [Save] (Save) on the top right of the screen.
  - → The new alarm is saved and displayed on the screen.

Cancel /	Marm	Setti	ngs	SA	VE
Time			(	05:11	>
Repeat			1	Never	>
Sound			Fores	t Asia	>
Snooze					
Label			Ala	rm 1	>
Lifestyle		π	Exce	llent	>
Image					>

## - Note

 From the [Lifestyle] (Lifestyle) tab, you can select your preferred sport and weather (excellent, good, or fair). The alarm will not ring if the weather is not good enough.

### Set sleep timer

1 Launch Philips DockStudio.



2 Tap the icon 🌣 to access the sleep timer menu.



**3** Select a time period for the sleep timer, and then tap **[Start]** (Start).

5	Sleep Timer
🗸 10m	nin
15m	nin
20m	nin
30m	nin
45m	nin
60	×
	Start

### Note

• This function only works with **Philips Songbird**.

### Listen to Internet radio

- 1 Connect your Android-powered device and the docking system through Bluetooth.
- 2 Open Philips DockStudio to go to the main menu.

**3** Tap **[Radio]** (Radio) on the screen.



Search a radio station in the search bar.




- 5 Select a radio station from the search result list.
  - $\mapsto$  The radio station begins to broadcast.

# Dock and charge Androidpowered phone


## Dock Android-powered phone

To charge your Android-powered phone, you need to dock it in the docking system first.


1 Check the orientation of the micro USB connector on your Android-powered phone.

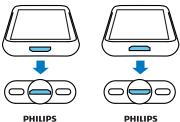


→ If your USB connector has a cover, flip it outwards.

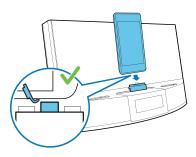


2 If necessary, rotate the USB connector on the docking system, and then place your Android-powered phone into the dock.

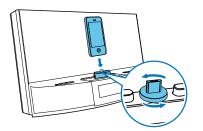

3 Adjust the bumpers on both sides of the connector to stabilize the phone.

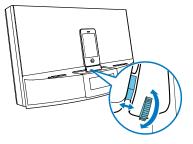

4 Slide the connector to place your phone in the middle of the docking system.

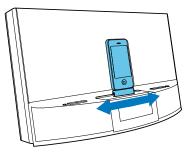





If the micro USB connector is located at the top, and your are using Android system of version 2.3 or above, screen auto-rotation is available.

## Use dock extension

If the USB connector on your phone is close to the edge, the supplied dock extension can balance the docked phone, as illustrated.

1 Adjust the slide knobs to make both bumpers at the lowest position.

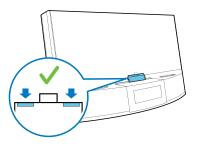

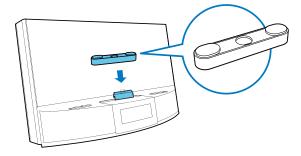

**3** Dock your phone.

## Charge Android-powered phone

When the docking system is connected to power, your docked phone starts charging automatically even in standby mode. 5 Listen to FM radio

# Tune to FM radio stations

# 🔆 Тір

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.
- 1 Press **SOURCE** repeatedly to select FM tuner source.
- Press and hold I ◄ / ▶ I for two seconds.
   The docking system tunes to a station with strong reception automatically.
- **3** Repeat step 2 to tune to more radio stations.

### To tune to a station manually:

Press I < / ▶▶I repeatedly until you find optimal reception.</li>

# Store FM radio stations automatically



• You can store a maximum of 20 FM radio stations.

In tuner mode, press an hold **PROG** for two seconds.

➡ The docking system stores all the available FM radio stations and broadcasts the first available station automatically.

# Store FM radio stations manually

- **1** Tune to an FM radio station.
- 2 Press PROG.
  - $\mapsto$  The preset number begins to blink.
- 3 Press  $\blacktriangle$  /  $\blacktriangledown$  repeatedly to select a number.
- 4 Press **PROG** again to confirm.
- 5 Repeat steps 1 to 4 to store other stations.

## Note

• To remove a pre-stored station, store another station in its place.

# Select a preset radio station

In tuner mode, press  $\blacktriangle$  /  $\blacktriangledown$  repeatedly to select a preset number.

# 6 Other features

# Set time

- 1 Press & to switch the docking system to standby mode.
- 2 Press and hold **SET TIME** for two seconds.
  - → The hour and minute digits begin to blink.
- 3 Press ▲ / ▼ and I < / ▶▶ repeatedly to set the hour and minute.</p>
- 4 Press SET TIME to confirm.
   → [12H] or [24H] begins to blink.
- 5 Press  $\blacktriangle$  /  $\blacktriangledown$  to select 12/24 hour format.
- 6 Press SET TIME to confirm.→ The set time is displayed.

# Set alarm timer

### Set alarm

In standby mode, you can set two alarms to ring at different time.



- Make sure that you have set the clock correctly.
- 1 Press and hold AL1/AL2 for two seconds to activate alarm setting mode.
  - → The hour and minute digits begin to blink.
- 2 Press ▲ / ▼ and I < / ▶▶ repeatedly to set the hour and minute.</p>
- **3** Press AL1/AL2 to confirm.

## Select alarm source



• For alarm sound, you can select buzzer, your last listened radio chanel, or the latest played track in your Android-powered device.

### Adjust AL1/AL2 RADIO BUZZ DOCK

control to select alarm source for both alarms.

you have docked your device into the docking system.



• If DOCK is selected as alarm source, make sure that

## Activate/deactivate alarm timer

- **1** Press **AL1/AL2** to view alarm settings.
- 2 Press AL1/AL2 again to activate or deactivate the alarm timer.
  - → The alarm icon appears if alarm timer is on and disappears if it is off.
  - To stop the ringing alarm, press the corresponding AL1/AL2.
  - → The alarm repeats ringing for the next day.

### Snooze alarm

When alarm sounds, press **SNOOZE**.

→ The alarm snoozes and repeats ringing nine minutes later.

# Set sleep timer

This docking system can switch to standby mode automatically after a preset period. Press **SLEEP** repeatedly to select the sleep timer period (in minutes).

→ When the sleep timer is activated, **z**<sup>Z</sup> appears.

### To deactivate the sleep timer

Press **SLEEP** repeatedly until **[OFF]** (off) appears.

# Play audio from an external device

You can listen to audio from an external device through this device.

- 1 Connect the MP3 link cable to:
  - the MP3 LINK socket.
  - the headphone socket of an external device.
- 2 Press SOURCE repeatedly to select MP3 link source.
  - $\mapsto$   $\frown$  is displayed.
- **3** Play audio in the external device (see the device's user manual).

# Adjust display brightness

Press **BRIGHTNESS** repeatedly to select different brightness levels.

# 7 Product information

Dimensions	
- Main Unit	290 x 160 x 113 mm
$(W \times H \times D)$	
Weight	
- With Packing	2.0 kg
- Main Unit	1.4 kg

English

### Note

Product information is subject to change without prior notice.

# Specifications

Amplifier	
Rated Output Power	2 X 5W RMS
Tuner	
Tuning Range	FM: 87.5 - 108 MHz
Sensitivity	
- Mono, 26dB S/N Ratio	FM: <22 dBf
Search Selectivity	FM: <28 dBf
Total Harmonic Distortion	FM: <2%
Signal to Noise Ratio	FM: >55 dB

## General information

Model: A\$180-070-
AA250; Input: 100-240
V ~, 50/60Hz, 0.7A;
Output: 7V === 2.5A
<35 W
<1 W
5V === 1A

# 8 Troubleshooting

### Warning

• Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

### No sound or poor sound

- Adjust the volume of your docking system and Android-powered device.
- Make sure that your Android-powered device is connected to the docking system through Bluetooth.

### Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

### Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.

### Alarm does not work

• Set the clock/alarm correctly.

# About Bluetooth device

# Music playback is unavailable on the system even after successful Bluetooth connection.

• The device cannot be used with the system to play music.

# The audio quality is poor after connection with a Bluetooth-enabled device.

• The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.

### Cannot connect with the system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device.
   Disconnect that device or all other connected devices and then try again.

# The paired device connects and disconnects constantly.

- The Bluetooth reception is poor: Move the device closer to the system or remove any obstacle between the device and the system.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

# 9 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

### Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

# RSS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The set complies with the FCC-Rules, Part 15. Operation is subject to the following two conditions:

1.This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

# Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# Register online at www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. **Register online at www.philips.com/welcome** to ensure:

### \*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer.

## \*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special moneysaving offers.

# PHILIPS

Congratulations on your purchase, and welcome to the "family!"

### Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS.You've selected one of the best-built, best-backed products available today.We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to register online at:

www.philips.com/welcome

## Know these



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION**: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No.\_ Serial No.

## **PHILIPS**

Visit our World Wide Web Site at http://www.philips.com/welcome

### PHILIPS LIMITED WARRANTY ONE (1) YEAR

### WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

#### WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

### WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

#### WHAT IS NOT COVERED - EXCLUSIONS AND LIMI-TATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

#### This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

#### TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at: 1-888-PHILIPS (1-888-744-5477)

### TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking) 1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CON-SUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDEN-TAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PROD-UCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

#### Philips, P.O. Box 10313 Stamford, CT 06904

3140 035 50201

Philips Consumer Lifestyle A division of Philips Electronics North America Corporation P.O. Box 10313 Stamford, CT 06904 Phone: 1-888-PHILIPS (744-5477)

Meet Philips at the Internet http://www.philips.com/welcome



Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved.



AS140\_37\_CCR\_V1.0