



Philips
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback
USB2.0 Media Link
DivX Plus HD

BDP1380

Enjoy the 3D experience at home

With Blu-ray 3D

Stunning 3D effect and 1080p up-conversion provide the picture depth and action that leap off the screen and draw you deep into the viewing experience, even on DVD!

Engage more

- Enjoy all your movies and music from CD and DVD
- USB 2.0 plays video/music from USB flash/hard disk drive
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles


PHILIPS

Blu-ray Disc/ DVD player
3D Blu-ray Disc playback USB2.0 Media Link, DivX Plus HD

BDP1380/55

Highlights

Enjoy movies and music

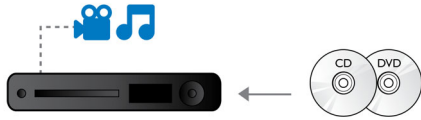

Enjoy all your movies and music from CD and DVD

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.


DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips

HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

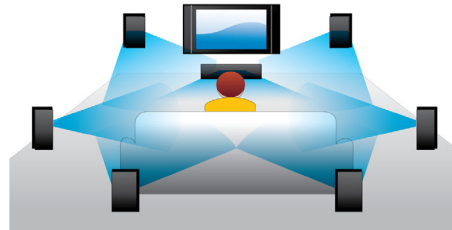

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect

picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Subtitle Shift



Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off. In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.



Specifications

Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 4
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

Convenience

- BD-Live(1GB USB memory needed)

- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB
- On-Screen Display languages: Mexican Spanish

Power

- Power consumption: 11 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 1W

Dimensions

- Packaging (W x H x D): 315 x 81 x 259 mm mm
- Product (W x H x D): 270 x 42 x 193 mm
- Product weight: 0.982 kg
- Weight incl. Packaging: 1.39 kg

Accessories

- Included accessories: 2 x AAA Batteries, HDMI cable, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Brazilian Portuguese, Mexican Spanish

Product dimensions

- Product dimensions (W x H x D): 27 x 4.2 x 19.31 cm
- Weight: 0.982 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.5 x 8.1 x 25.9 cm
- Gross weight: 1.39 kg
- Nett weight: 1.16 kg
- Tare weight: 0.23 kg
- EAN: 48 95185 60905 8

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.5 x 25.9 x 8.1 cm
- Gross weight: 1.39 kg
- Nett weight: 1.16 kg
- Tare weight: 0.23 kg
- EAN: 48 95185 60905 8



Issue date 2015-09-03

Version: 2.1.6

12 NC: 8670 001 25556
EAN: 48 95185 60905 8

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com