



Philips
5.1 Home theater

DVD
Karaoke

HTD3510

Powerful surround sound from compact speakers

Home theater sound

Pump up your home entertainment experience with the Philips home theater. Exposed speaker drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- DivX Ultra Certified for enhanced DivX video playback
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies
- Plays DVD, VCD, CD and USB devices
- Karaoke for endless singing entertainment at home
- Audio in to enjoy music from iPod/iPhone/MP3 player

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS
sense and simplicity

5.1 Home theater
DVD Karaoke

HTD3510/98


Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Dolby Digital

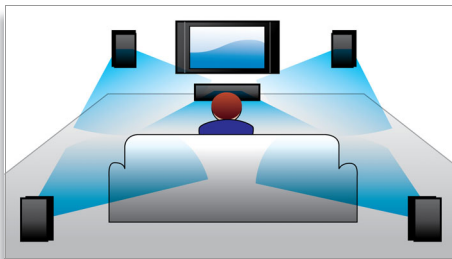

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke for endless singing



Karaoke for endless singing entertainment at home



Specifications

Sound

- Sound System: Dolby Digital 5.1
- Cube speaker output power: 5 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode

Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

Picture/Display

- Picture enhancement: Video upscaling

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Picture Enhancement: Rotate, Zoom
- Picture Compression Format: BMP, GIF, JPEG, TIFF

File Format

- Picture: JPEG, BMP, GIF
- Audio: mp3, wma
- Video: avi, divx, mpeg, mpg

Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Audio in
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, Fixed FM Antenna

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play,

- One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Power

- Power consumption: 50 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: HDMI cable, Power cord, 1 x AAA Battery, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual
- Compatible accessories: STS3001 Speaker stand

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Center Speaker Weight: 0.26 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Front Speaker Weight: 0.26 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker Weight: 0.26 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Subwoofer cable length: 2 m
- Subwoofer Weight: 2.82 kg

Outer Carton

- EAN: 87 12581 67854 8
- Gross weight: 7.6 kg
- Outer carton (L x W x H): 47 x 37.7 x 34.5 cm
- Nett weight: 6.5 kg
- Number of consumer packagings: 1
- Tare weight: 1.1 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 47 x 34.5 x 37.7 cm
- EAN: 87 12581 67854 8
- Gross weight: 7.6 kg
- Nett weight: 6.5 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.1 kg
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 36 x 5.8 x 33.5 cm
- Weight: 2.15 kg



Issue date 2013-04-18

Version: 4.0.2

12 NC: 8670 001 00426
EAN: 87 12581 67854 8

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.