



Philips
Digital tuning clock radio

FM, Digital tuning

20 presets
Dual alarm
Plug and set

AJ7000

Start your day, your way!

wake to your favorite radio tune

This stylish Philips clock radio looks nice and wakes you in time. It has built-in FM radio and gives you a choice of waking up to your favorite station or the buzzer.

Start the day your way

- Digital tuning with preset stations for extra convenience
- Gentle wake for a pleasant wake up experience
- Dual alarm to wake you and your partner at different times
- Repeat alarm for additional snooze

Easy to use

- Sleep timer for easy falling asleep to your favorite music
- Adjustable display brightness for comfort viewing
- Time and alarm backup for on-time wakeup even with power cut
- Plug and set the time automatically

Design that blends into your interior

- Aluminum cabinet for quality look and feel

PHILIPS

Digital tuning clock radio
FM, Digital tuning 20 presets, Dual alarm, Plug and set

AJ7000/37


Highlights

Aluminum cabinet



Aluminum die casting is lightweight and can withstand the higher temperatures environments, they offer high strength and rigidity along with good corrosion resistance.

Digital tuning with presets

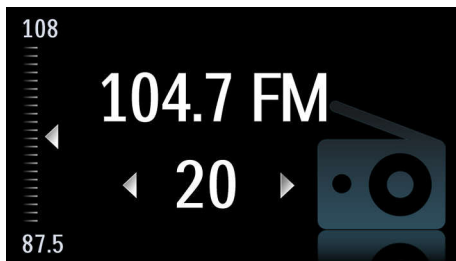

Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to

wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

Repeat alarm



To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.


Plug and set

Take the clock out of its box, plug it in and the time is already set for you - automatically. The intelligent clock reads preprogrammed data and sets the correct time according to the default time zone. If you are living outside the default time zone, all you have to do is press the Time zone button and the clock will reset the time. No more reading manuals, no more fiddling with buttons.

Time and alarm backup


When there is a power failure, this intelligent clock will still maintain and keep its reliable time and your settings. The scheduled alarm remains active even when its display is off - all thanks to a pre-installed battery. When the power comes back on, there is no need to adjust the clock or reinstate settings. More amazingly, even if power supply is not restored, the battery provides enough energy for the buzzer to go off at the alarm time you have set - making sure you never wake up late.

Dual alarm

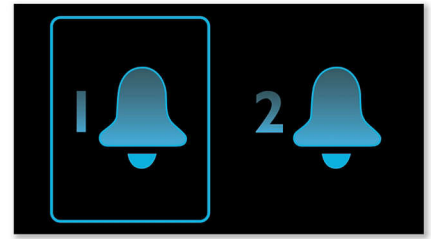

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

Sleep Timer

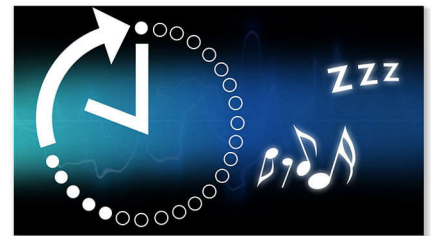

Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.

Digital tuning clock radio
FM, Digital tuning 20 presets, Dual alarm, Plug and set

AJ7000/37

Specifications

Sound

- Sound System: Mono
- Volume Control: rotary

Tuner/Reception/Transmission

- Tuner Bands: FM, Digital tuning

Convenience

- Alarms: Buzzer Alarm, Radio Alarm, Sleep timer, dual alarm, Snooze
- Display Type: LCD
- Clock Enhancements: Backup Clock, DST, Time zone
- Clock/Version: Digital, Analog
- Display enhancements: brightness control

Power

- Battery type: CR2032 (backup)

- Mains power: AC adaptor, 110-127V input
- Number of batteries: 1

Accessories

- Included accessories: User Manual, Warranty certificate, AC power adaptor

Dimensions

- Product depth: 42 mm
- Weight incl. Packaging: 0.5 kg
- Weight: 0.4 kg
- Product width: 134 mm
- Product height: 112 mm
- Packaging height: 148 mm
- Packaging width: 159 mm
- Packaging depth: 114 mm



Issue date 2024-04-01

Version: 3.0.4

UPC: 6 09585 21411 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com