



Philips
Micro music system

Bluetooth® aptX, AAC and NFC
USB port for charging



BTB7150

Rich and powerful sound

Obsessed with sound

Great sound from any source with this Philips BTB7150 micro system. Hi-Fi dome tweeters bring you detailed and natural sound. You can even stream your music in high quality via Bluetooth with aptX and NFC One Touch easy pairing

Enrich your sound experience

- 150W RMS maximum output power
- Treble and Bass Control for easy high and low tone settings
- Gold-plated speaker connector for finest signal transmission

Enjoy your music from multiple sources

- Wireless music streaming via Bluetooth with Aptx support
- DAB and FM compatible for a complete radio experience
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback

Easy to use

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Motorised CD loader for convenient access

PHILIPS


Micro music system
Bluetooth® aptX, AAC and NFC USB port for charging

Highlights

Bluetooth with AptX support


Wireless music streaming via Bluetooth with AptX support

DAB and FM compatible

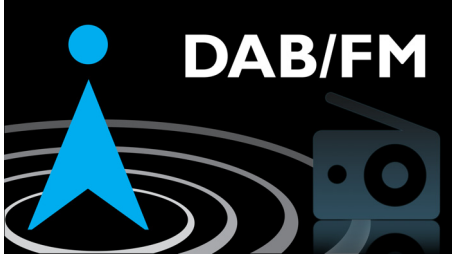

DAB (Digital Audio Broadcasting) digital radio is a new way of broadcasting radio, in addition to FM analogue transmission, via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear, crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

NFC technology

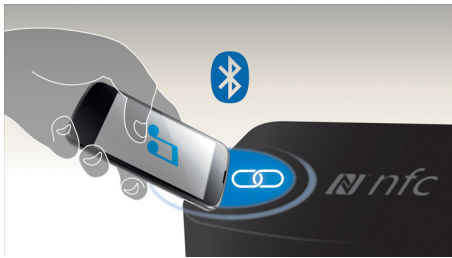

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

Treble and Bass Control

Treble and bass are equalizer features that control the high and low frequency sound levels of your audio respectively. Treble specifically regulates the amplification of the high tones in the music, while bass controls the amplification level of the low tones. Using the up and down keys, the listener can conveniently place more or less emphasis on the low and high tones, or leave treble and bass flat to play back music according to its original recorded setting. Treble and Bass Control lets you listen to your music the way you like it.



Issue date 2015-06-22

Version: 3.0.3

12 NC: 8670 001 06704
EAN: 08 71258 16977 78

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

BTB7150/10

Specifications

Sound

- Maximum output power (RMS): 150 W
- Sound Enhancement: Treble and Bass Control

Loudspeakers

- Main Speaker: 2-way
- Loudspeaker types: Dome tweeter

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, USB flash drive
- Disc Playback Modes: Repeat/one/all/programme, Shuffle Play, 20-Track Programmable, Fast Forward/Reverse, Next/Previous Track Search
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- RDS: Programme Type, Station Name, RDS Clock Set
- Station presets: 20
- Antenna: FM antenna, FM antenna (75 ohm)
- DAB/DAB+: Band III, Info display, Menu, Smart scan

Connectivity

- 3.5 mm stereo line in: Audio in
- Rear Connections: DAB antenna
- Bluetooth: Bluetooth V2.1, Support Aptx code c
- Bluetooth profiles: A2DP, AVRCP

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display, sleep timer
- Display Type: VFD display
- Eco Power Standby: 0.5 watt
- Indications: DIM mode
- Display type: VFD display
- USB Charging: 1 A

Accessories

- Included accessories: AC Power Cord, FM antenna
- Remote control
- User Manual: Multi-language

Dimensions

- Packaging dimensions (W x H x D): 330 x 309 x 589 mm
- Main unit depth: 240 mm
- Main unit height: 145 mm
- Main unit width: 230 mm
- Main speaker dimensions (W x H x D): 173 x 261 x 241 mm
- Gross weight: 10.6 kg
- Net weight: 9.4 kg

Power

- Power supply: 110-240V, 50/60 Hz

Gold-plated speaker connector



The gold-plated speaker connector ensures better audio signal transmission compared to traditional click-fit connections. It also minimises the electrical signal loss from the amplifier to the speaker box, resulting in sound reproduction that's as close to reality as possible.

Audio-in



The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Power

- Power supply: 110-240V, 50/60 Hz