

Philips
Classic micro music system



MCM206

Obsessed with sound

Relax with great music

Good sound is yours to have with the Philips Classic micro music system. Play back your favourite MP3/WMA music using the USB Direct or MP3 Link. Elegantly designed speakers for a classic look that won't go out of style.

Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- MP3 Link for portable music playback
- Digital tuning with preset stations for extra convenience

Enrich your sound experience

- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 10 W RMS total output power

Easy to use

- Motorised CD loader for convenient access

PHILIPS

Highlights

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

USB Direct



With the USB Direct mode, you can simply select the music on a USB device and play back all your content. All you have to do is plug in your USB device to play back music or export content from the device.

Digital tuning with presets

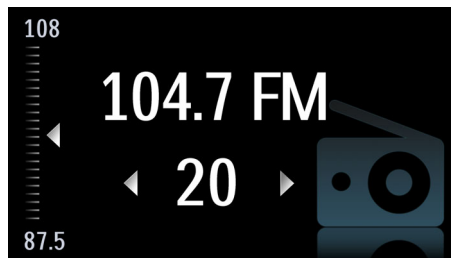

Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

Specifications

Sound

- Output power (RMS): 2 x 5 W
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control

Loudspeakers

- Main Speaker: 3.5" woofer, Bass Reflex Speaker System

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Disc Playback Modes: Repeat/one/all/programme, Shuffle Play, 20-Track Programmable, Fast Forward/Reverse, Next/Previous Track Search
- Loader Type: Motorised, Tray
- USB Direct Modes: Play/Pause, Stop, Previous/Next, Fast Reverse/Fast Forward, Programme Play, Repeat, Shuffle
- ID3-tag support

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Auto digital tuning
- Station presets: 30
- Tuner Enhancements: Auto Store

Connectivity

- Other connections: FM fixed pigtail antenna, MW Antenna
- Headphones: 3.5 mm
- USB: USB host
- 3.5 mm stereo line in: MP3 Link

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display
- Display Type: LCD
- Eco Power Standby: 1 watt

Accessories

- Included accessories: AC-DC Adapter, World Wide Warranty leaflet
- Remote control: 31-key remote
- Quick start guide: English, German, Dutch, French, Spanish, Portuguese
- User Manual: Dutch, English, French, German, Greek, Portuguese, Spanish
- Cables: MP3 line-in cable

Dimensions

- Set dimensions (W x H x D): 152 x 228 x 222 mm
- Main speaker dimensions (W x H x D): 146 x 232 x 140 mm
- Packaging dimensions (W x H x D): 370 x 330 x 275 mm
- Weight incl. Packaging: 4.4 kg

Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2013-05-10

Version: 1.1.4

12 NC: 8670 000 52733
EAN: 87 12581 48377 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com