




Philips
Original radio

DAB+, FM

Audio-in
10W

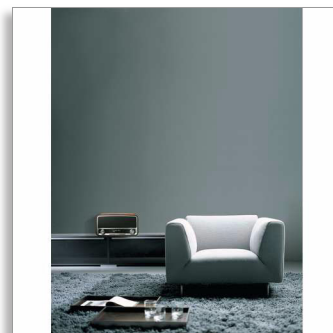

OR7200



The original radio

Bring on good times with this Philips Original radio. 50s charm borrowed from the Philips' 1955 radio design combine with great audio performance, giving you powerful bass via Bass Reflex Speaker System, and crystal clear DAB+ and FM radio.

High fidelity radio experience

- High-quality stereo sound for better music enjoyment
- Bass Reflex Speaker System delivers a powerful, deeper bass

Enjoy digital quality DAB+ radio

- DAB+ and FM compatible for a complete radio experience
- DAB for clear and crackle-free radio experience

Easy to use

- Large backlit LCD display for easy viewing in low light
- Built-in clock display
- Audio-in for easy portable music playback

Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

PHILIPS

Original radio
DAB+, FM Audio-in, 10W

Highlights

DAB



DAB (Digital Audio Broadcasting) digital radio is, on top of FM analog transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can be found. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no returning on the move.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The

system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Large backlit LCD display



Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

OR7200/10

Specifications

Tuner/Reception/Transmission

- DAB: smart scan, menu, info display
- Tuner bands: FM, DAB (Band III)
- Station presets: 30 (DAB), 30 (FM)
- Auto digital tuning
- Frequency range: (FM) 87.5-108 MHz

Connectivity

- Audio in (3.5mm)
- Antenna: FM antenna (75 ohm)

Convenience

- Display Type: LCD

Sound

- Sound System: Stereo
- Volume control: rotary (digital)

Loudspeakers

- Built-in speakers: 2

Power

- Power type: AC input

Dimensions

- Product dimensions (WxDxH): 325 x 175 x 167 mm
- Packaging dimensions (WxDxH): 390 x 250 x 247 mm

Accessories

- Included accessories: AC power cord (VDE & UK), User Manual, Warranty certificate



DIGITALRADIO



Issue date 2014-06-11

Version: 3.0.4

12 NC: 8670 000 93237
EAN: 87 12581 65461 0

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com