



Philips
wireless portable speaker

Bluetooth®

Built-in microphone for calls
Rechargeable battery
2 W

BT100A

Keep your tunes close

Go-anywhere compactness meets great sound and a range of colours. Combined with built-in Bluetooth wireless streaming, the BT100 is ideal for the globetrotting fashionista in everyone.

Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion-free music

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere

Simplicity in use

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth


PHILIPS

wireless portable speaker
Bluetooth® Built-in microphone for calls, Rechargeable battery, 2 W

BT100A/00


Highlights

Wireless music streaming

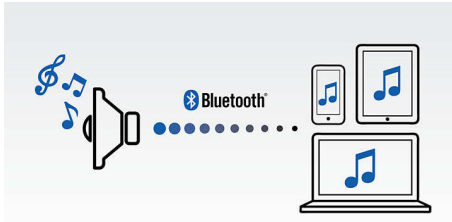

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Anti-clipping function

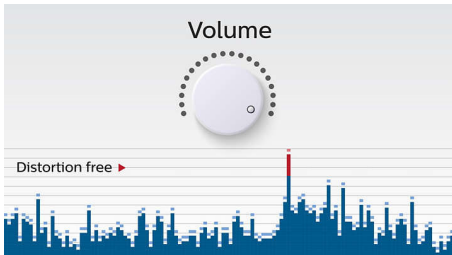

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers

safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



Audio-in for easy connection to almost any electronic device

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

Advanced audio performance

Advanced audio performance with a compact design

Specifications

Sound

- Output power (RMS): 2 W
- Sound System: Mono

Design and finishing

- Colour: Aqua

Loudspeakers

- Speaker driver: 1 x 1.75"

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- USB charging

Convenience

- Built-in microphone: for speaker conference

Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 8 hour(s)

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Weight incl. Packaging: 0.3 kg
- Product dimensions (WxDxH): 63 x 63 x 82 mm
- Packaging dimensions (WxDxH): 99 x 99 x 121 mm
- Product weight: 0.18 kg



Issue date 2024-03-24

Version: 3.0.4

EAN: 87 12581 72068 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com